


### **Boraam Industries**

**ASSEMBLY INSTRUCTIONS** 

SKU: 51824,51924,51929,51829,52924,52929

#### **BROADMOOR SWIVEL STOOL**

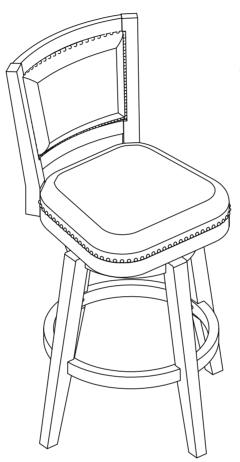



Weight Capacity



Locate the
HARDWARE PACK
which is attached to
the shipping carton
with red tape.

Version 2 / Updated as of 1.2.24



Have questions about assembling your item?



Items or parts damaged?



Missing a part?

#### We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300 877-267-2261



customerservice@ boraamindustries.com



www.boraamindustries.com


Page 1 of 10

## **Assembly And Care**


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.




## **Assembly Overview**

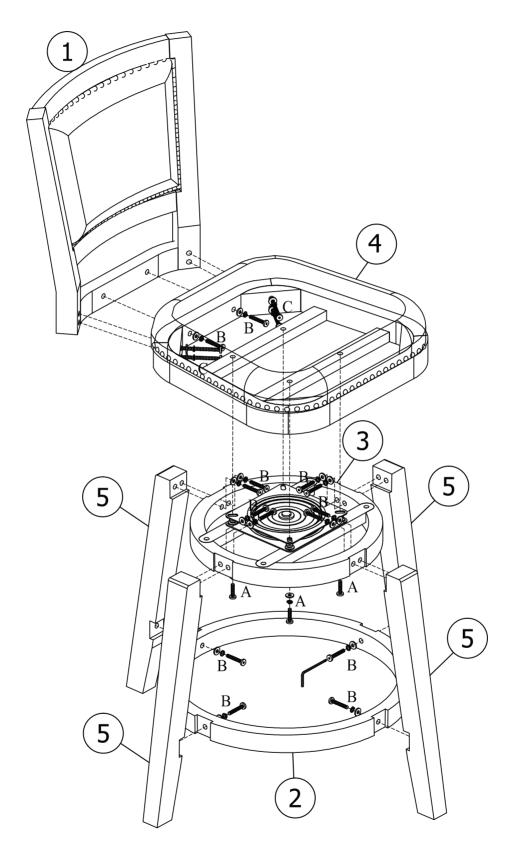


### **PARTS**

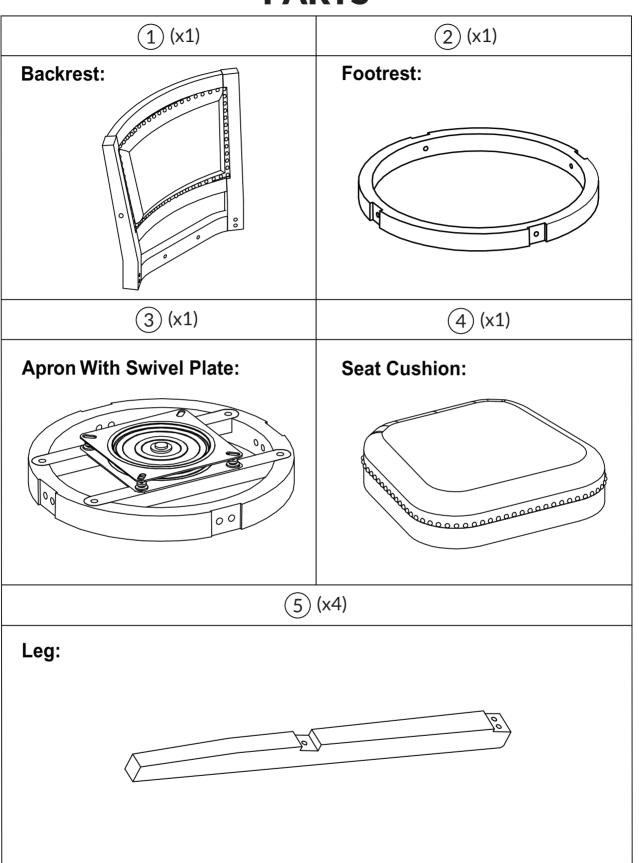

### **HARDWARE**

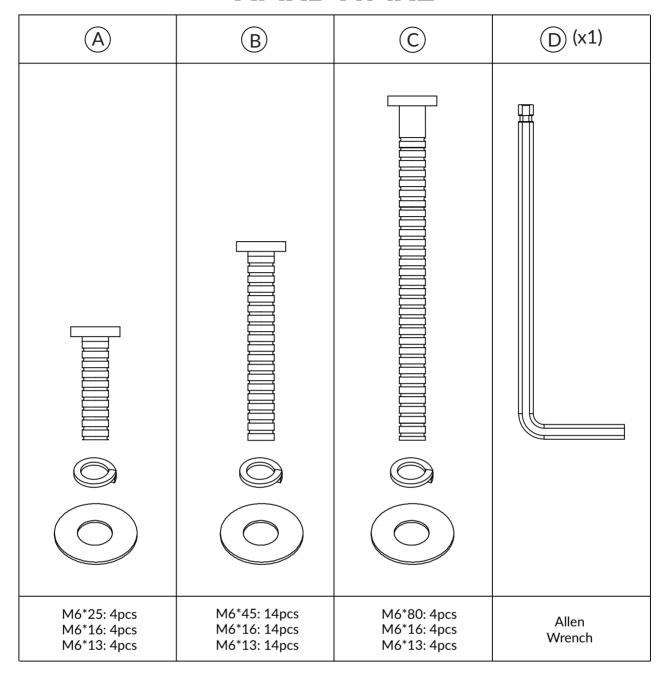




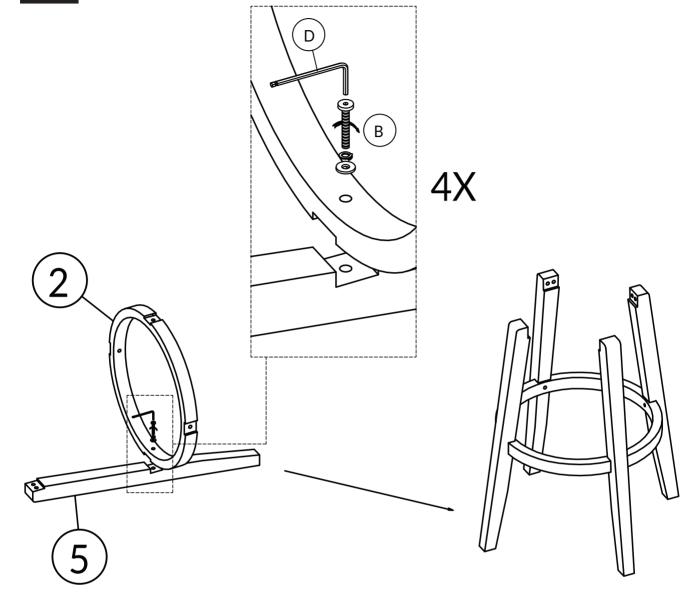

Hardware	Count
В	4
D	1


DO NOT TIGHTEN BOLT COMPLETELY.

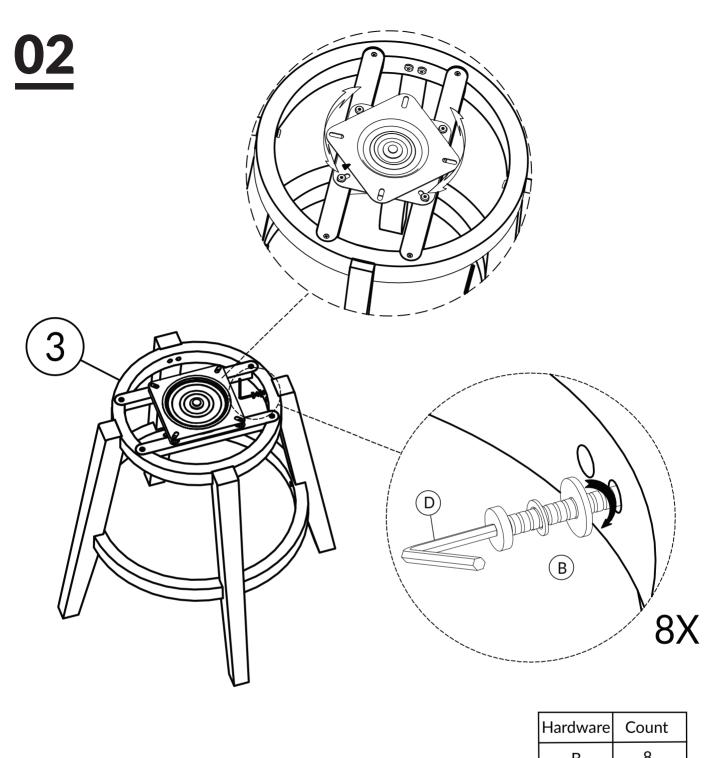

Hardware	Count
В	8
D	1

TIGHTEN BOLT COMPLETELY.


# <u>03</u>

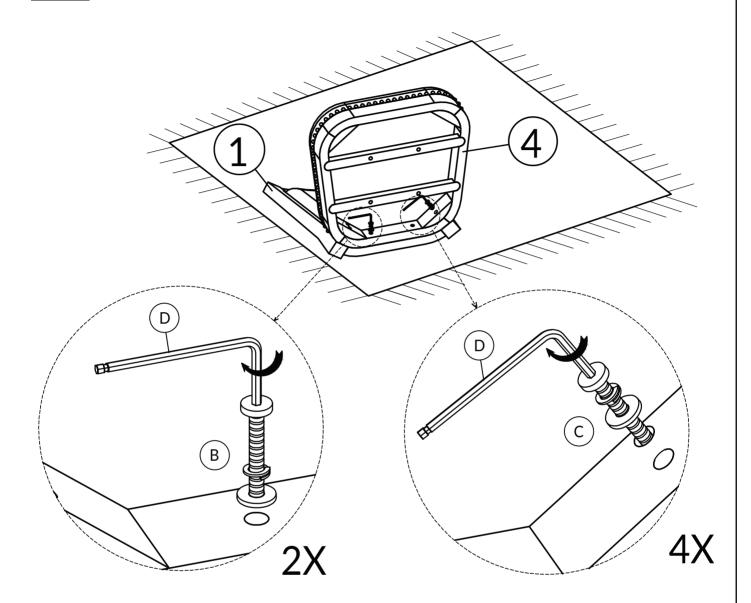

Hardware	Count
В	2
С	4
D	1


TIGHTEN BOLT COMPLETELY.

# <u>04</u>

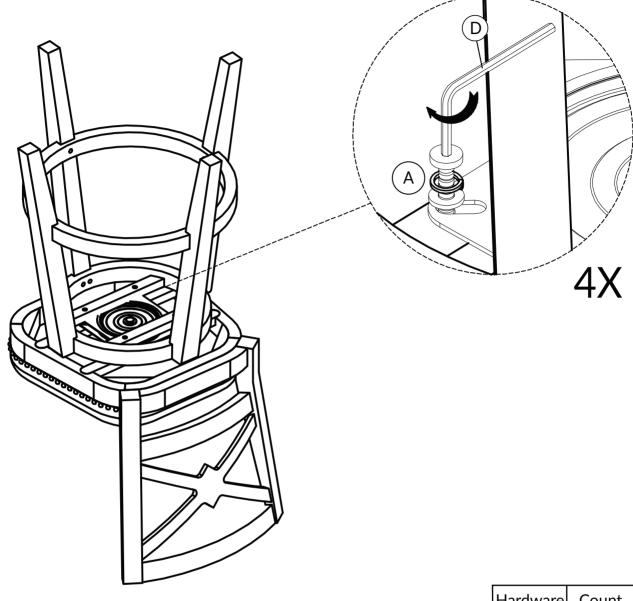

Hardware	Count
Α	4
D	1

TIGHTEN BOLT COMPLETELY.

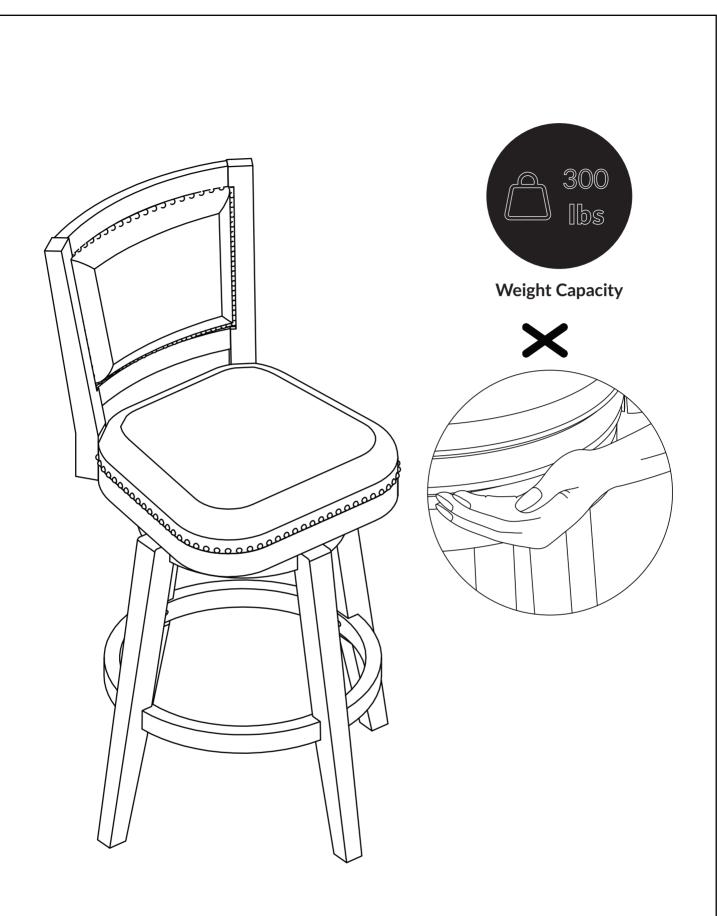

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.