


### **Boraam Industries**

ASSEMBLY INSTRUCTIONS

SKU: 51834,51934,52934

#### **BROADMOOR SWIVEL EXTRATALL BARSTOOL**

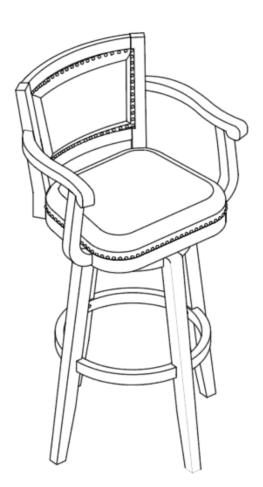



Weight Capacity



Locate the

HARDWARE PACK

which is attached to

the shipping carton

with red tape.

Version 2 / Updated as of 1.2.24



Have questions about assembling your item?



Items or parts damaged?



Missing a part?

#### We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300 877-267-2261



customerservice@ boraamindustries.com



www.boraamindustries.com


Page 1 of 11

### **Assembly And Care**


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.




### **Assembly Overview**

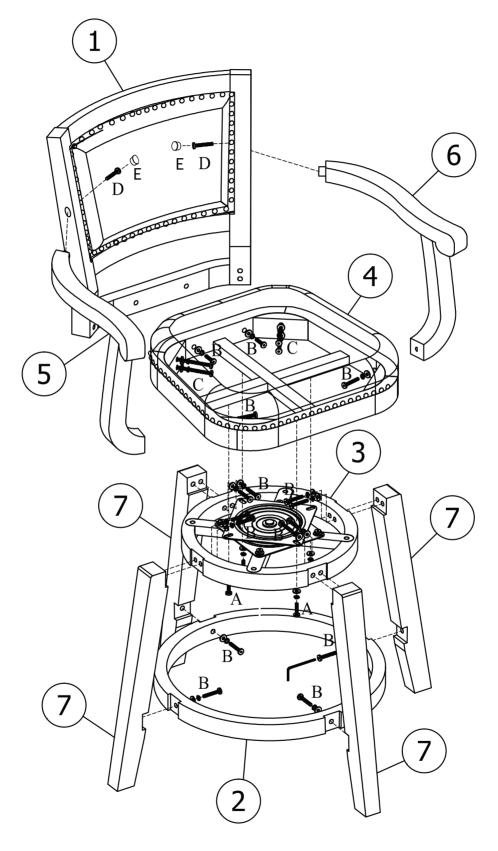


### **PARTS**

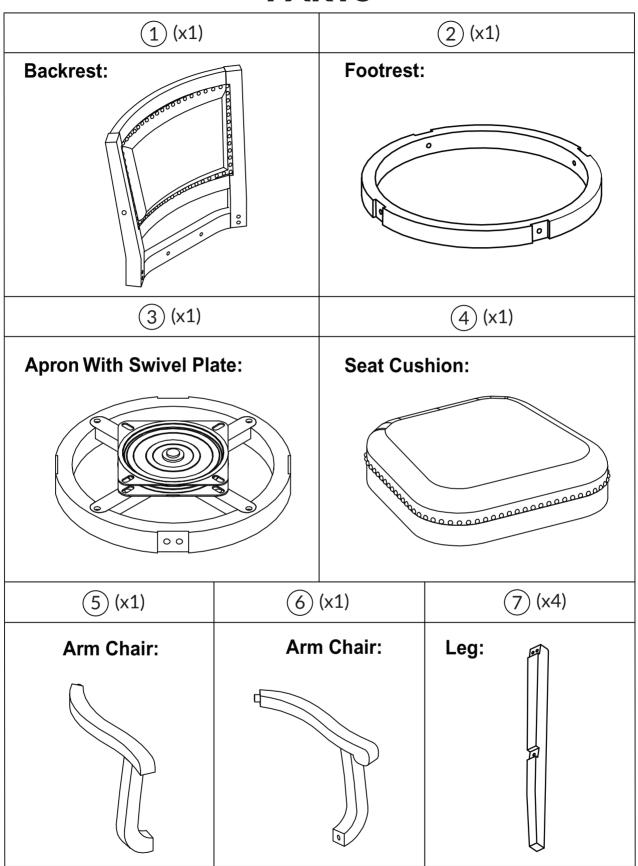


### **HARDWARE**

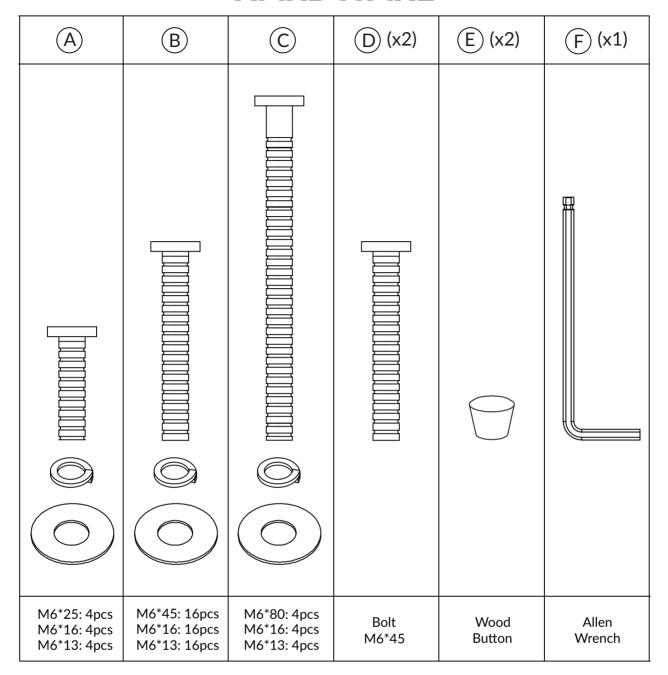

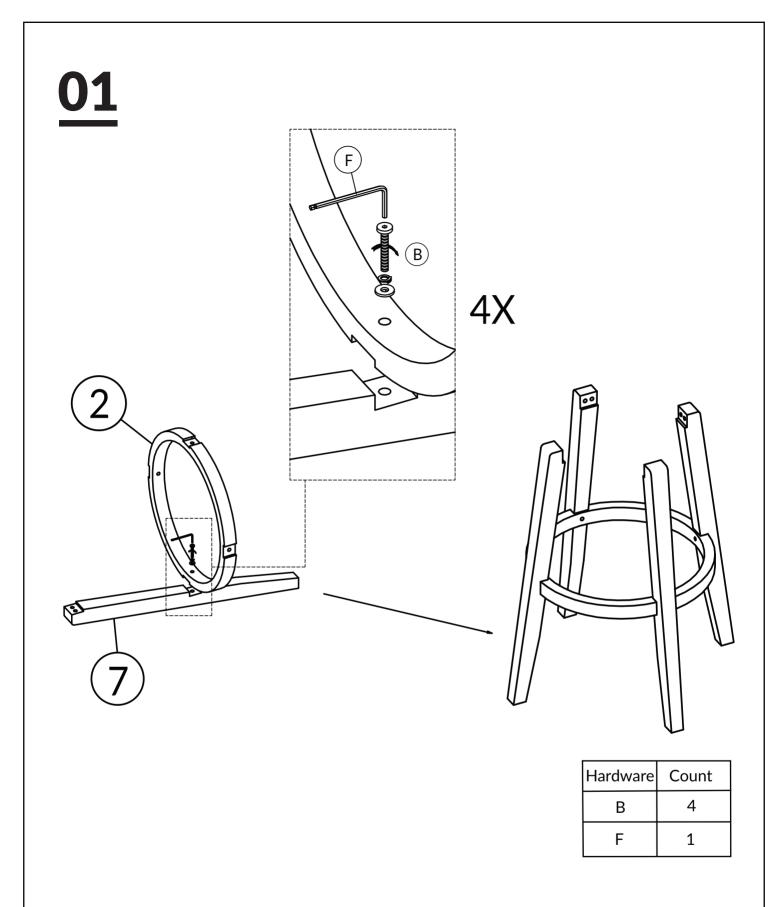


DO NOT TIGHTEN BOLT COMPLETELY.

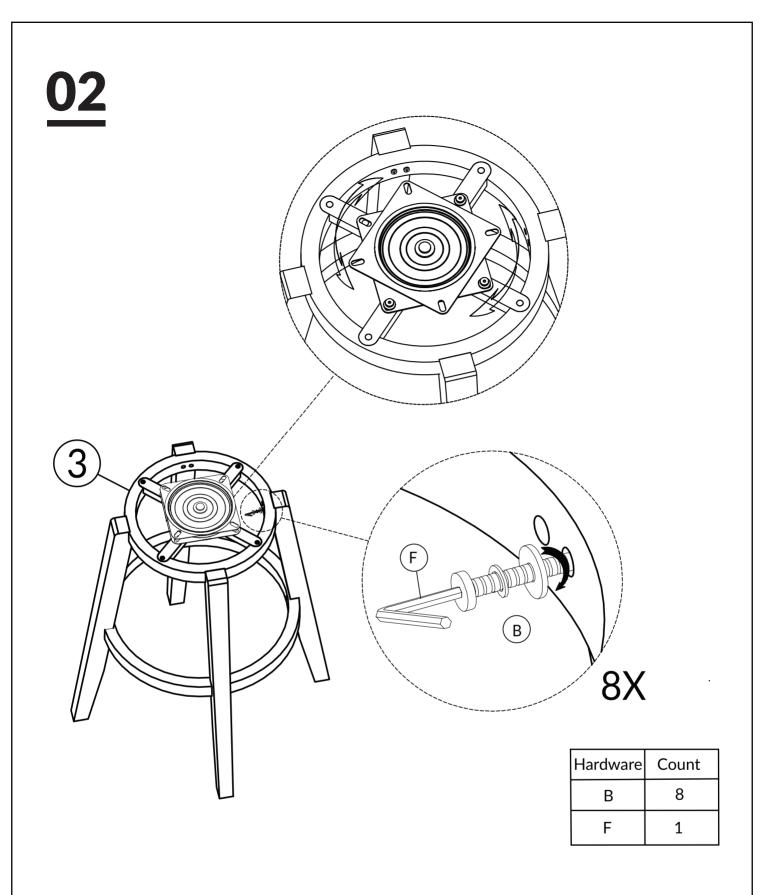


TIGHTEN BOLT COMPLETELY.

## <u>03</u>

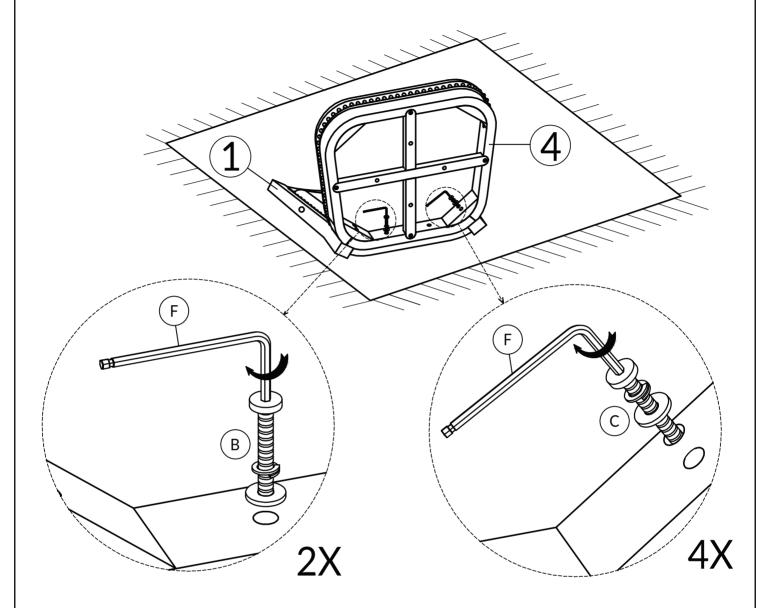

Hardware	Count
В	2
С	4
F	1


TIGHTEN BOLT COMPLETELY.

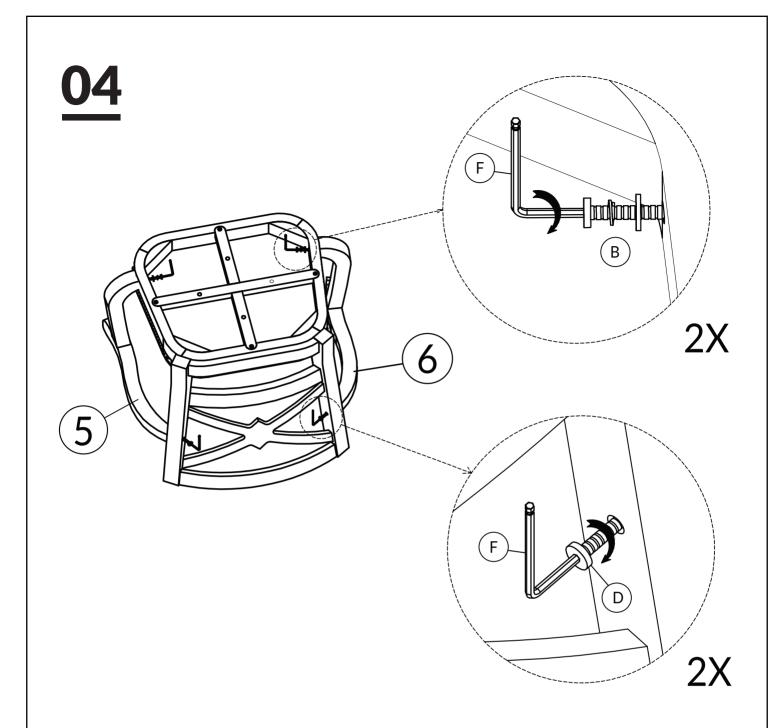


Hardware	Count
В	2
D	2
F	1

TIGHTEN BOLT COMPLETELY.

# <u>05</u>

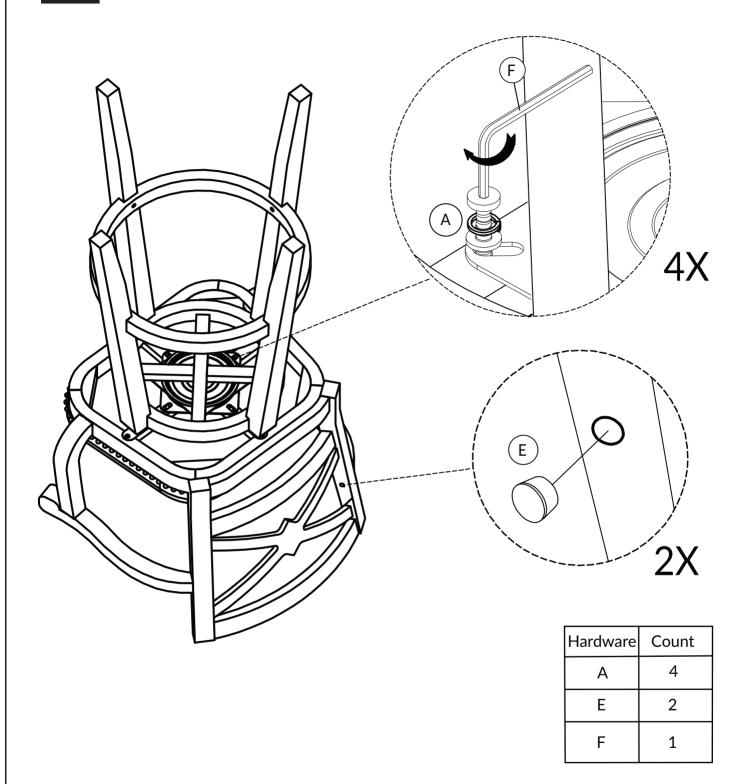

TIGHTEN BOLT COMPLETELY.

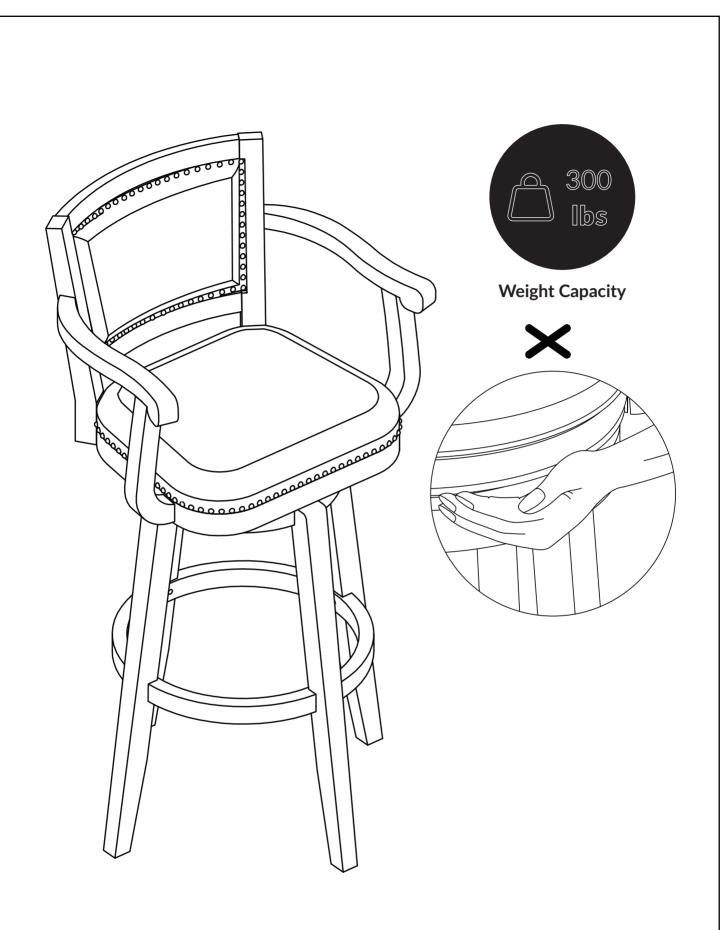

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.