




BORAAM INDUSTRIES
Assembly Instructions
AVERY BOOKCASE


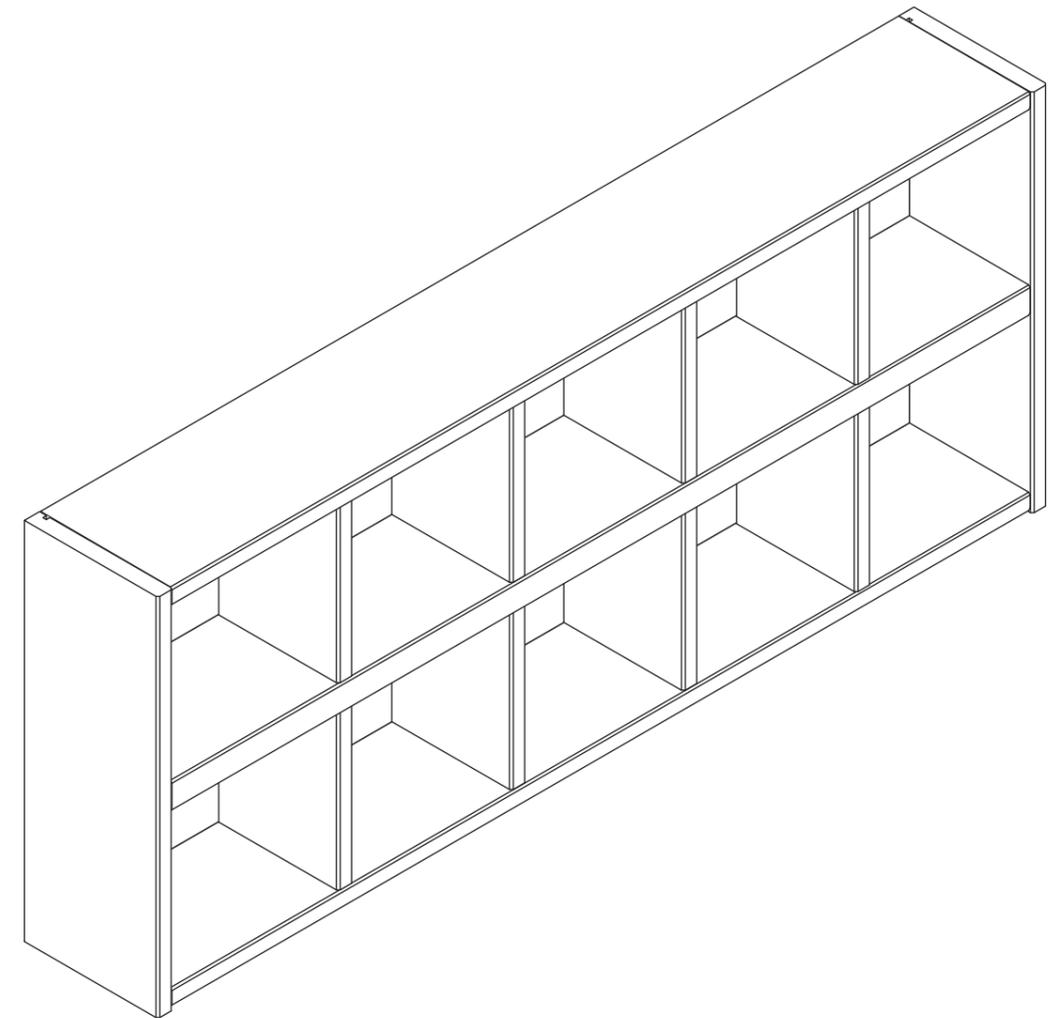


MAKE SURE ALL PARTS ARE INCLUDED PRIOR TO ASSEMBLY

TWO OR MORE PEOPLE HIGHLY RECOMMENDED FOR ASSEMBLY

DO NOT ASSEMBLE IN THE PRESENCE OF CHILDREN

Boraam AVERY BOOKCASE

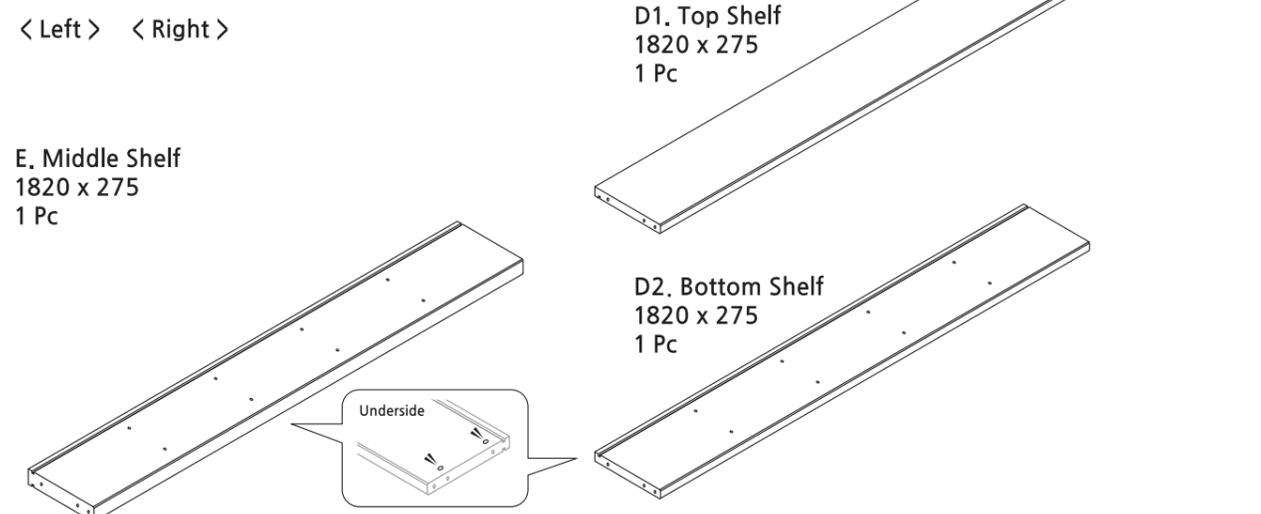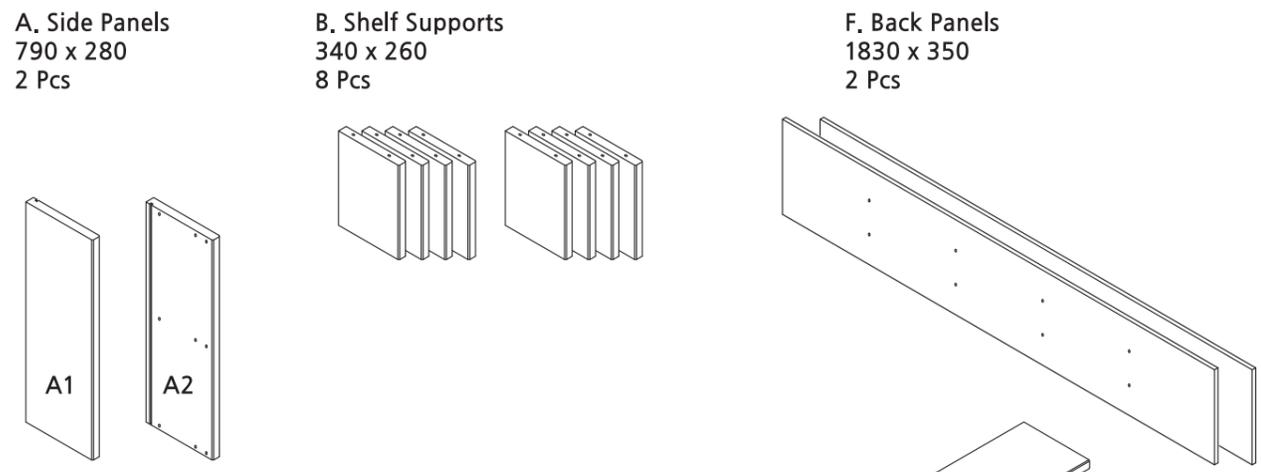

! Cam holes are on the underside of the panel.

C. Hardware

<p>C1. Back Panel Screw Φ4 x 16mm 16 Pcs</p>	<p>C2. Dowel Φ6 x 25mm 32 Pcs</p>
<p>C3. Cam 30T 12 Pcs</p>	<p>C4. Cam Bolt 30T 12 Pcs</p>
<p>C5. Dowel Φ8 x 35mm 6 Pcs</p>	

Dowel holes were made purposely tight.
Please do not use excess force when inserting the Dowels.
Using excess force can damage the panels during assembly.

