



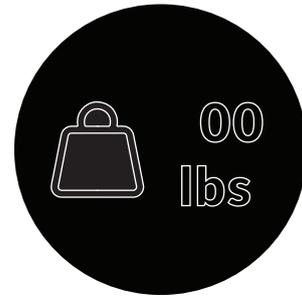

Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 18121 | WILBRANDT STOOL

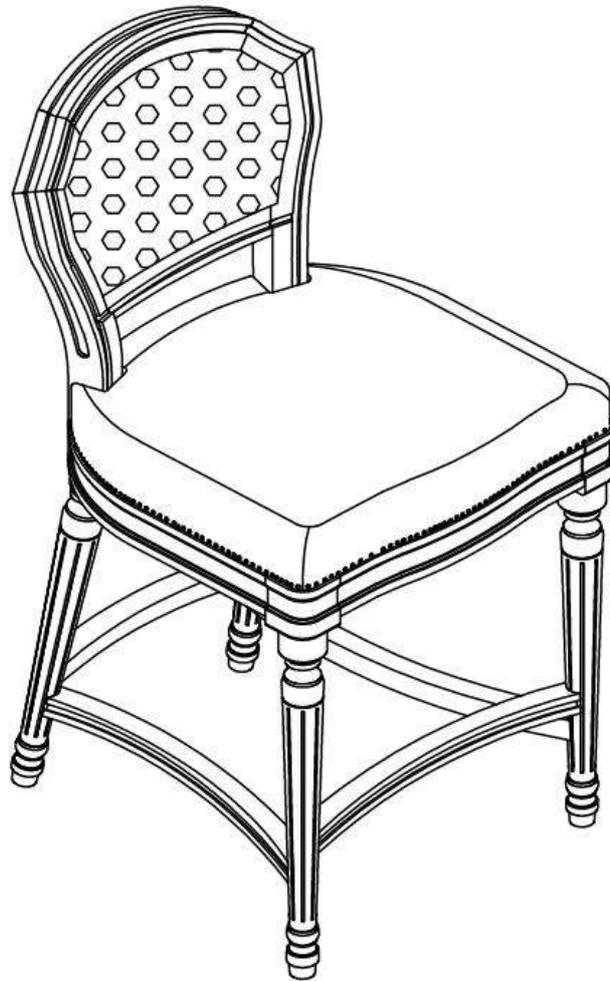

Weight Capacity



Locate the **HARDWARE PACK** which is attached to the shipping carton with red tape.

01/2024



Have questions about assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com



www.boraamindustries.com







Philips screwdriver
not included.

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.



Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

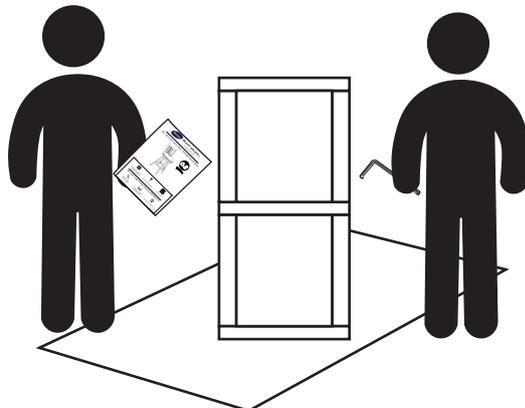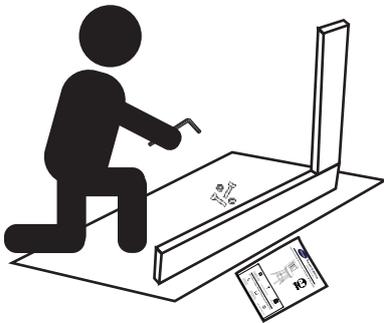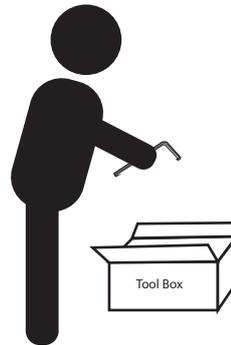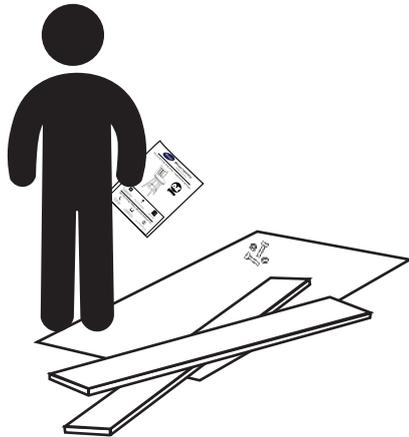


Assembly Overview

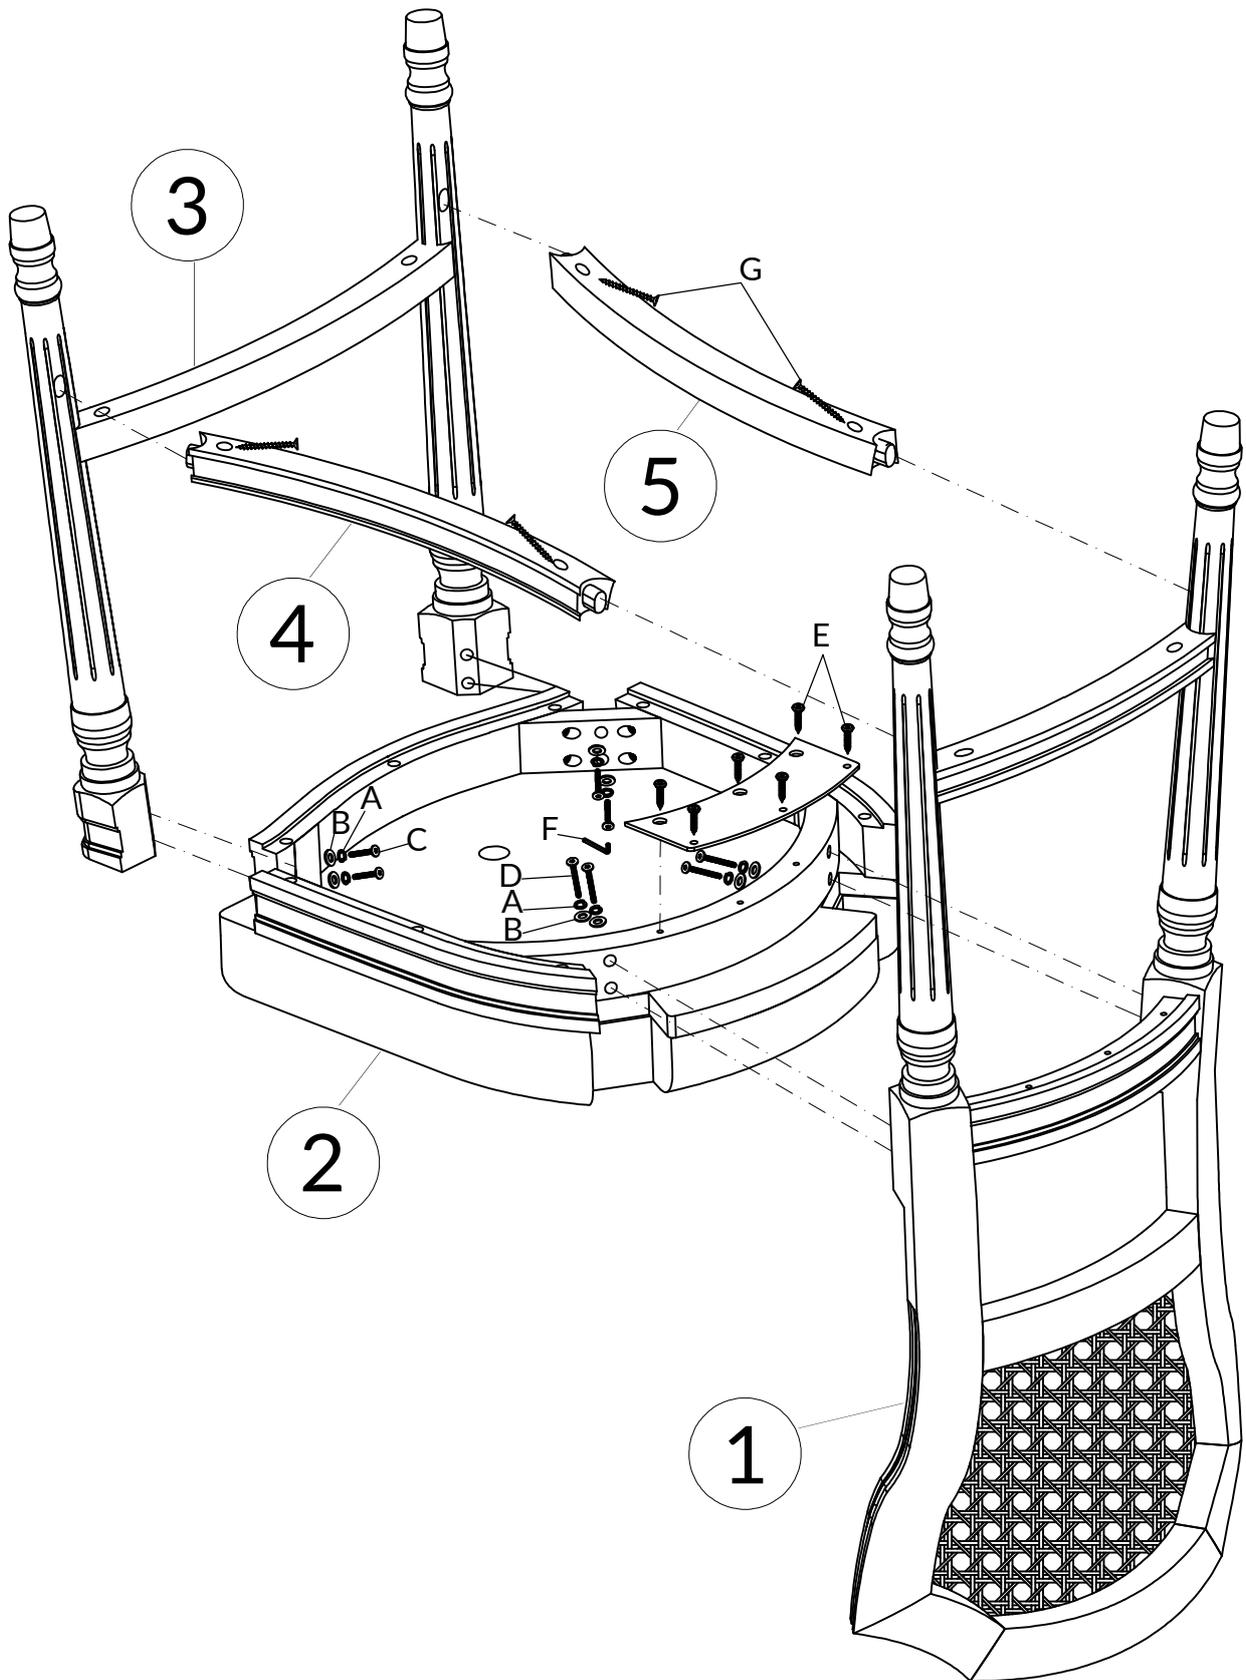

PARTS


①(x1)

Backrest :

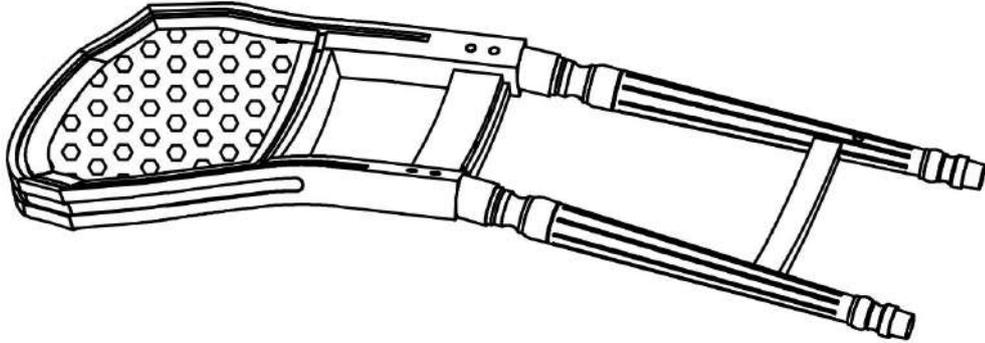


②(x1)

Seat Cushion :

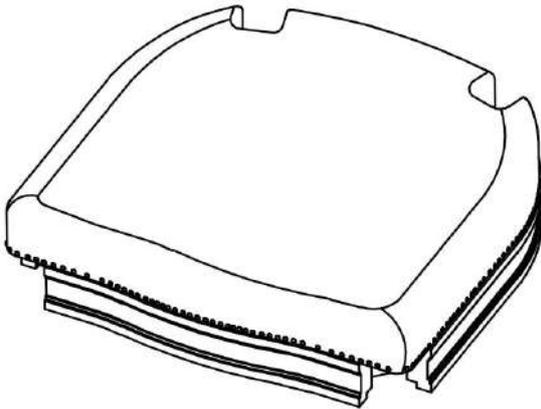


③(x1)

Front Legs :

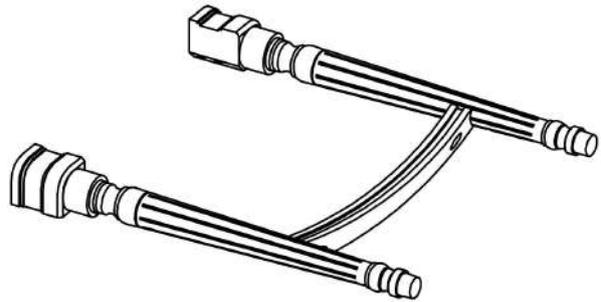


④(x1)

Left Stretcher :






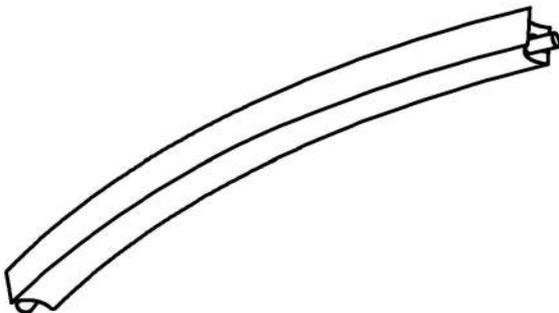


⑤(x1)

Right Stretcher :

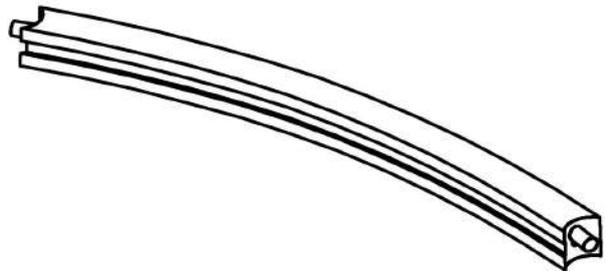


HARDWARE


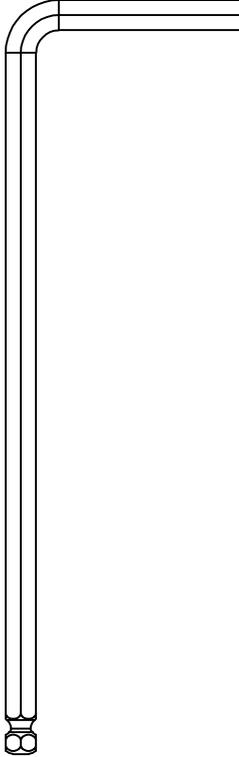
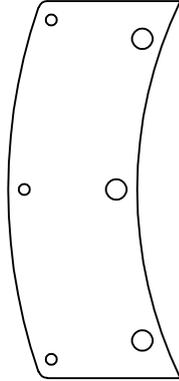
Ⓐ(x8)	Ⓑ(x8)	Ⓒ(x4)	Ⓓ(x4)
			
<p>Spring Washer M6*10</p>	<p>Flat Washer M6*16</p>	<p>Bolt M6*50</p>	<p>Bolt M6*65</p>
Ⓔ(x6)	Ⓕ(x1)	Ⓖ(x4)	Ⓗ(x1)
			
<p>Hexagon Head Wood Screw M6*30</p>	<p>Allen Wrench M4*100</p>	<p>Wood Screw M4*50</p>	<p>Metal Plate 3*90*200mm</p>

847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com

01

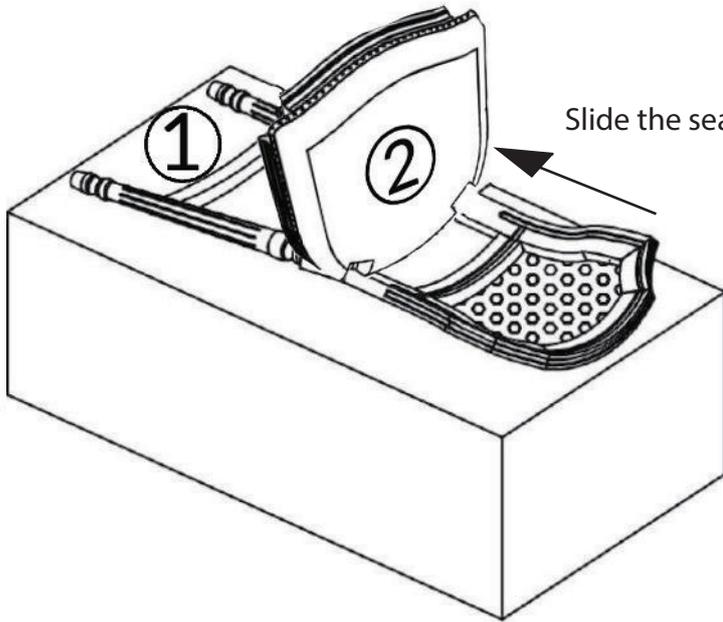

Slide the seat in from the top.

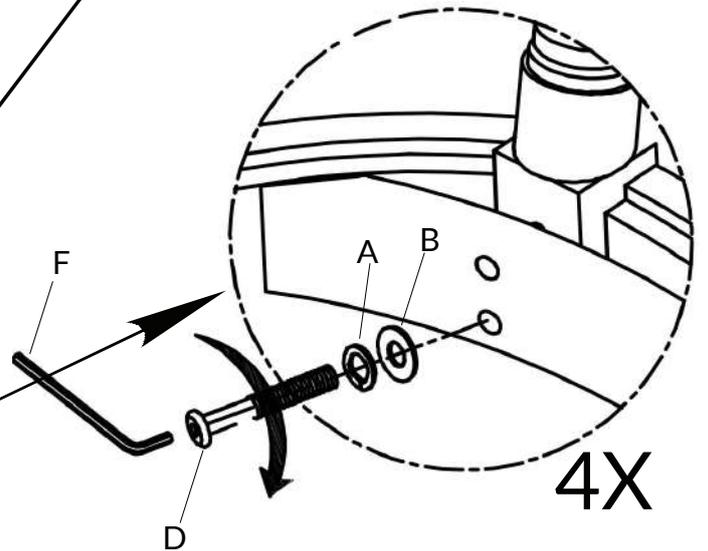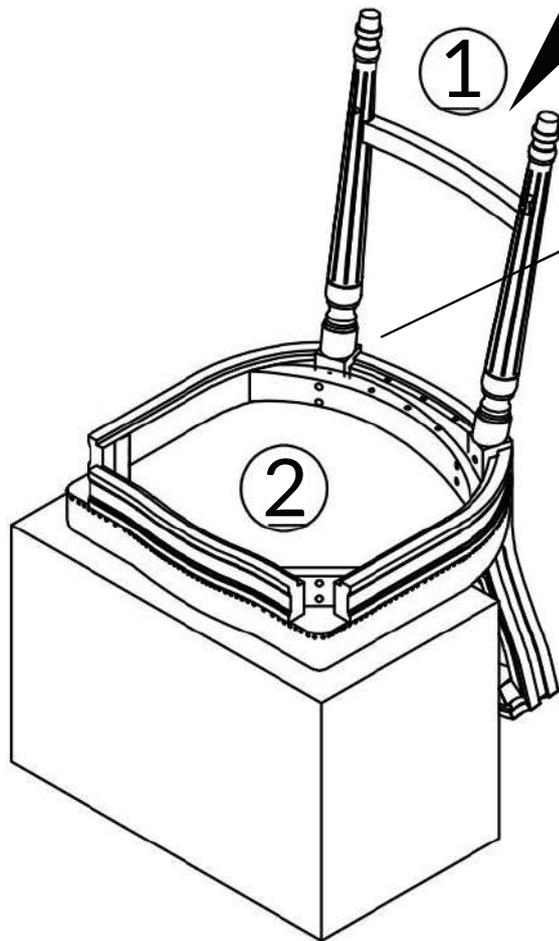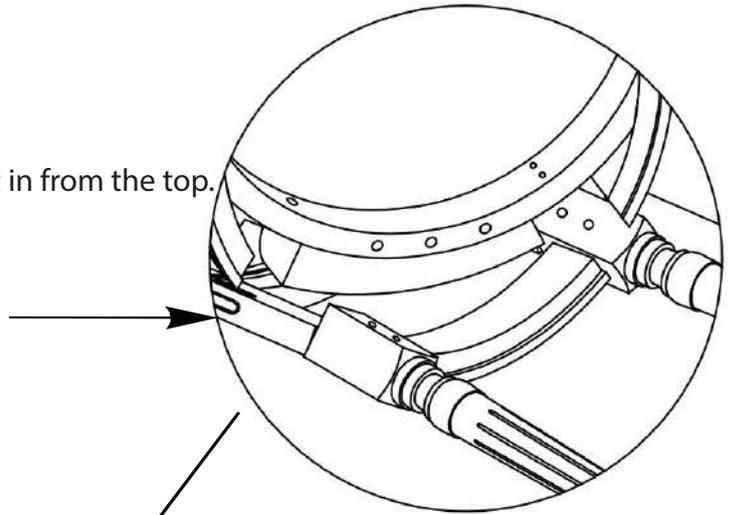


Hardware	Count
A	4
B	4
D	4
F	1

DO NOT TIGHTEN BOLT COMPLETELY.

847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com

02

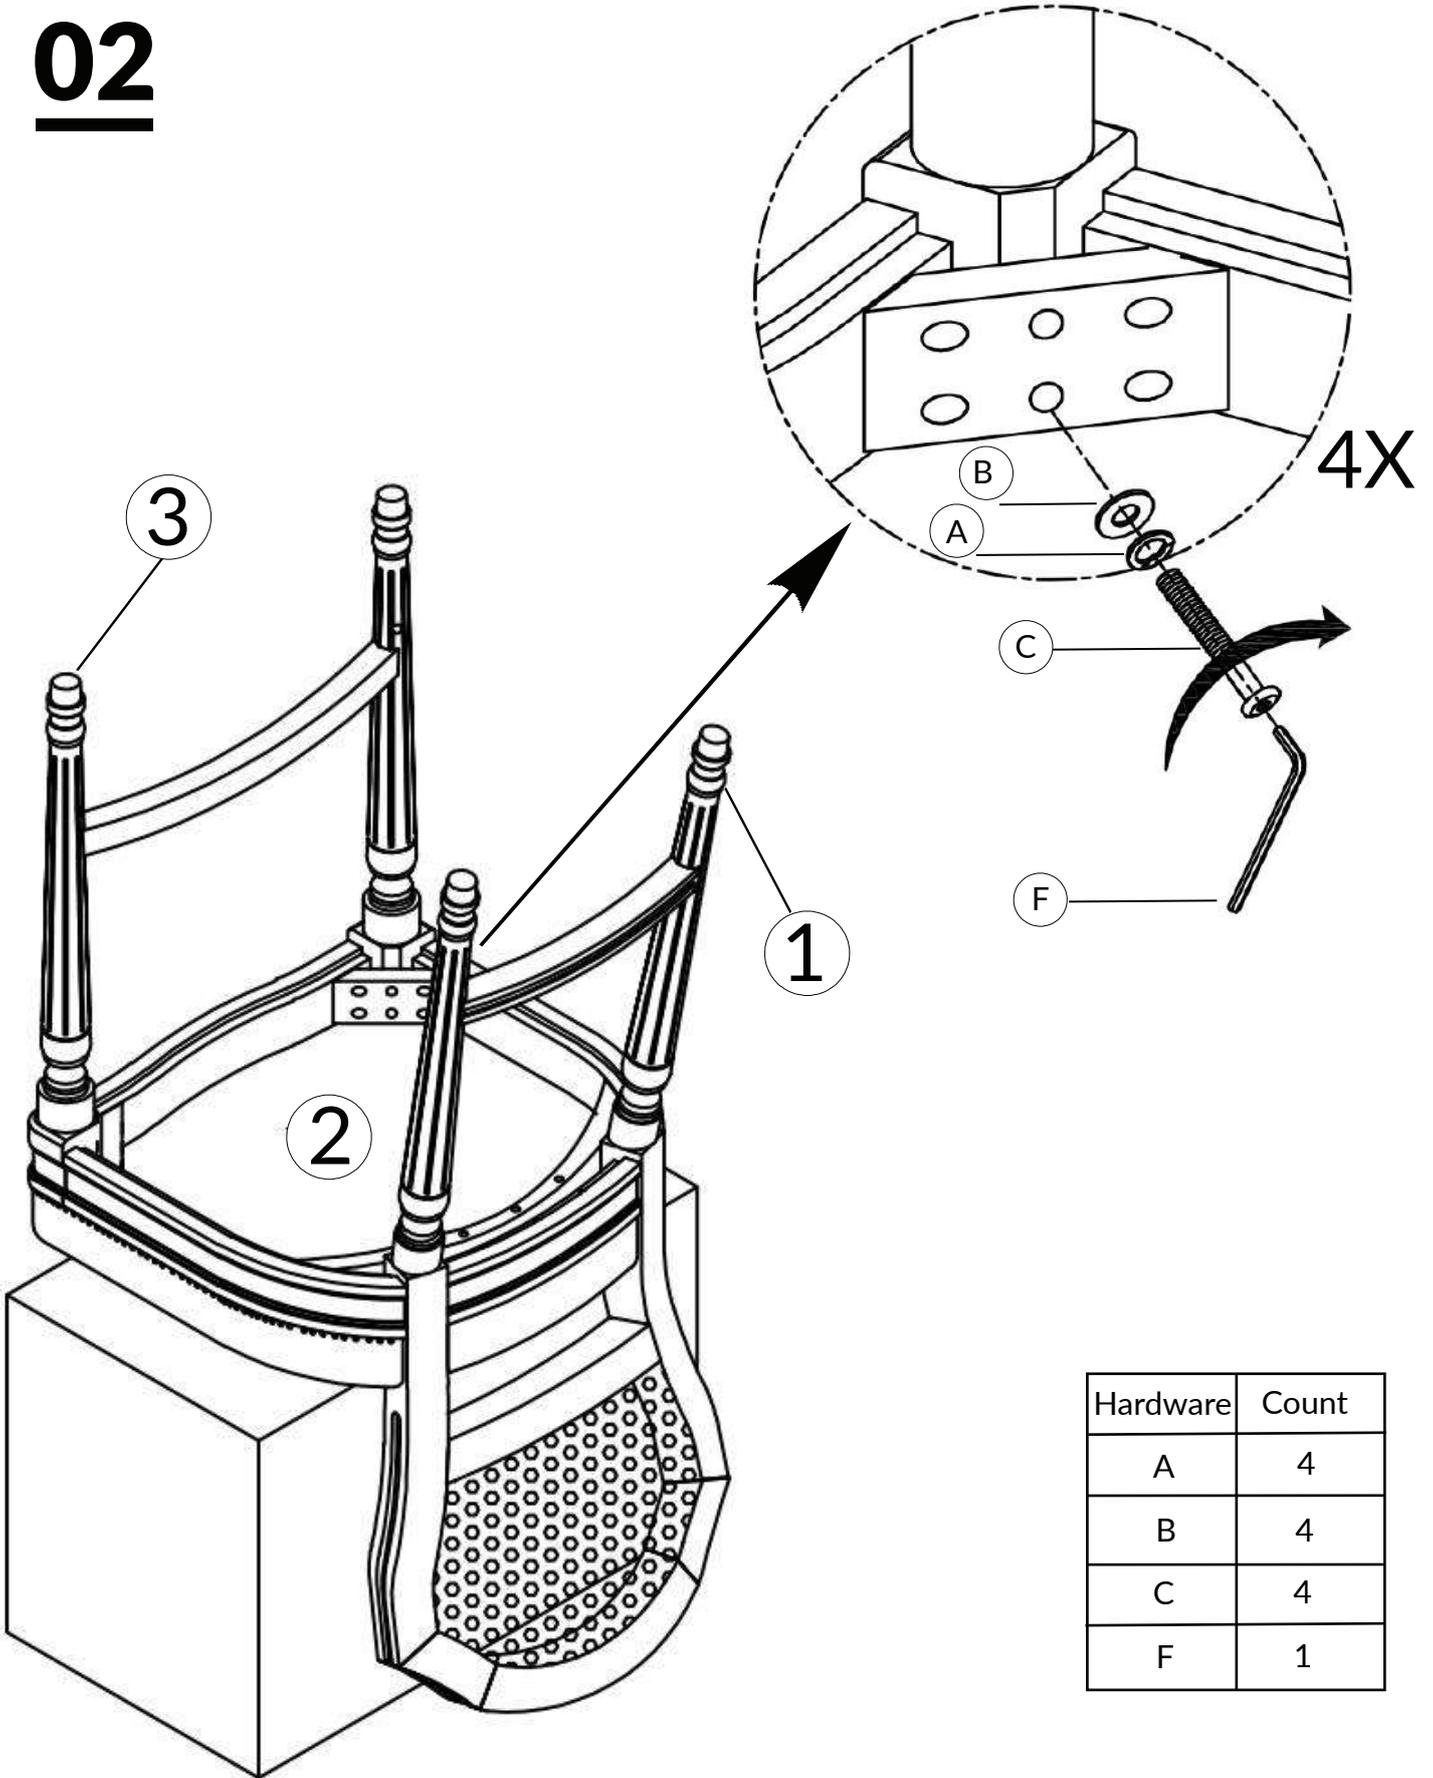


Hardware	Count
A	4
B	4
C	4
F	1



DO NOT TIGHTEN BOLT COMPLETELY.

03

Place the stretchers as shown, but do not put include the screws yet.


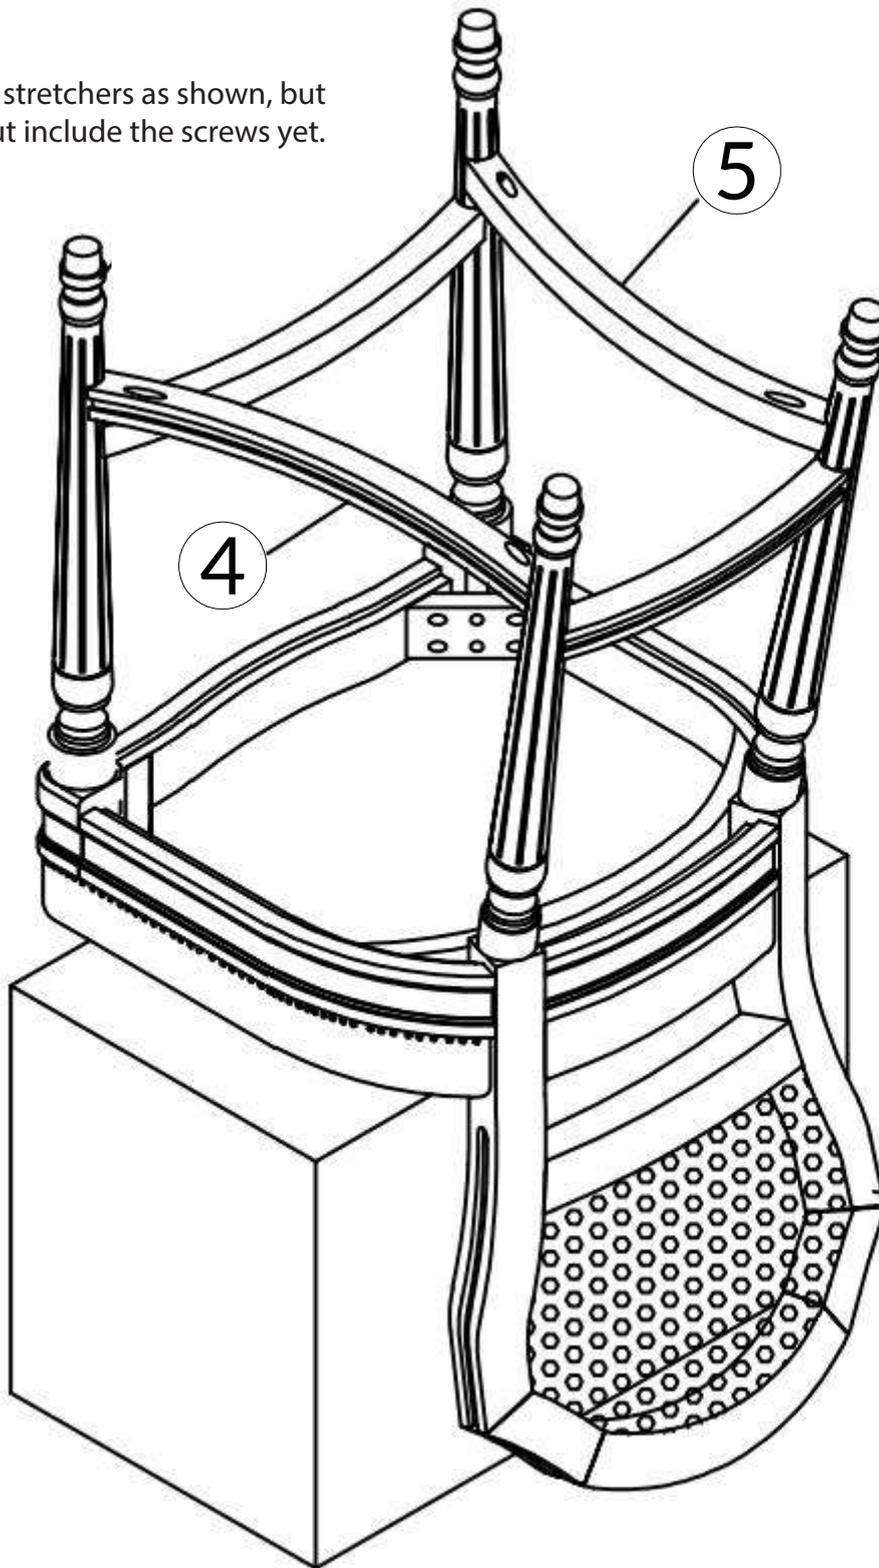


04

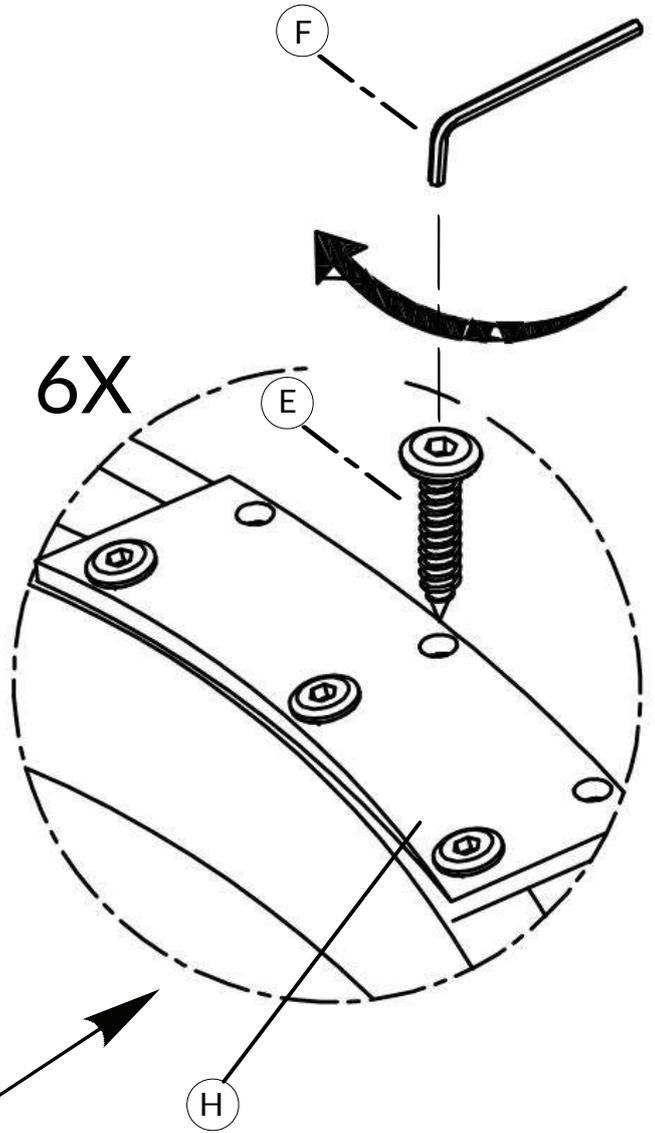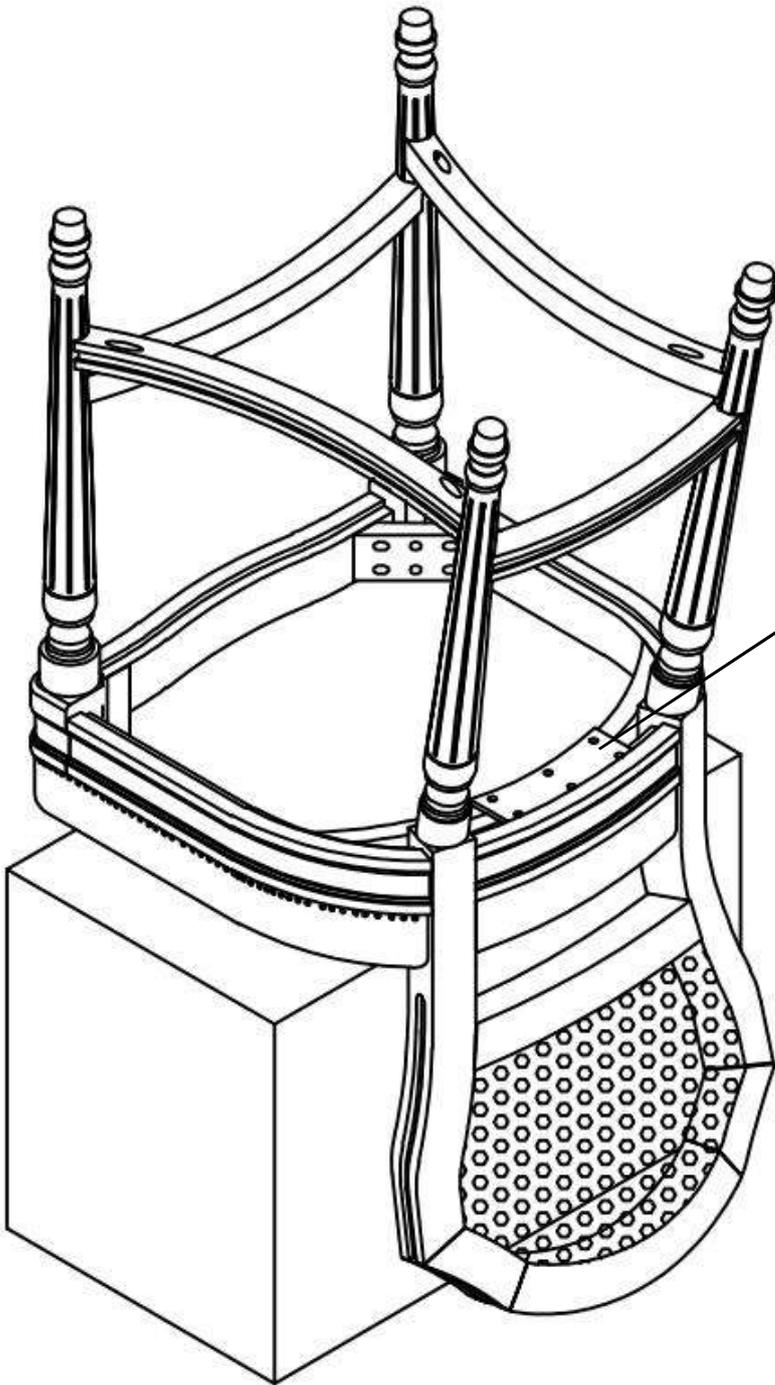

Hardware	Count
E	6
H	1
F	1


05

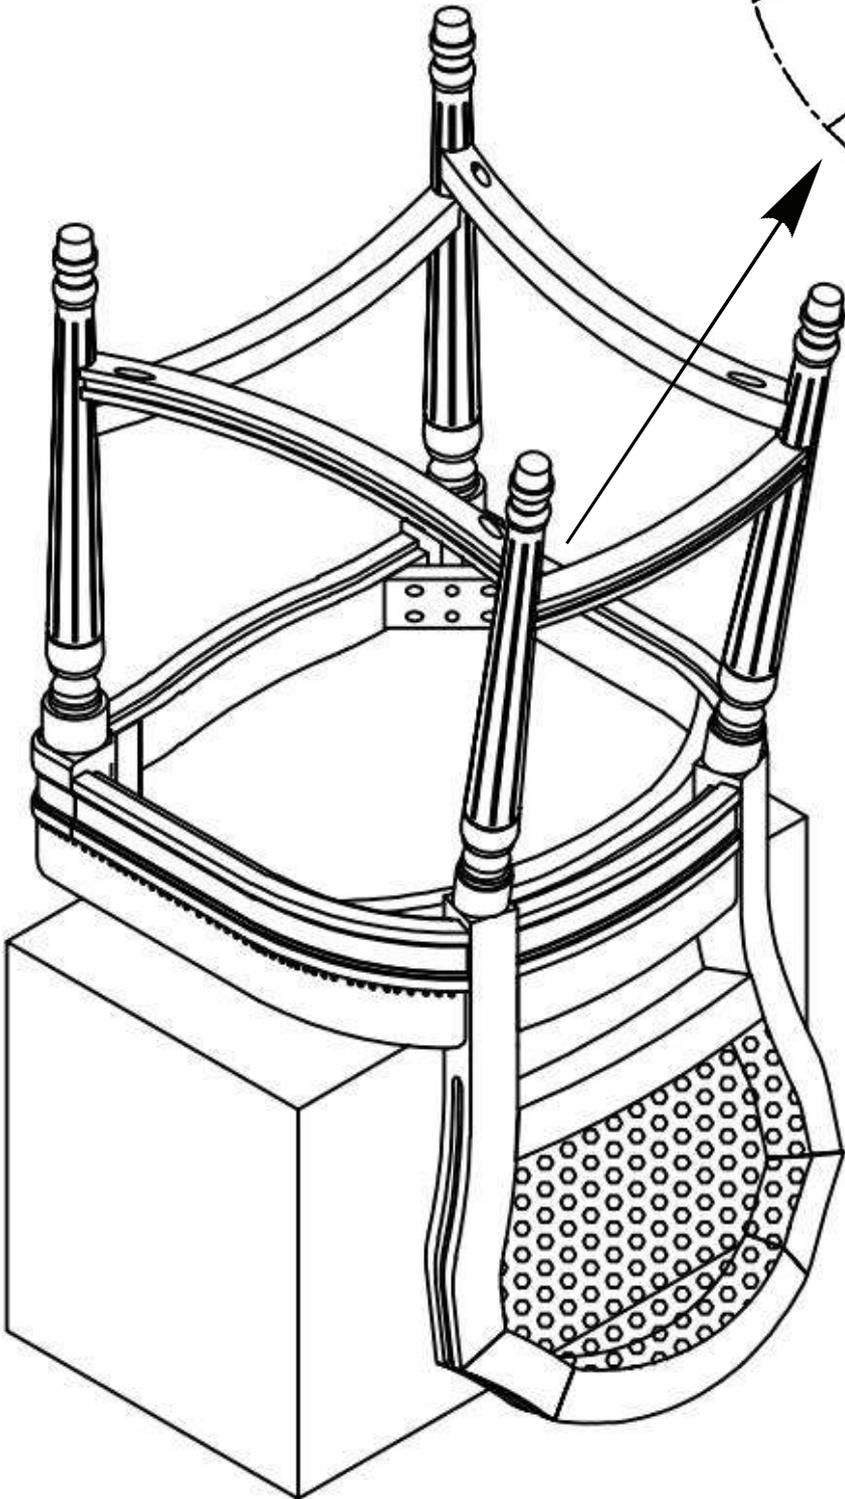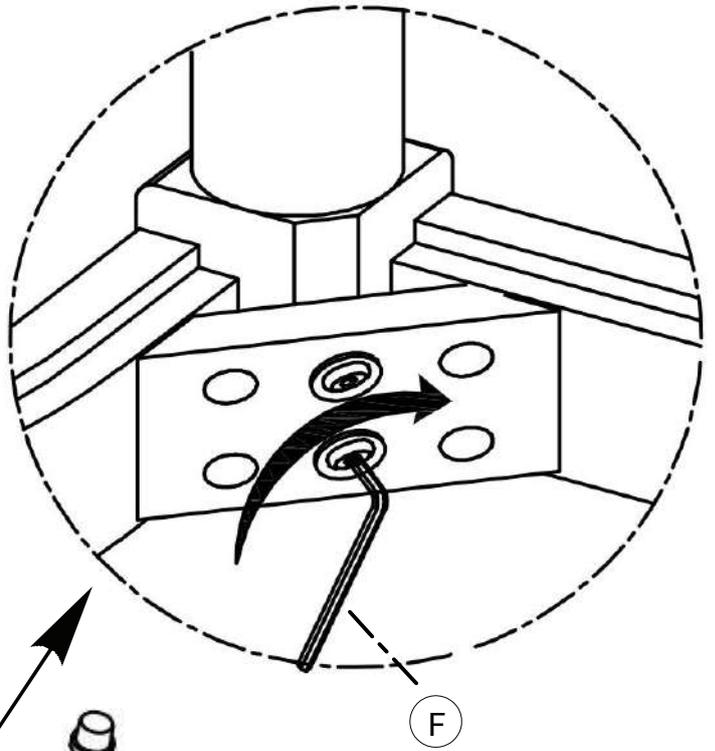


Hardware	Count
F	1

TIGHTEN BOLT COMPLETELY.

06

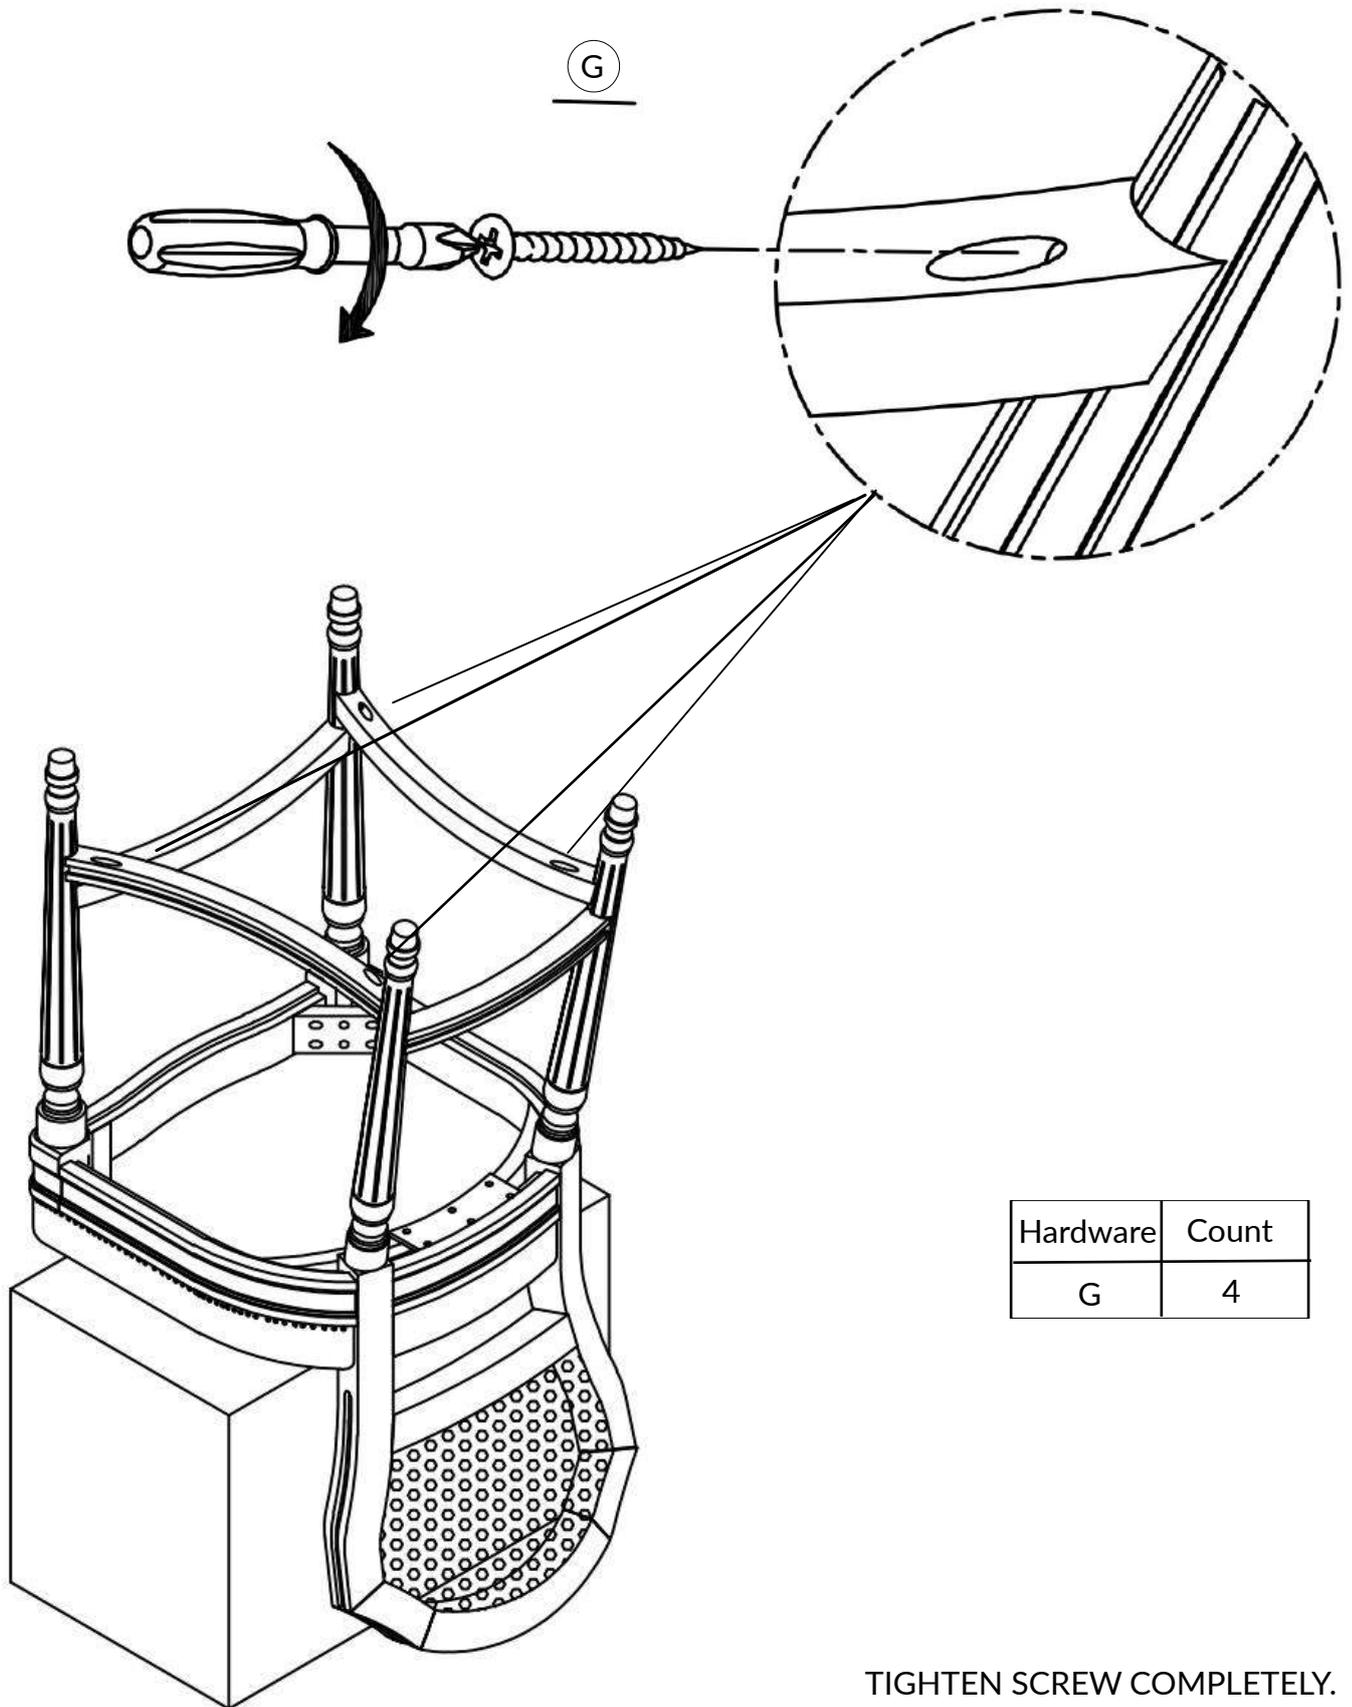

TIGHTEN SCREW COMPLETELY.

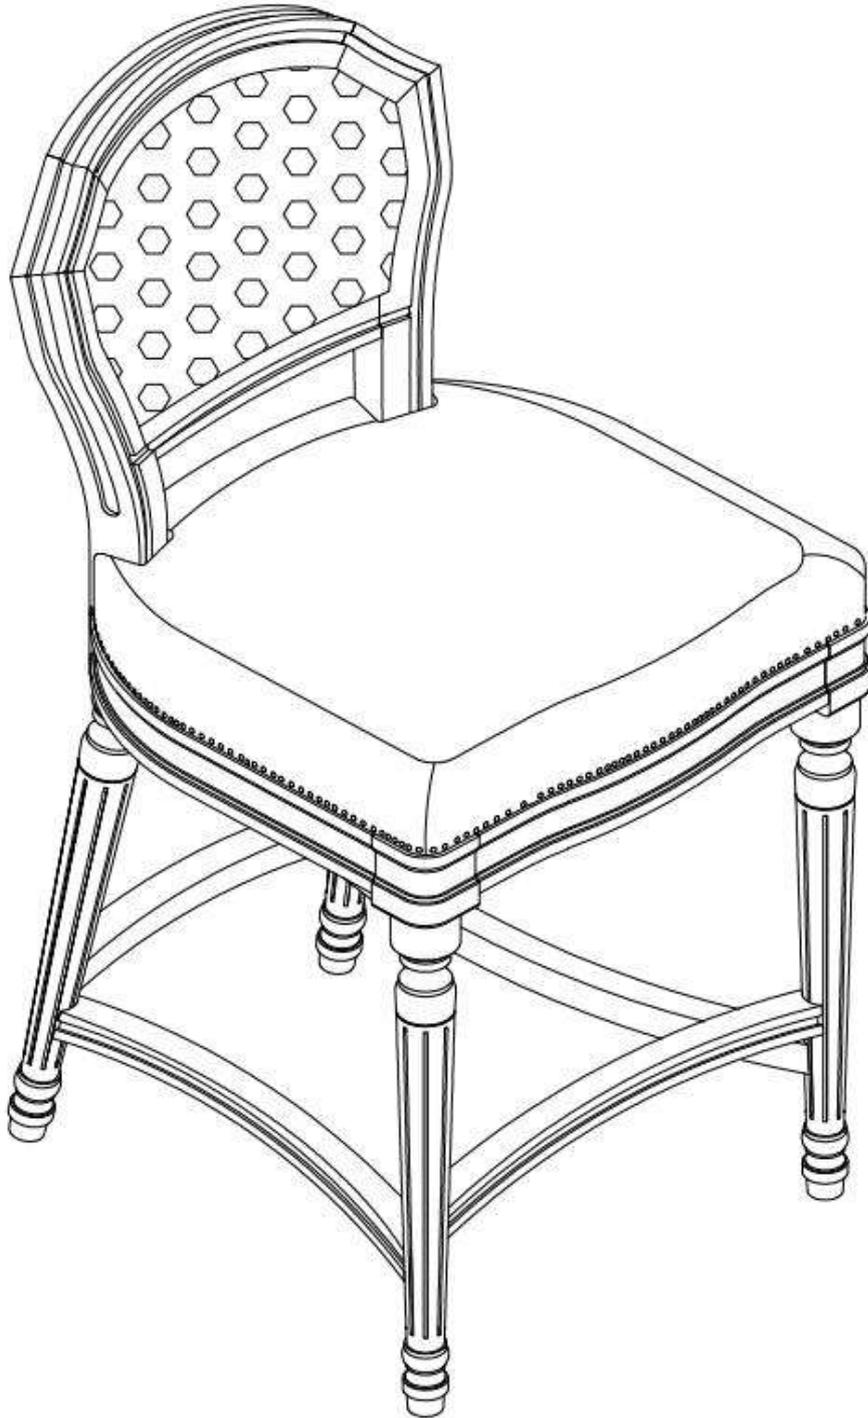

Weight Capacity

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.

847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com