




# Boraam Industries

ASSEMBLY INSTRUCTIONS

## SKU:46134 PALMETTO SWIVEL EXTRA TALL BARSTOOL

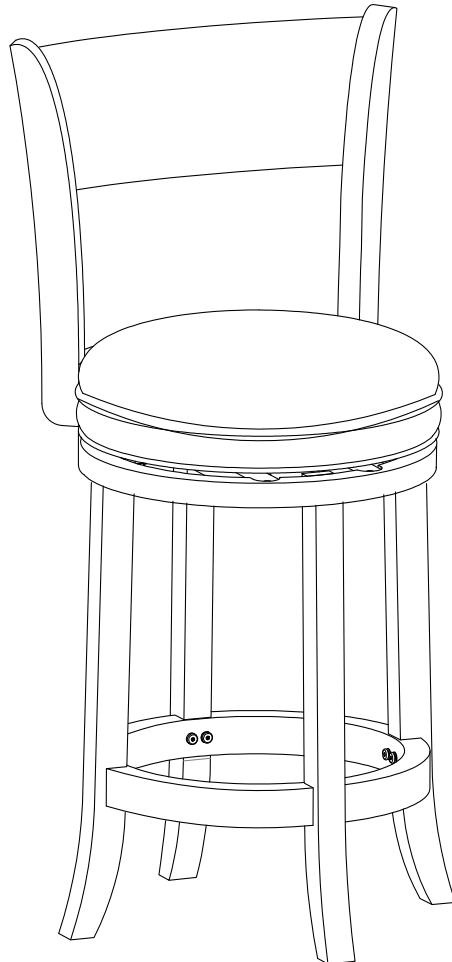

Weight Capacity



Locate the  
**HARDWARE PACK**  
which is attached to  
the shipping carton  
with red tape.

12/2024



Have questions about  
assembling your item?



Items or parts damaged?



Missing a part?

**We're here to help! (Monday-Friday from 9am-5pm CST)**



847-949-6300  
877-267-2261



customerservice@  
boraamindustries.com






www.boraamindustries.com

# Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.





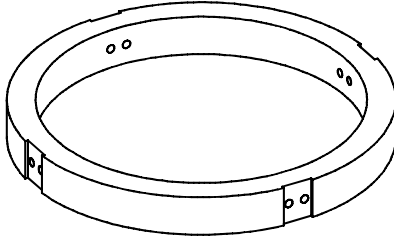
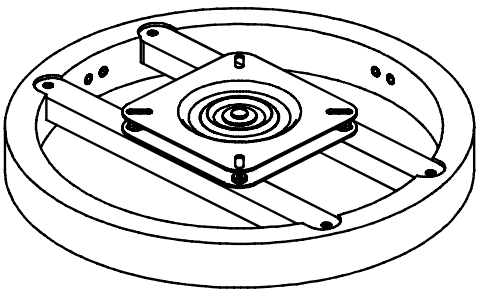
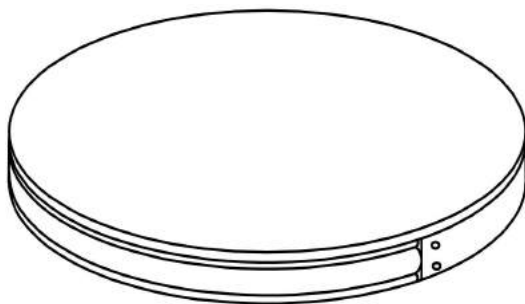
Locate the  
**HARDWARE PACK**  
which is attached to the  
shipping carton with red  
tape.

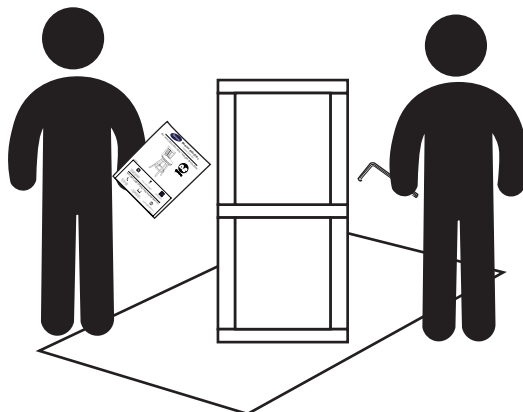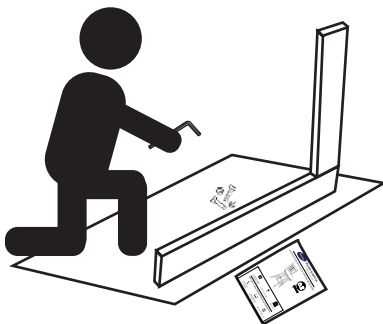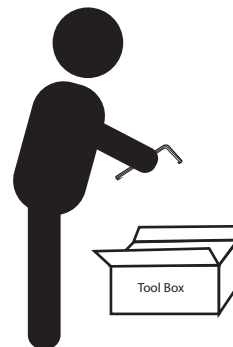







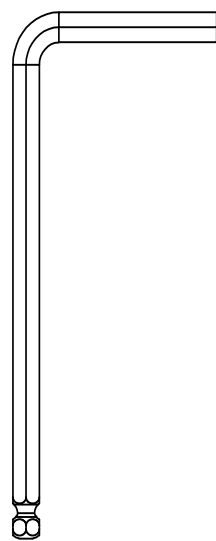
# Assembly Overview

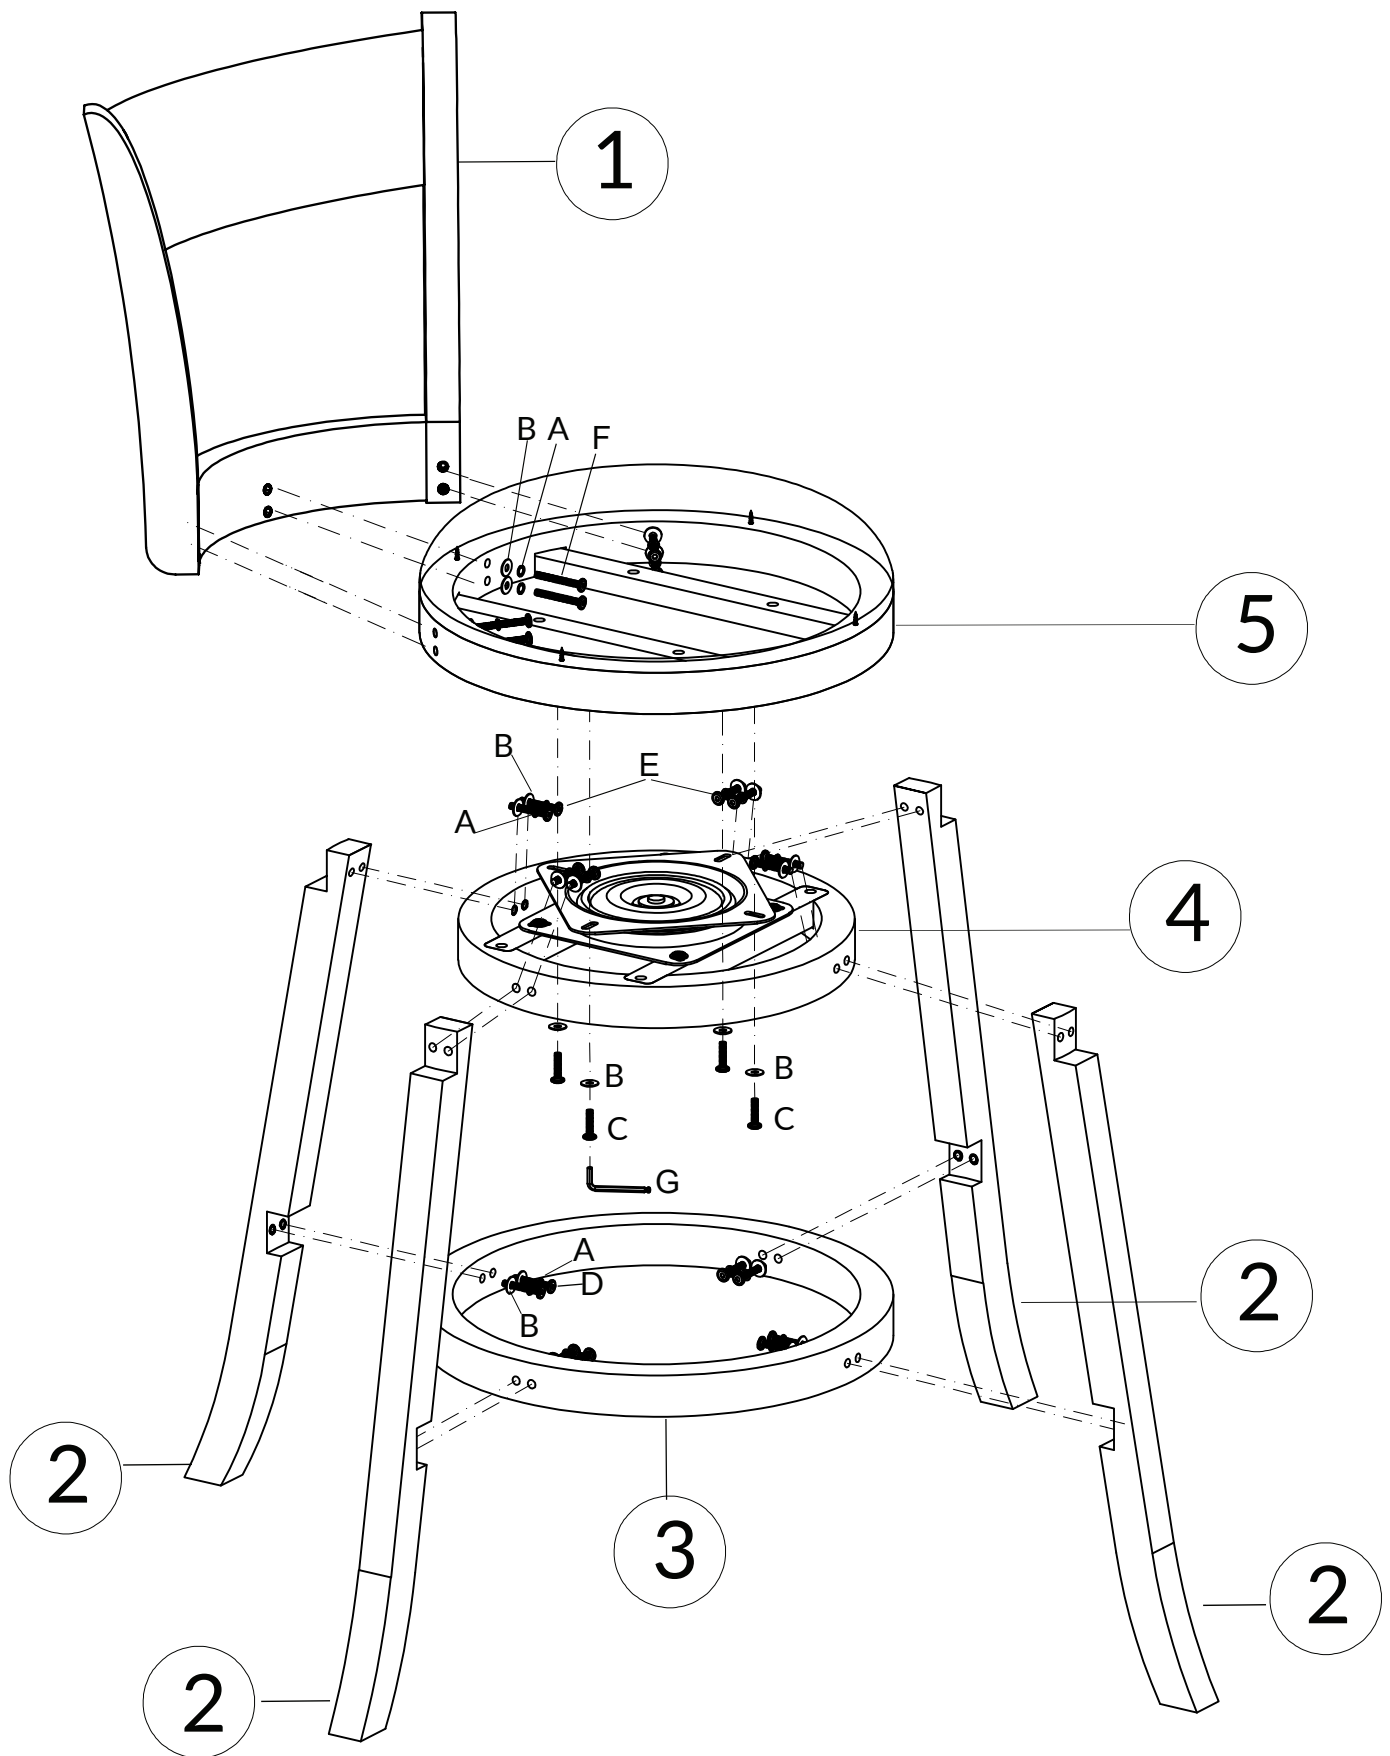

# PARTS

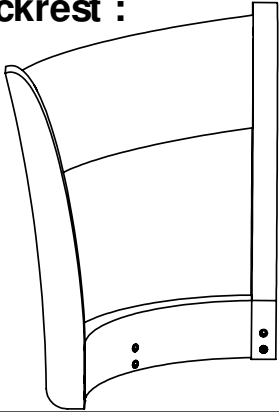
|   |   |   |
|---|---|---|
| ①(x1)   | ②(x4)   | ③(x1)   |
| <b>Backrest :</b>                  | <b>Legs :</b>            | <b>Footrest :</b>  |
| ④(x1)   | ⑤(x1)   |   |
| <b>Apron With Swivel Plate :</b>  | <b>Seat Cushion :</b>  |   |

# HARDWARE



|   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|
| ①(A)(x22)   | ②(B)(x26)   | ③(C)(x4)  | ④(D)(x8)  | ⑤(E)(x8)  | ⑥(F)(x6)  | ⑦(G)(x1)  |
|  |  |  |  |  |  |  |
| Spring Washer<br>M6*10  | Flat Washer<br>M6*16  | Bolt<br>M6*25   | Bolt<br>M6*40   | Bolt<br>M6*45   | Bolt<br>M6*50   | Allen Wrench<br>M4*110  |

847-949-6300 | 877-267-2261 | [customerservice@boraamindustries.com](mailto:customerservice@boraamindustries.com)

# 01

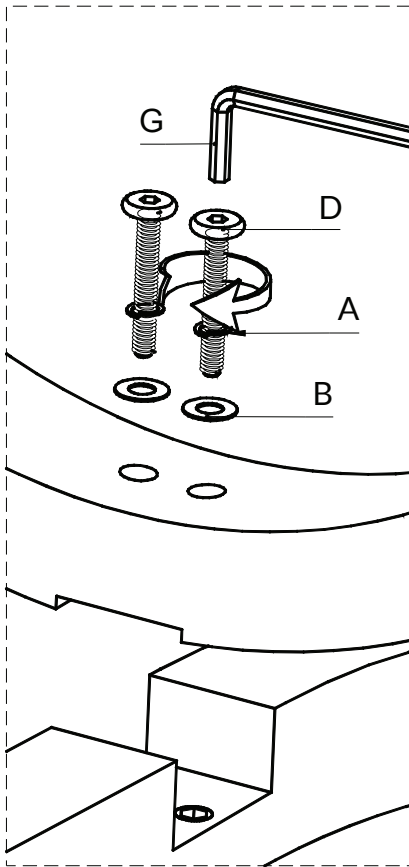

4X

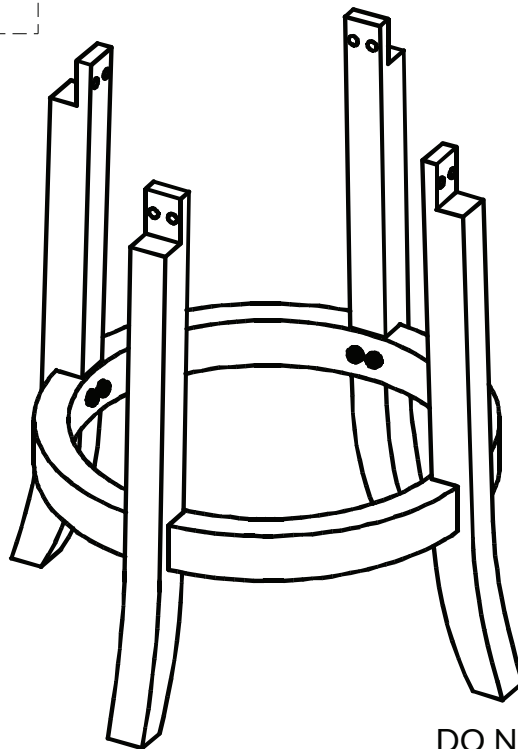
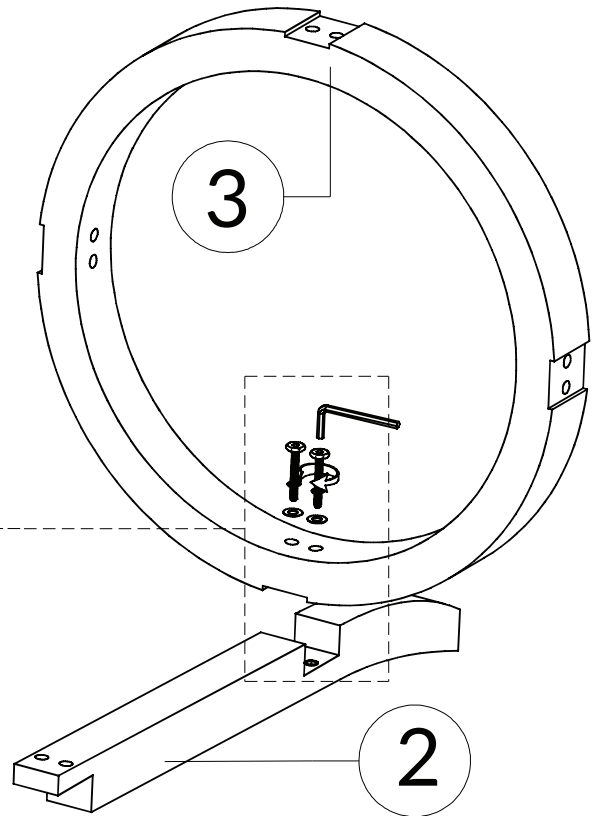


| Hardware | Count |
|----------|-------|
| A        | 8     |
| B        | 8     |
| D        | 8     |
| G        | 1     |


DO NOT TIGHTEN BOLT COMPLETELY.

Please make sure that the protective metal kick plate from Footrest (Part #3) is facing upwards.  
Remove the white Tape from the protective metal kick plate before using.

# 02

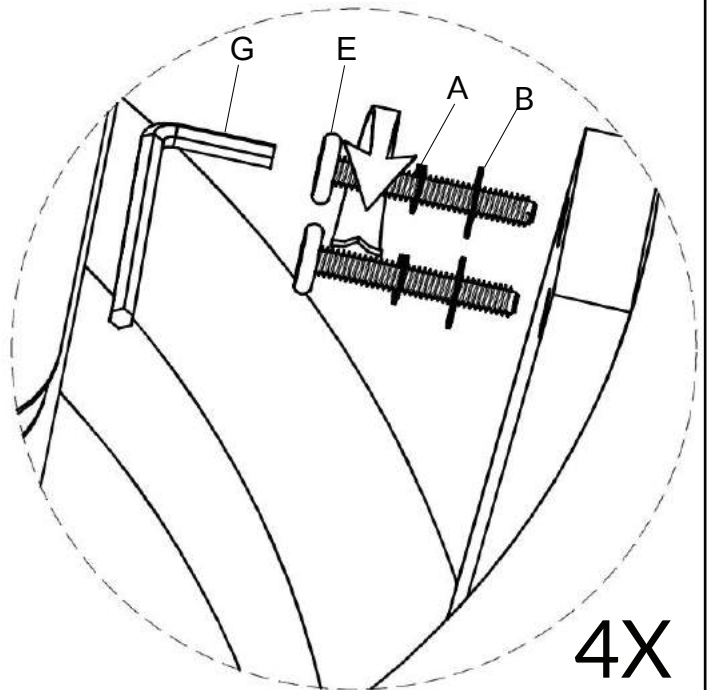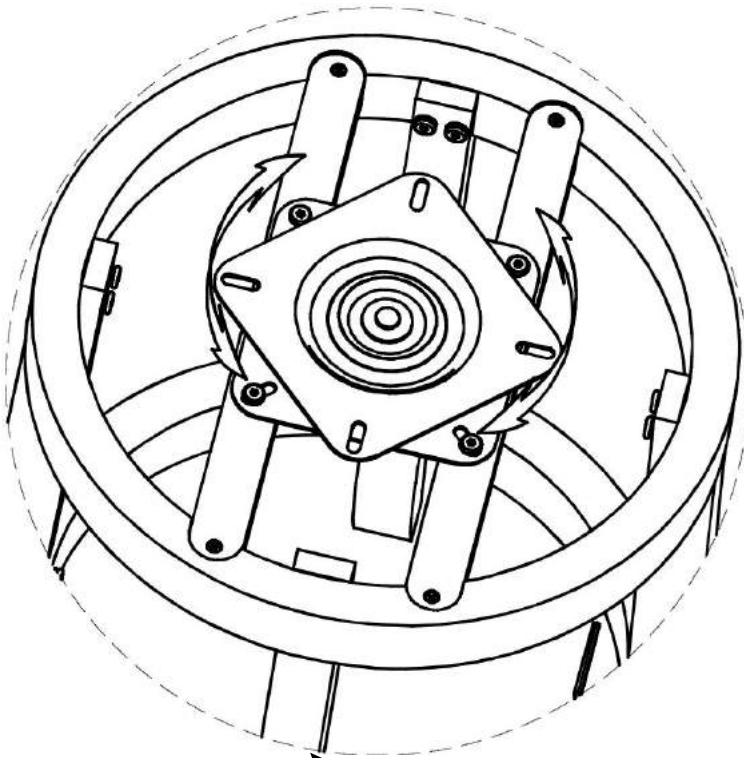



4

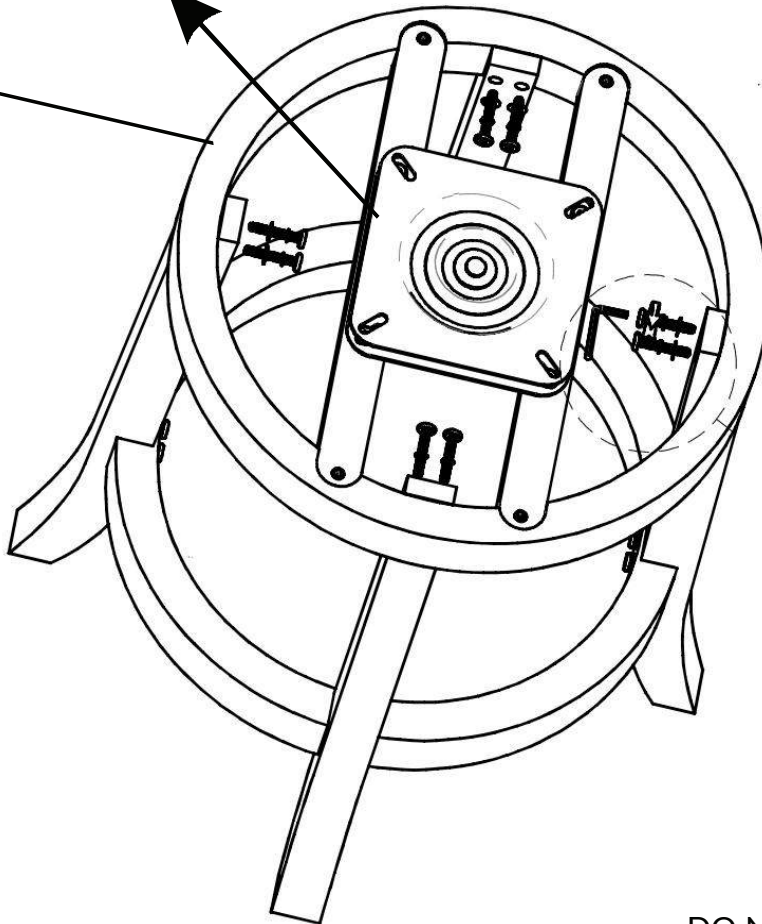

| Hardware | Count |
|----------|-------|
| A        | 8     |
| B        | 8     |
| E        | 8     |
| G        | 1     |

DO NOT TIGHTEN BOLT COMPLETELY.

# 03

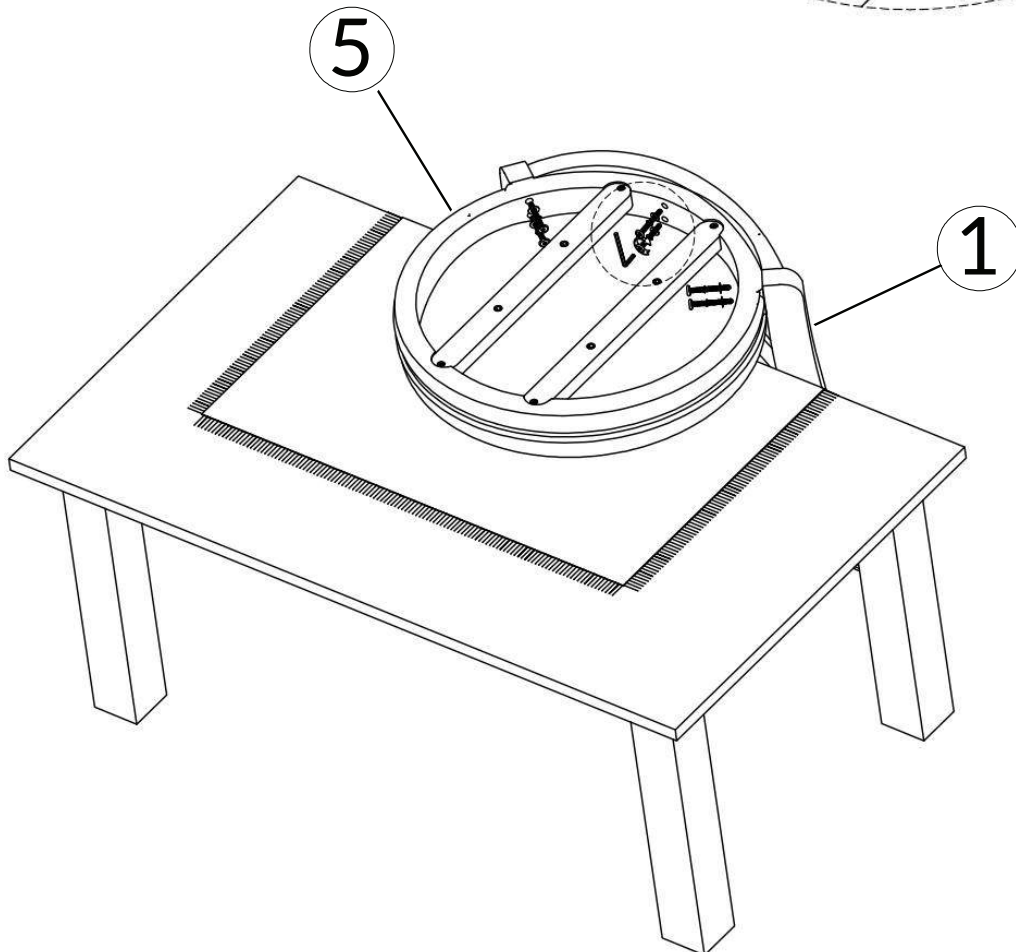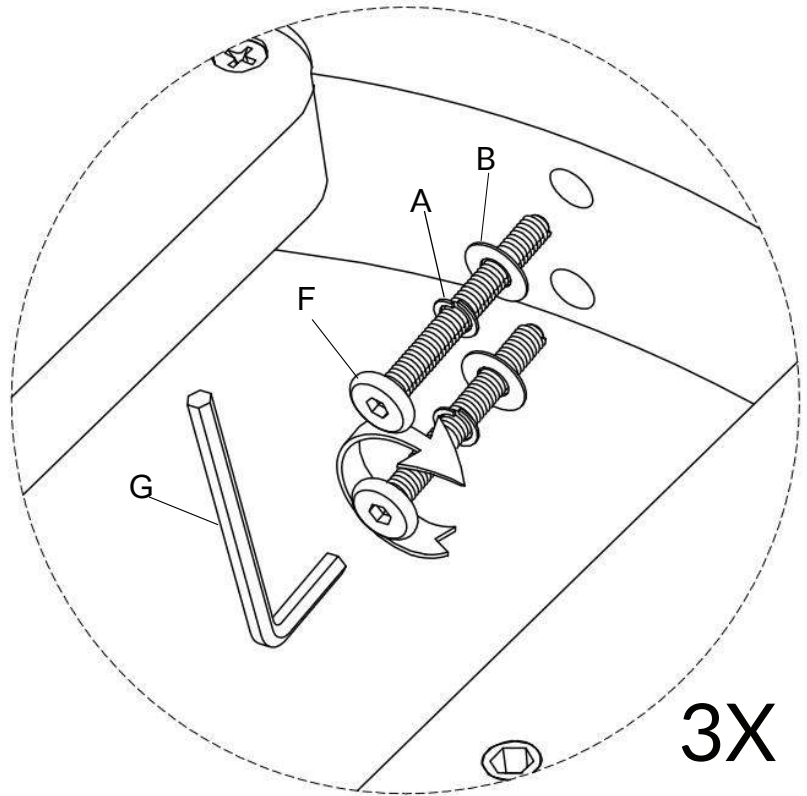


| Hardware | Count |
|----------|-------|
| A        | 6     |
| B        | 6     |
| F        | 6     |
| G        | 1     |

TIGHTEN BOLT COMPLETELY.




# 04

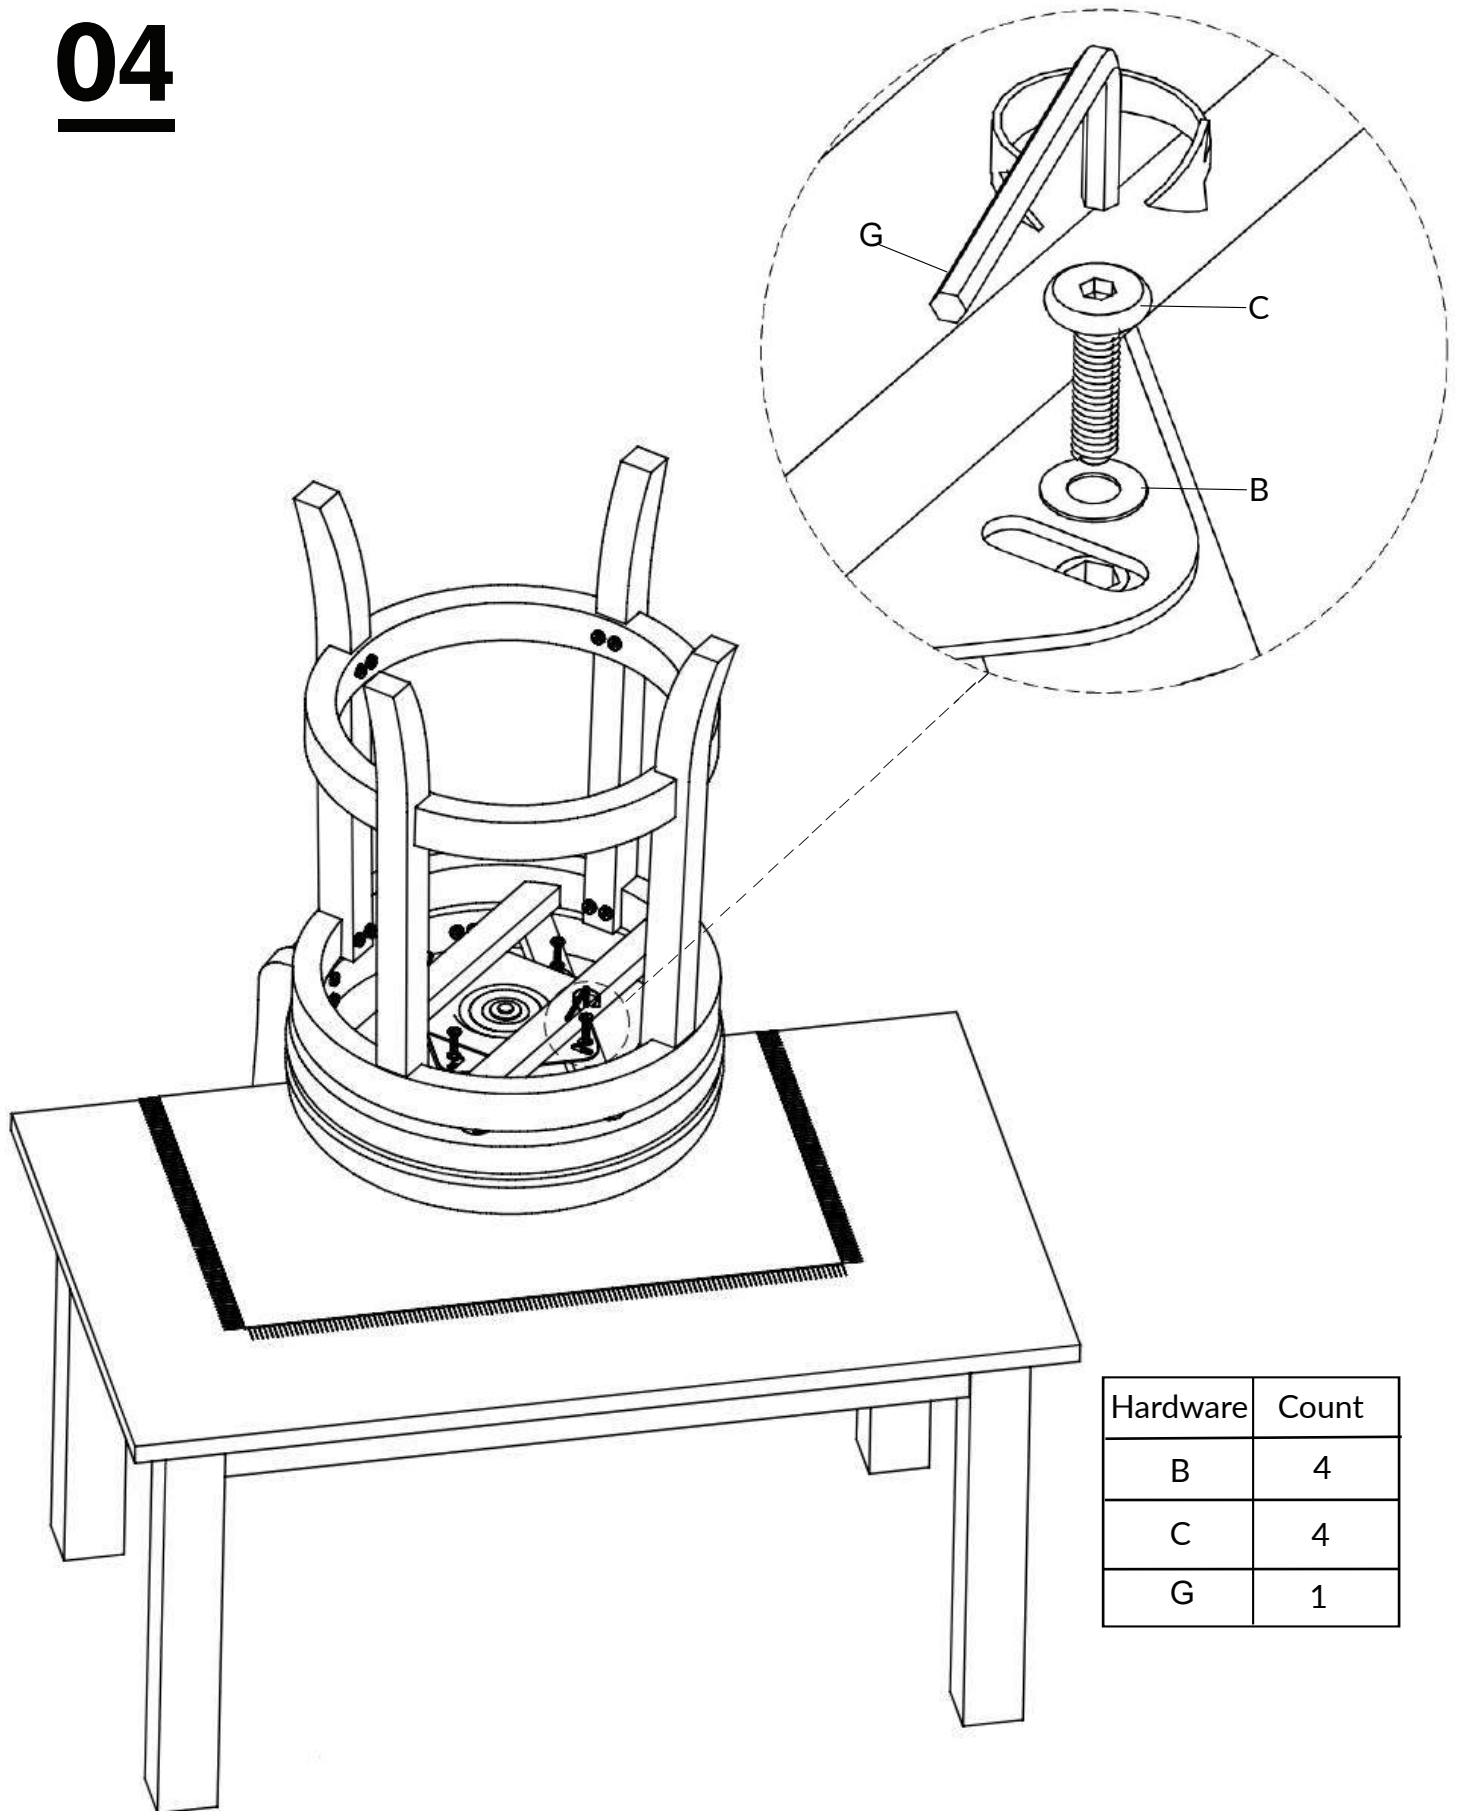


| Hardware | Count |
|----------|-------|
| B        | 4     |
| C        | 4     |
| G        | 1     |

TIGHTEN BOLT COMPLETELY.



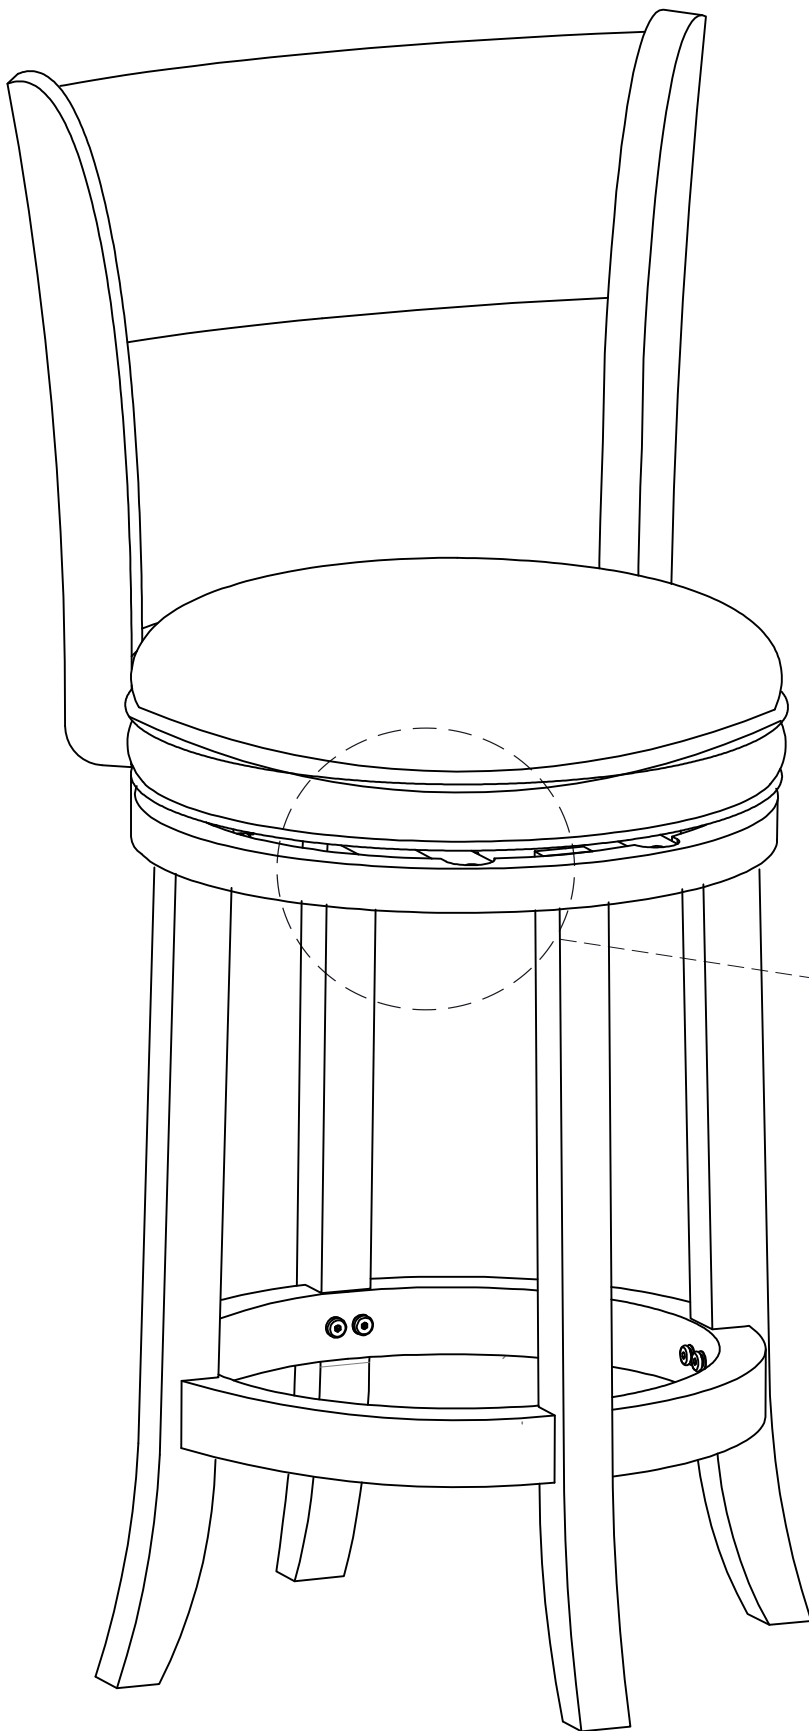

**Weight Capacity**

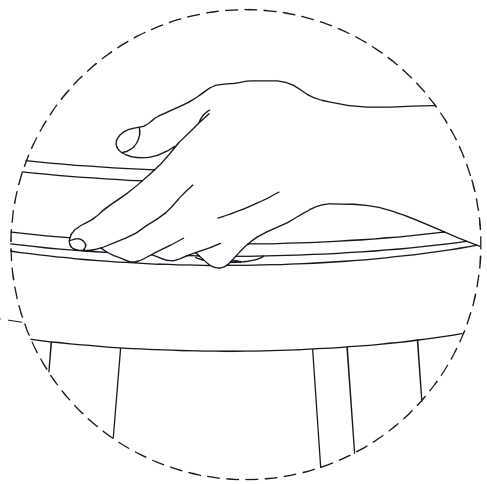

**BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.**