




Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 44224,44229,44824,44829 | BACKLESS SWIVEL STOOL

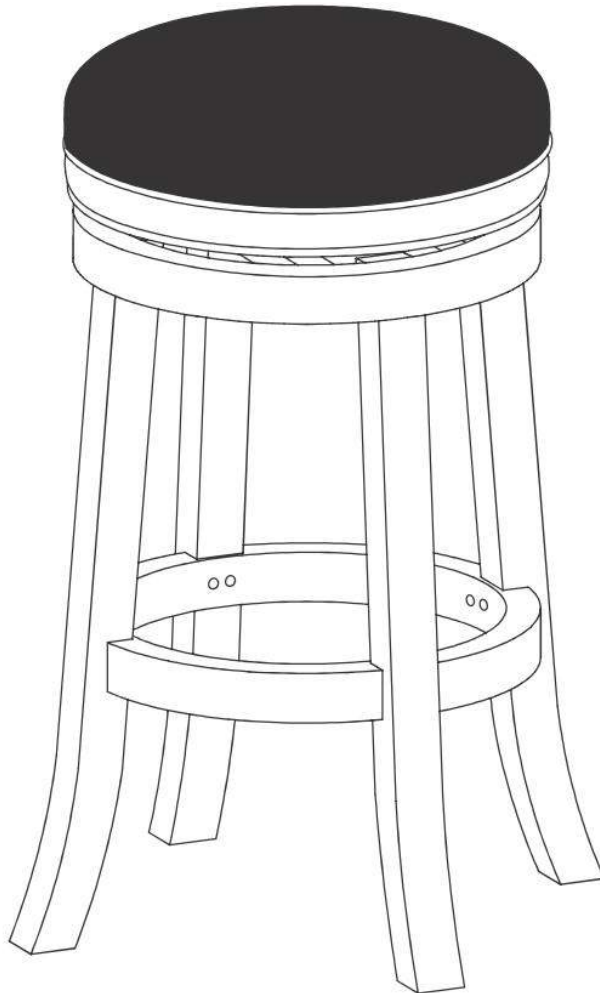

Weight Capacity



Locate the **HARDWARE PACK** which is attached to the shipping carton with red tape.

02/2024



Have questions about assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com






www.boraamindustries.com

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.







Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

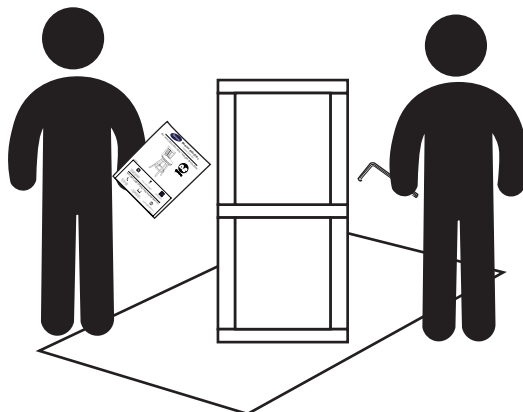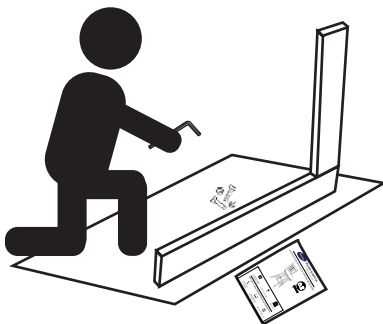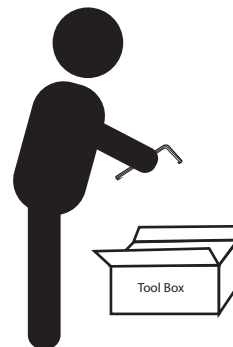





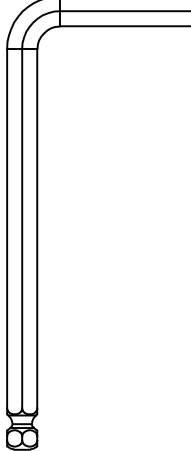
Assembly Overview

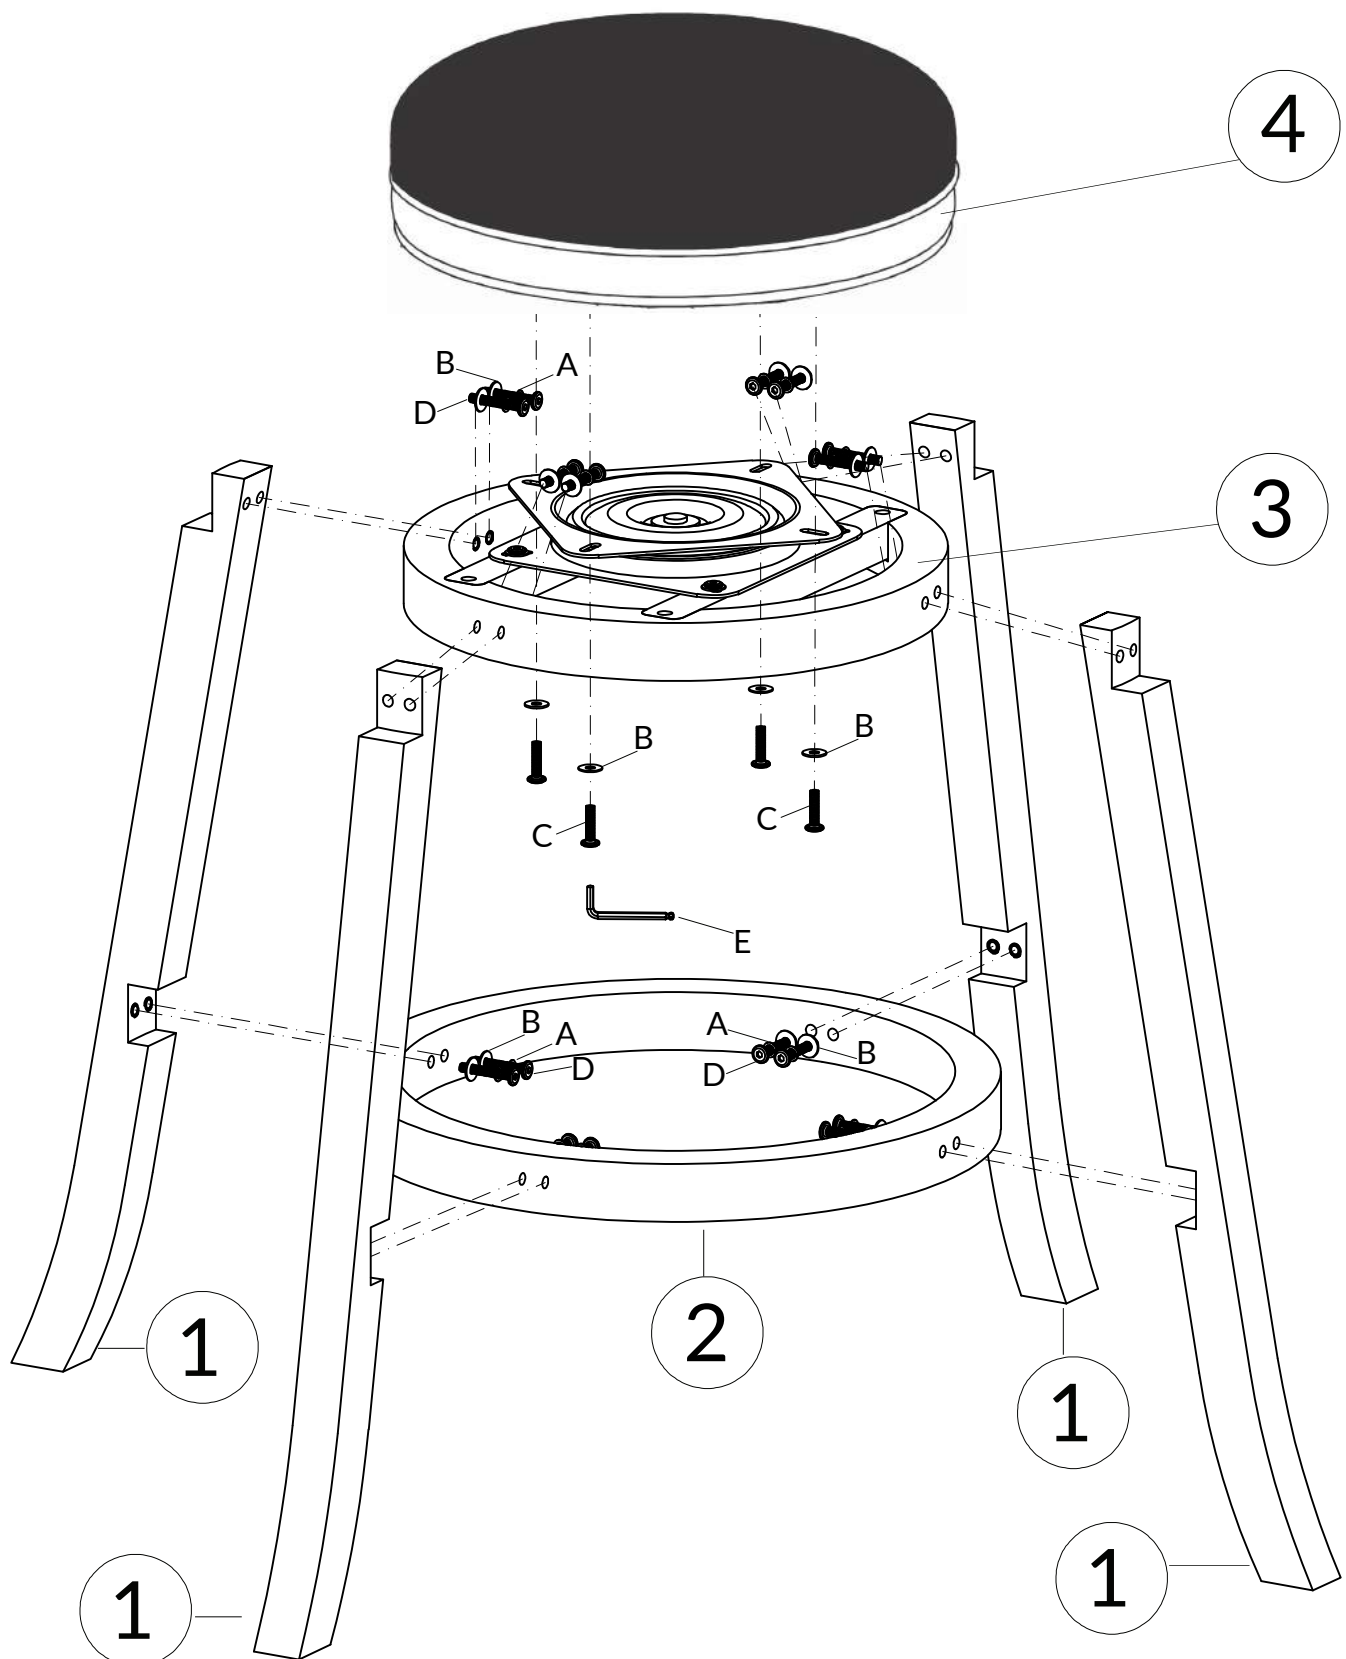

PARTS

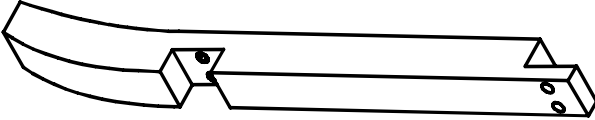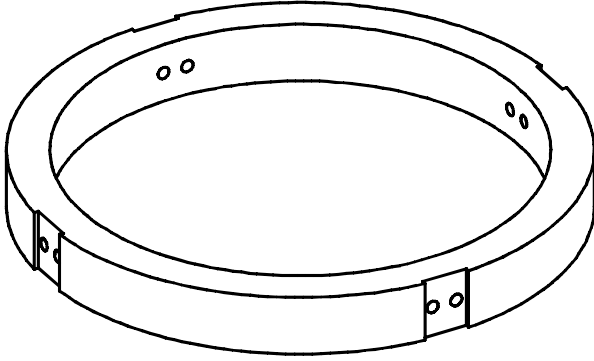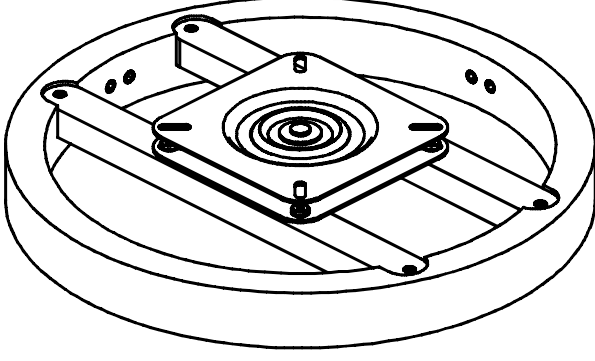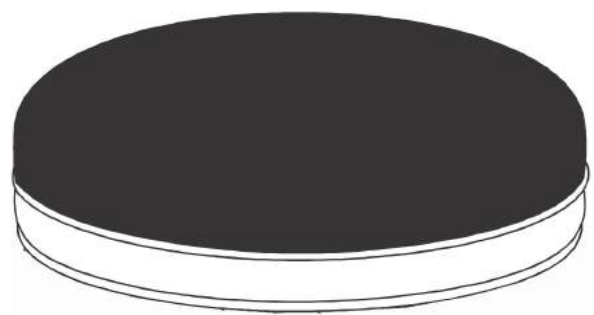
<p>①(x4)</p> <p>Legs :</p> 	<p>②(x1)</p> <p>Footrest :</p> 
<p>③(x1)</p> <p>Apron With Swivel Plate :</p> 	<p>④(x1)</p> <p>Seat Cushion :</p> 

HARDWARE



<p>Ⓐ(x16)</p>  <p>Spring Washer M6*10</p>	<p>Ⓑ(x20)</p>  <p>Flat Washer M6*16</p>	<p>Ⓒ(x4)</p>  <p>Bolt M6*25</p>	<p>Ⓓ(x16)</p>  <p>Bolt M6*40</p>	<p>Ⓔ(x1)</p>  <p>Allen Wrench M4*110</p>
--	--	--	--	---

847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com

01

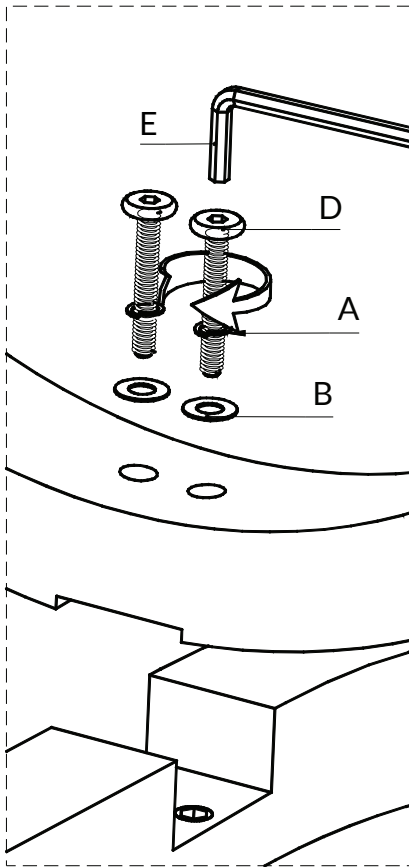




4X

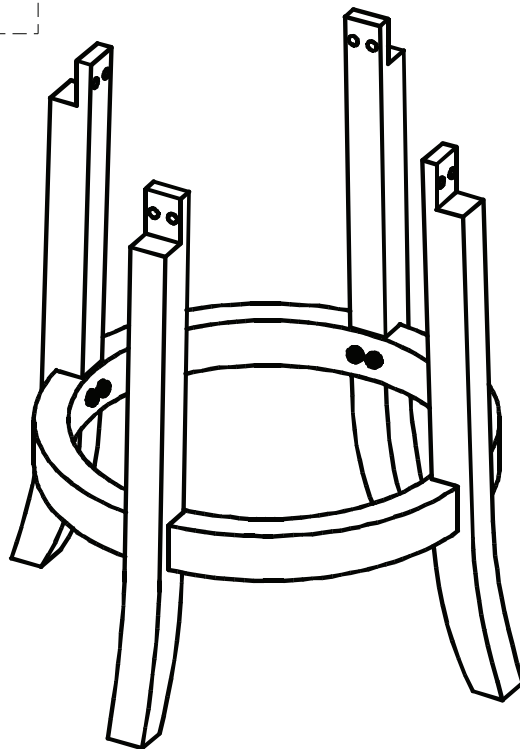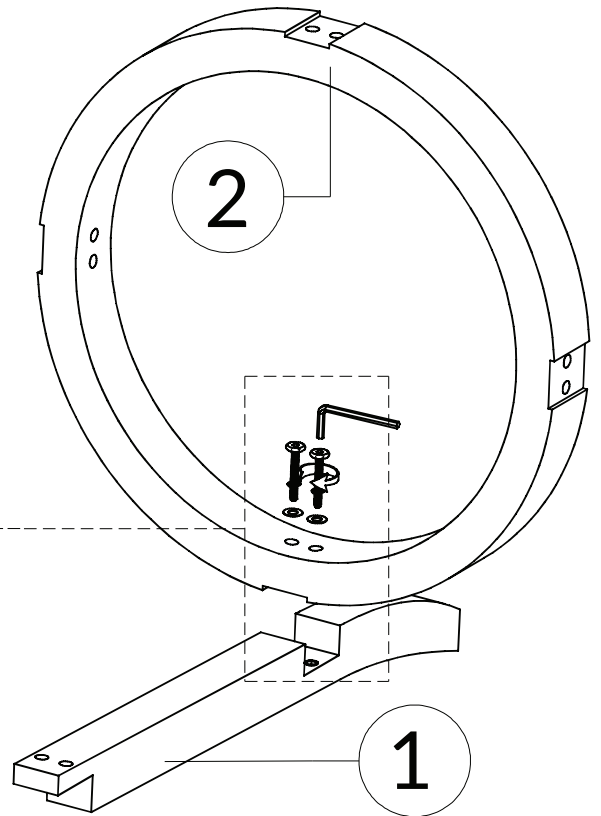

Hardware	Count
A	8
B	8
D	8
E	1

DO NOT TIGHTEN BOLT COMPLETELY.


02

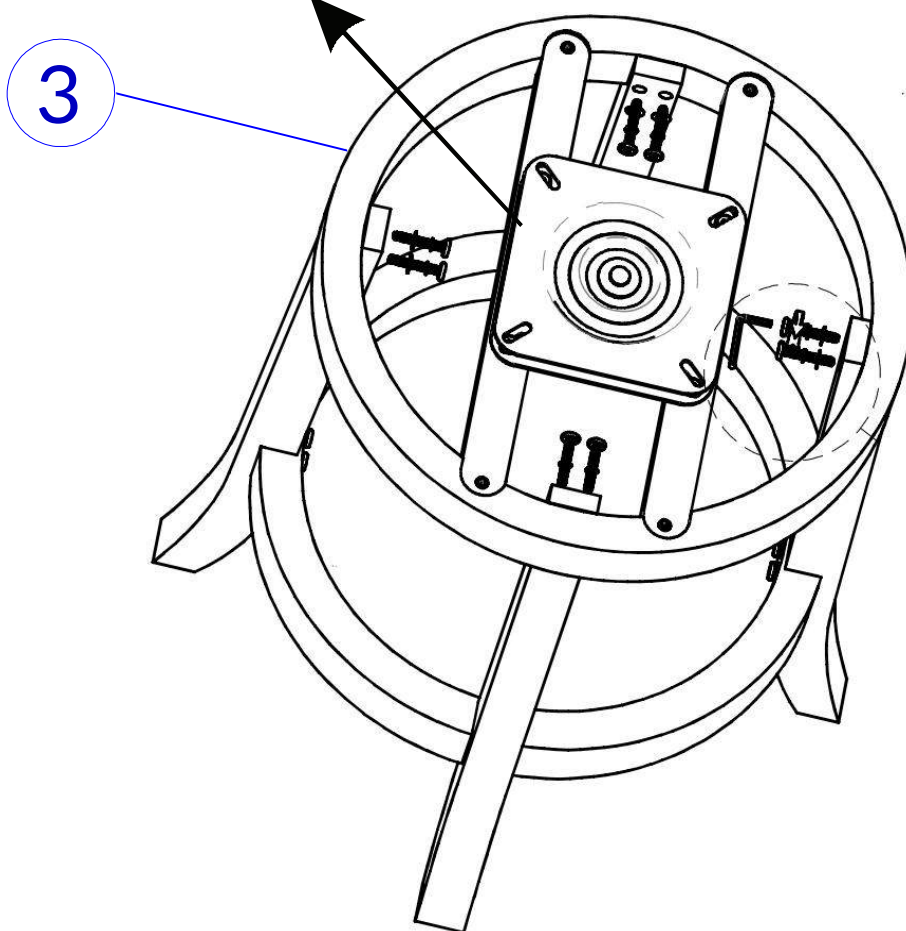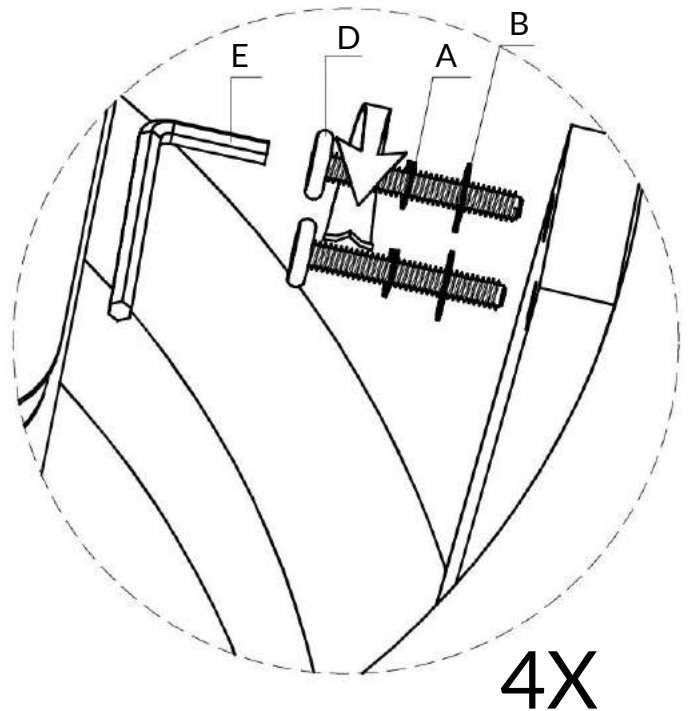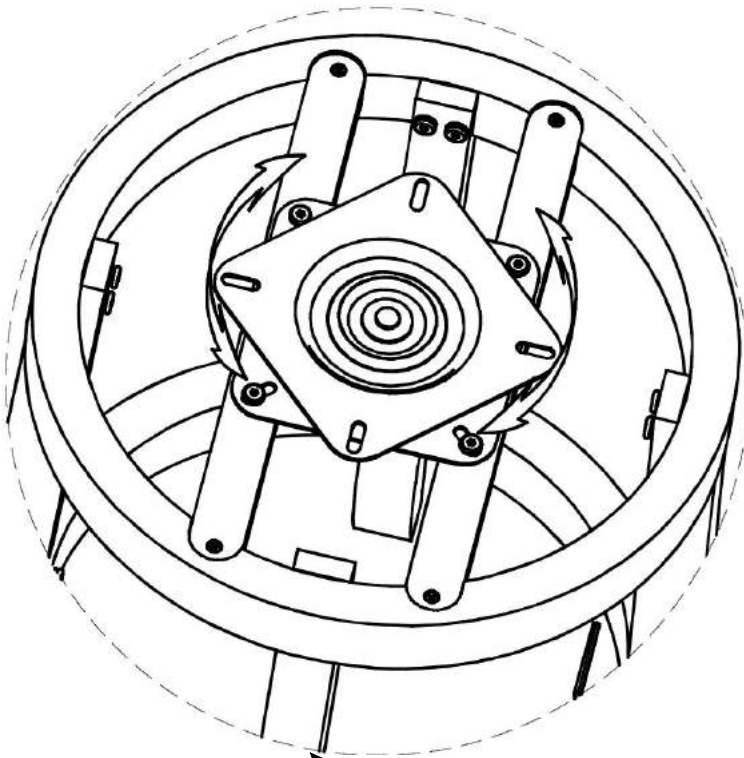

Hardware	Count
A	8
B	8
D	8
E	1


TIGHTEN BOLT COMPLETELY.

03

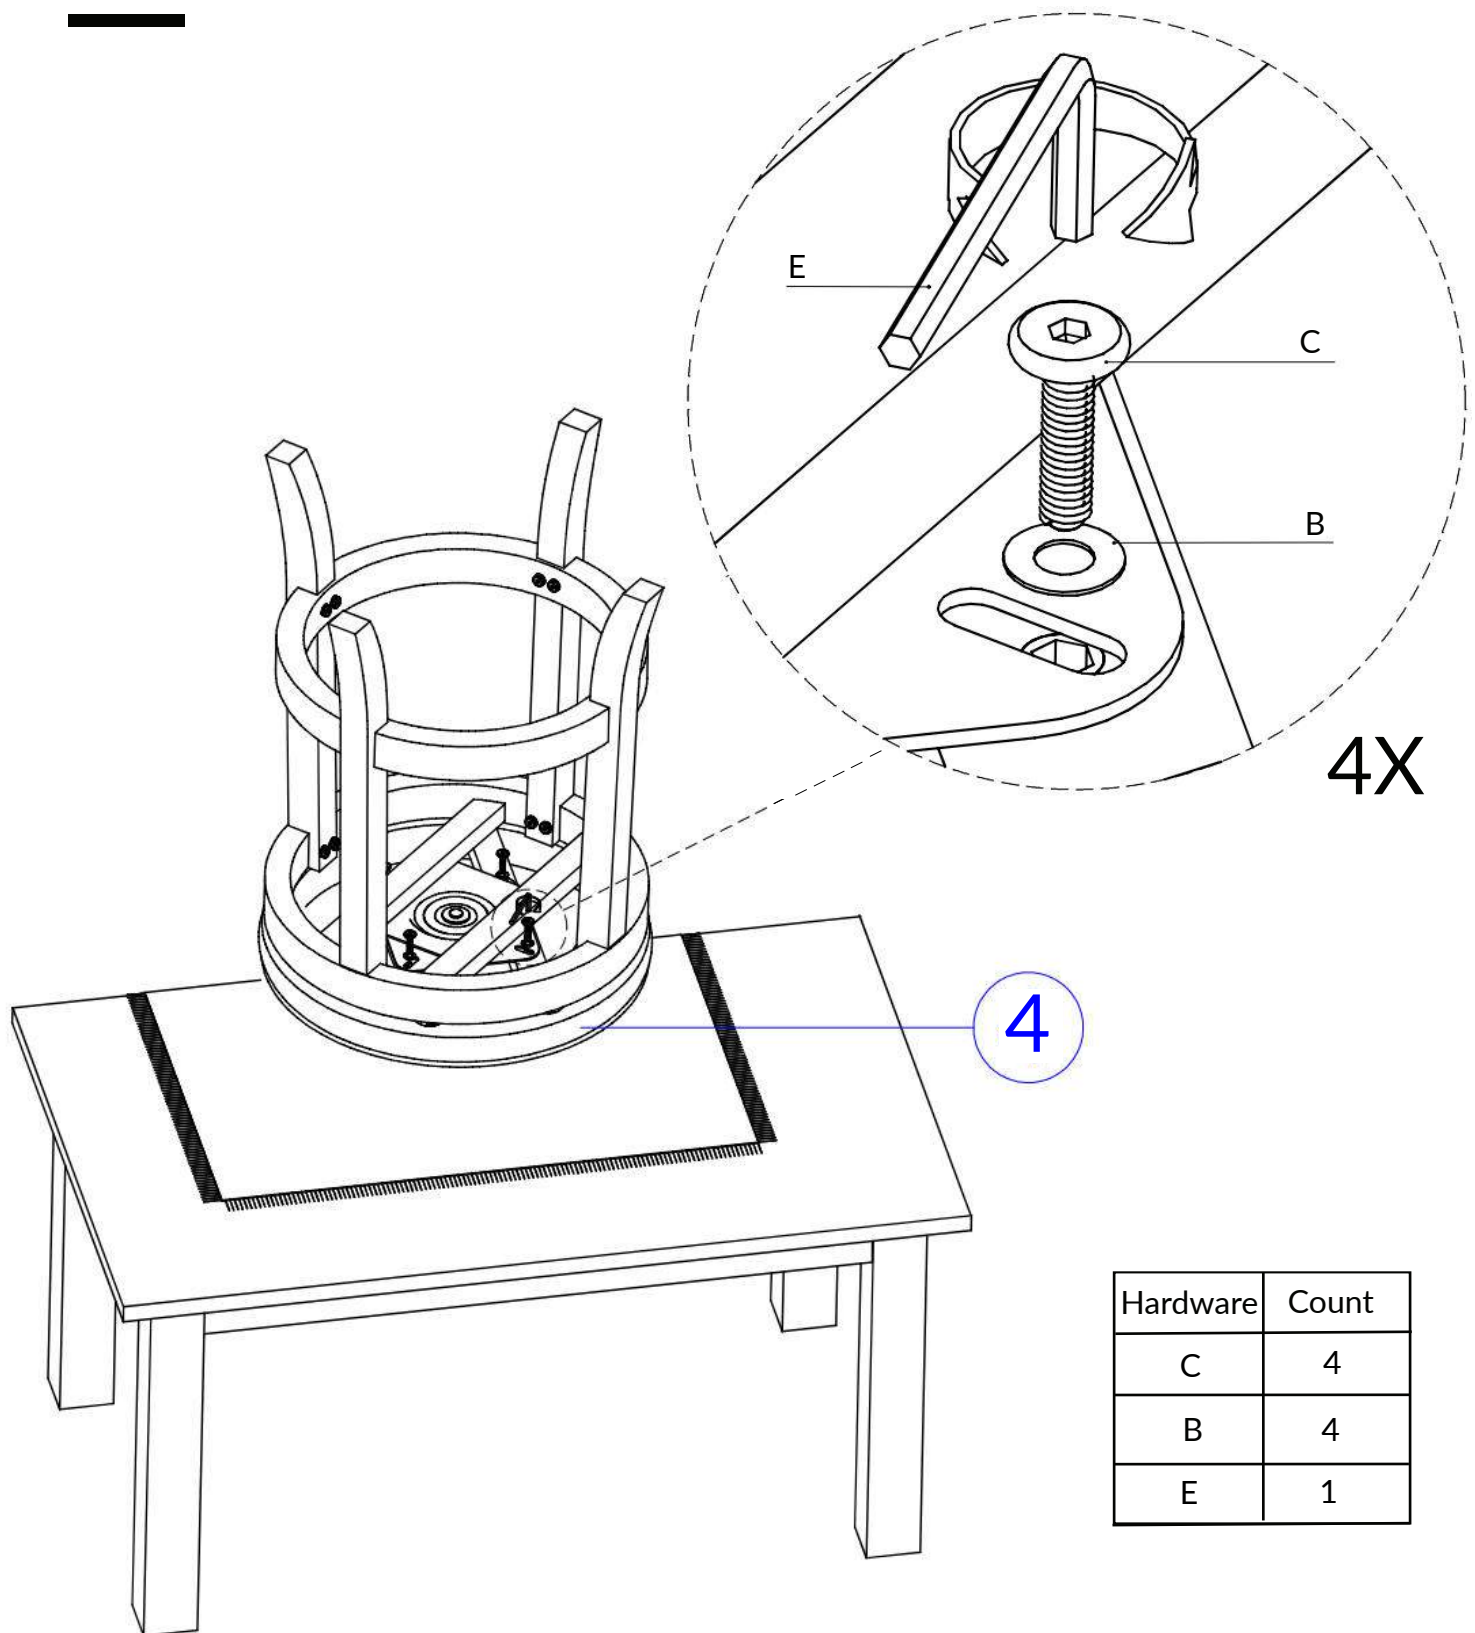


Hardware	Count
C	4
B	4
E	1

TIGHTEN BOLT COMPLETELY.

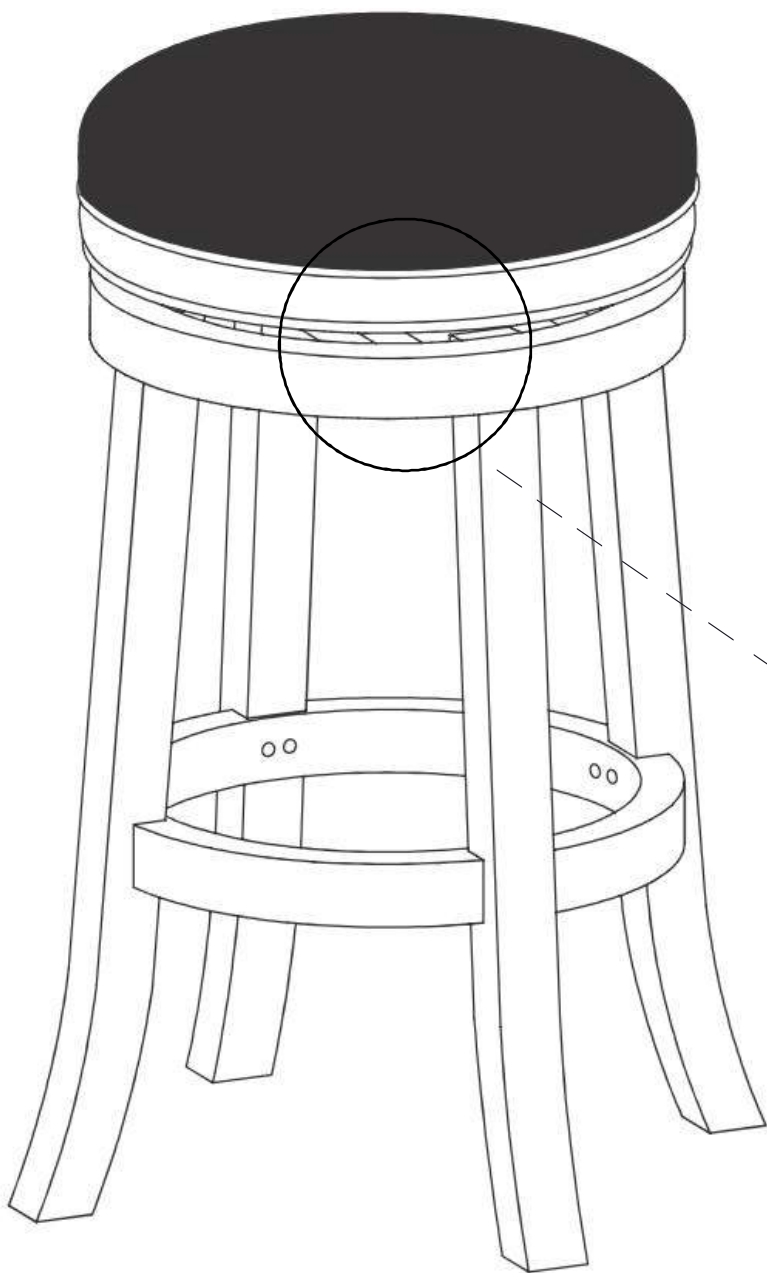

Weight Capacity

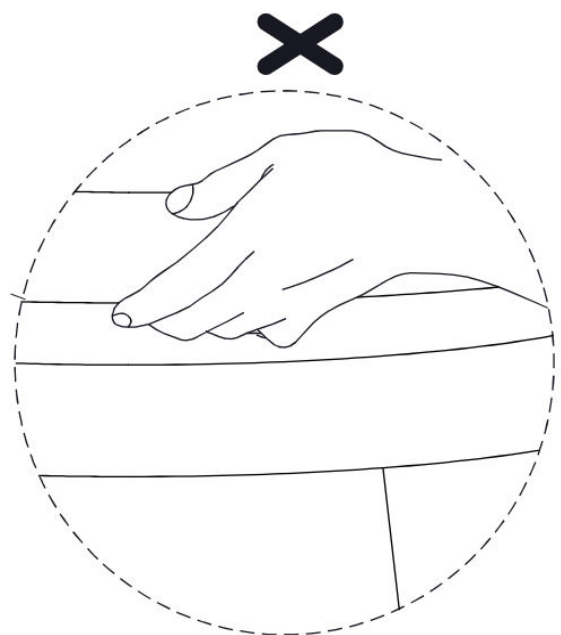

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.