




Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 22032,21031 | BLOOMINGTON DINING CHAIR

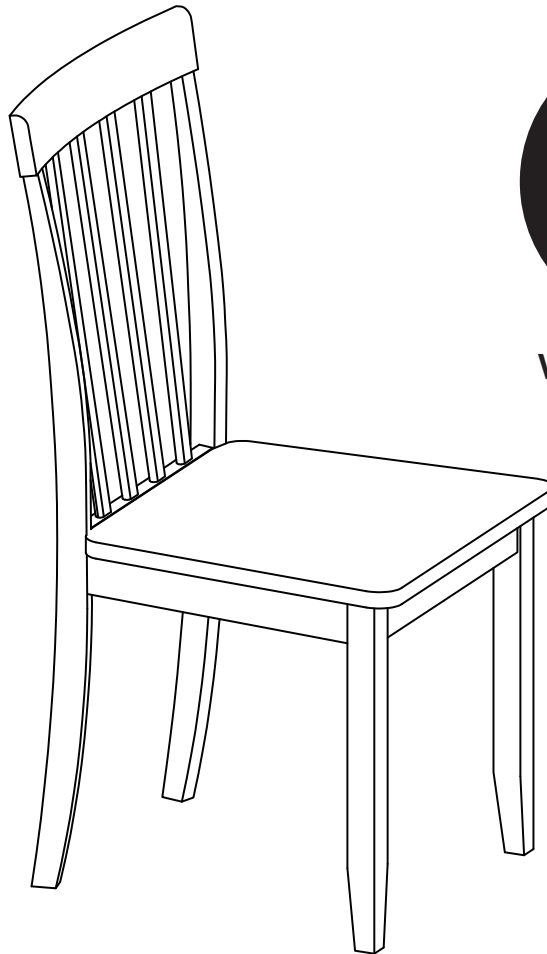

Weight Capacity



Locate the
HARDWARE PACK
which is attached to
the shipping carton
with red tape.

01/2024



Have questions about
assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com







www.boraamindustries.com

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.






Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

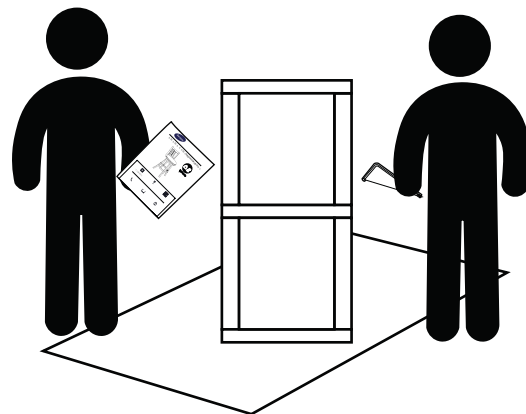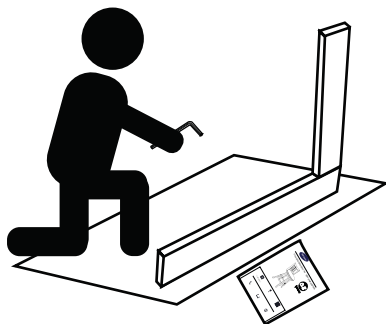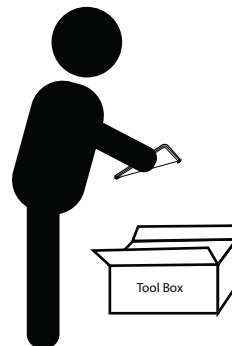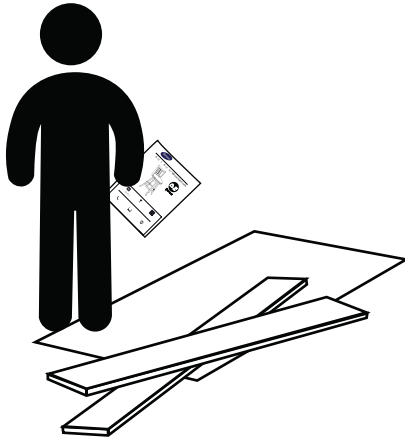


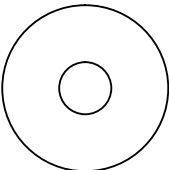




Assembly Overview

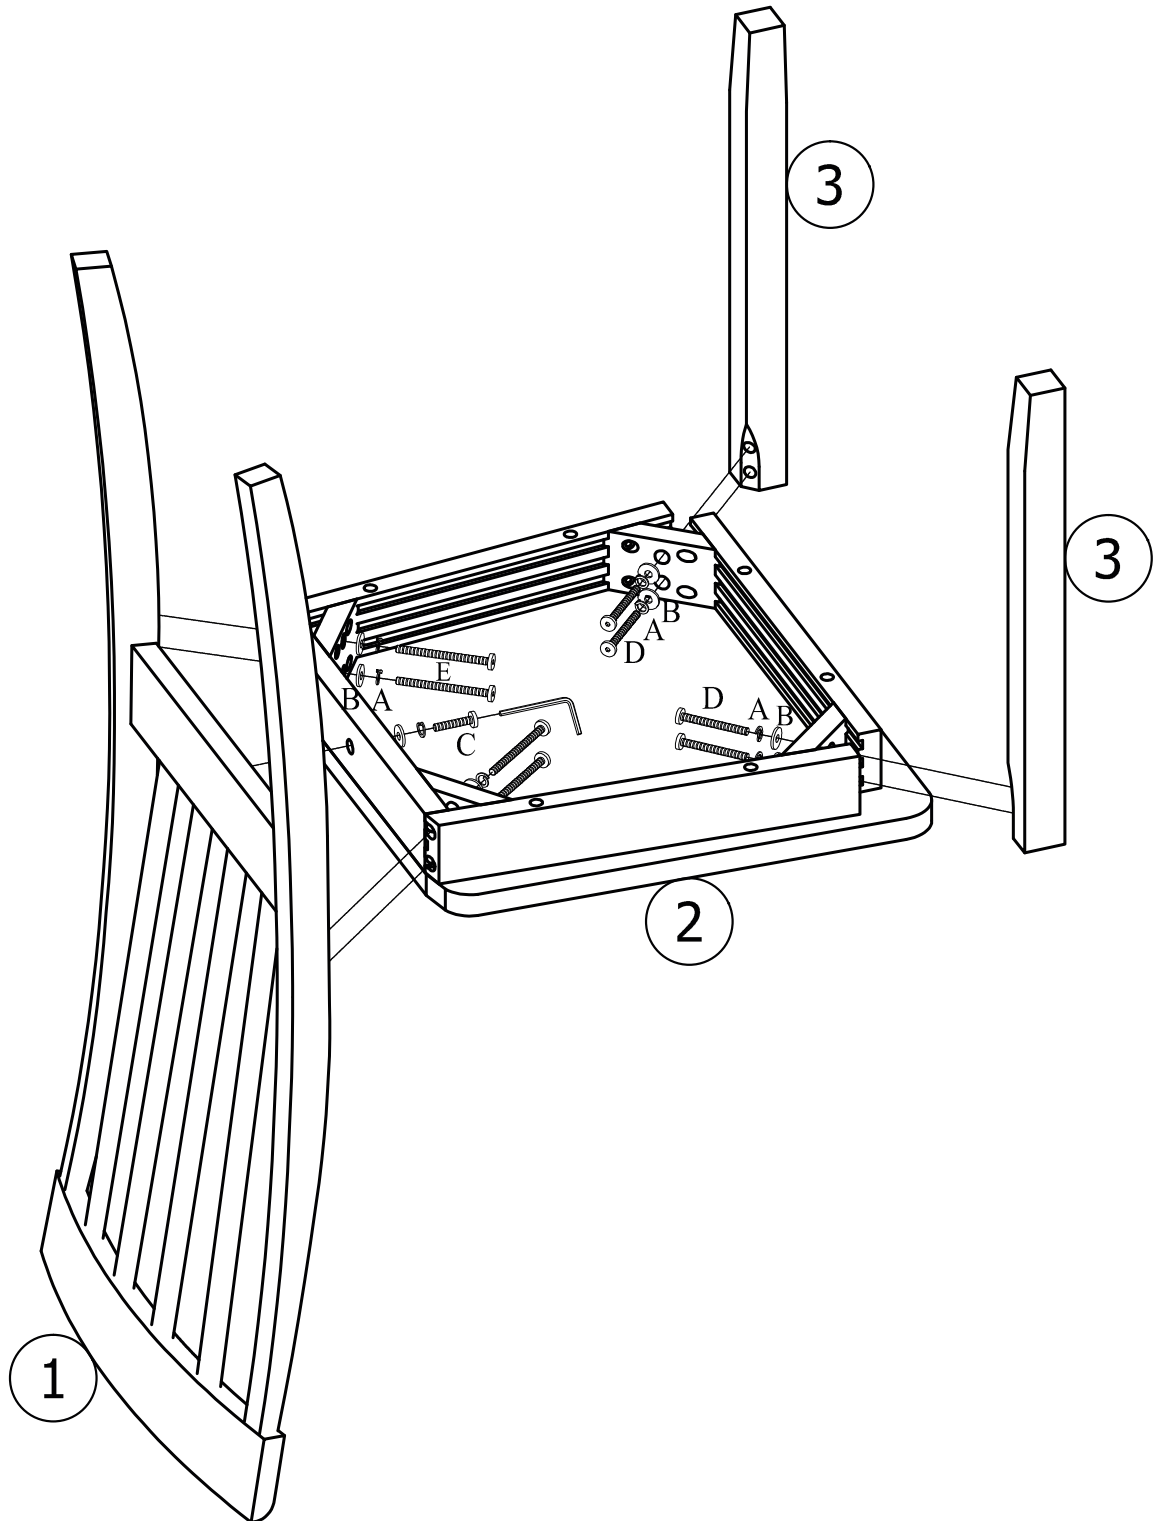


PARTS
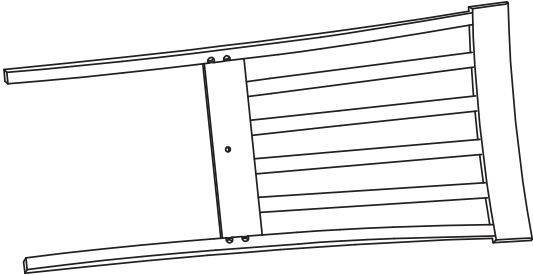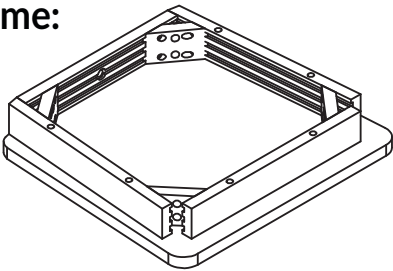
<div>① (x1)</div> <div>Chair Back:</div> 	
<div>② (x1)</div> <div>Seat Frame:</div> 	<div>③ (x2)</div> <div>Leg:</div> 

HARDWARE

① (x9)	② (x9)	③ (x1)	④ (x4)	⑤ (x4)	⑥ (x1)
					
Spring Washer	Flat Washer	Bolt M6x35	Bolt M6x60	Bolt M6x80	Allen Wrench


01

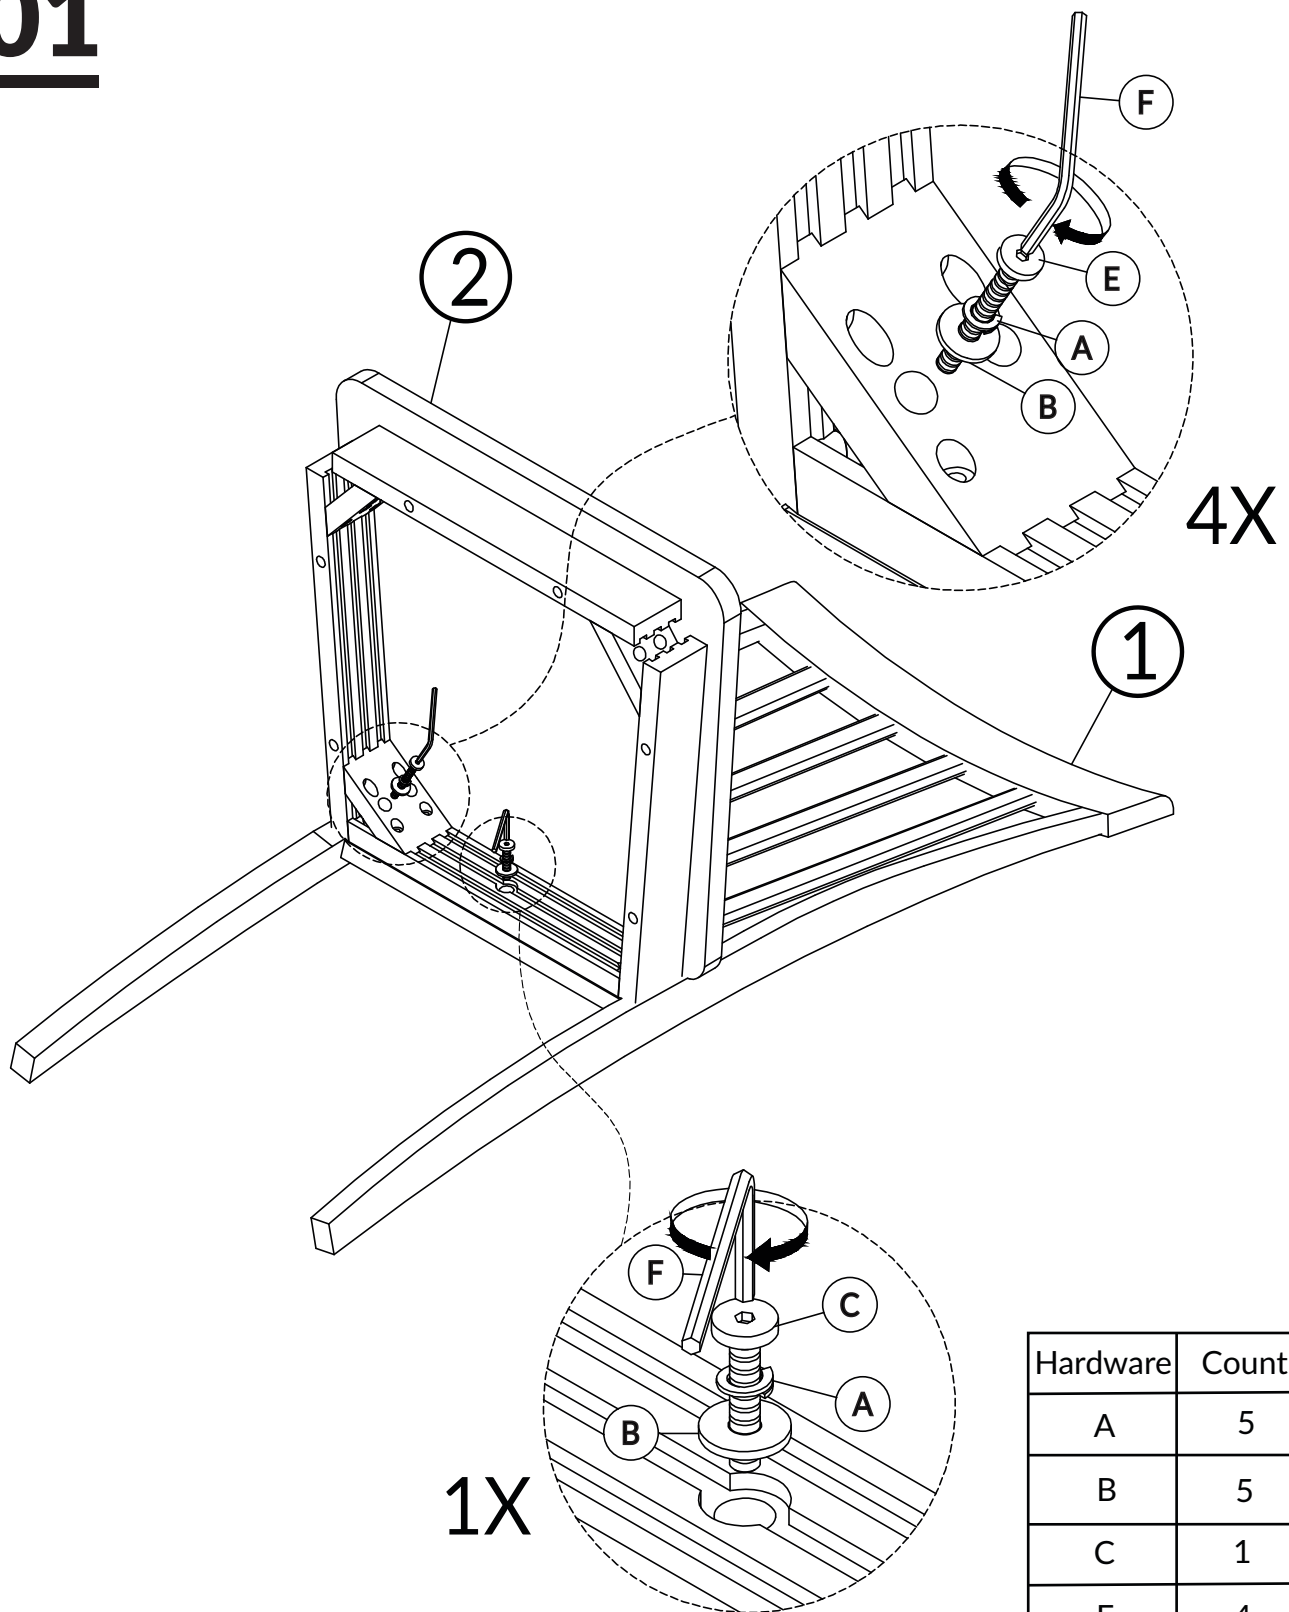

Hardware	Count
A	5
B	5
C	1
E	4
F	1


TIGHTEN BOLT COMPLETELY.

02

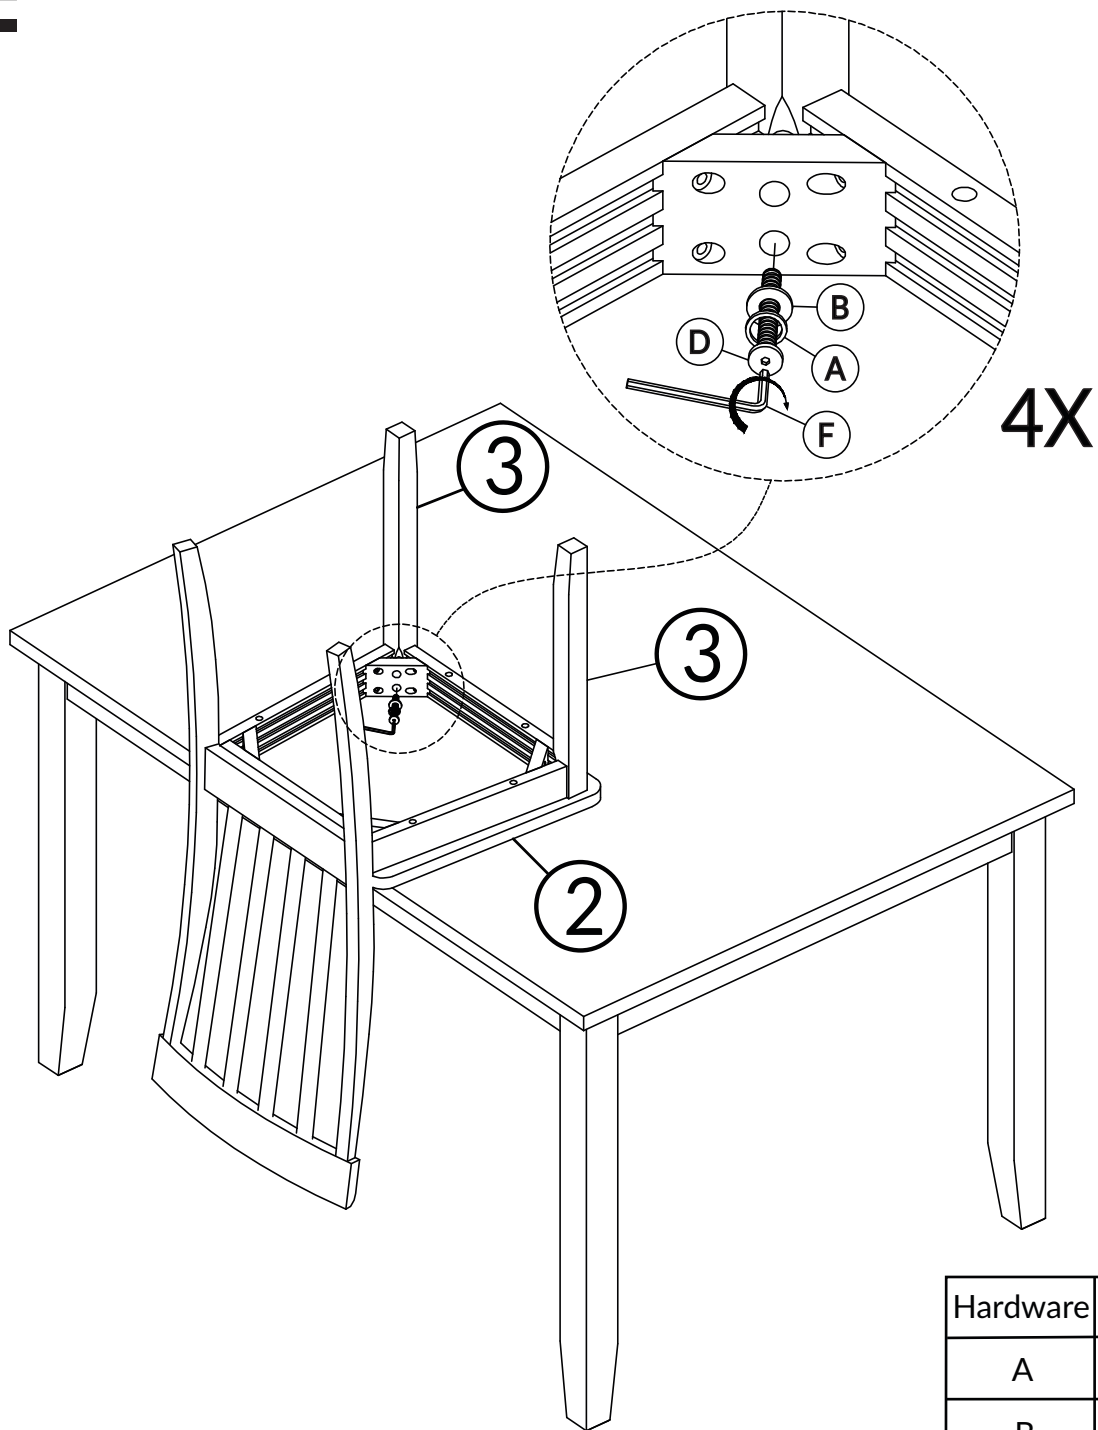

Hardware	Count
A	4
B	4
D	4
F	1

TIGHTEN BOLT COMPLETELY.

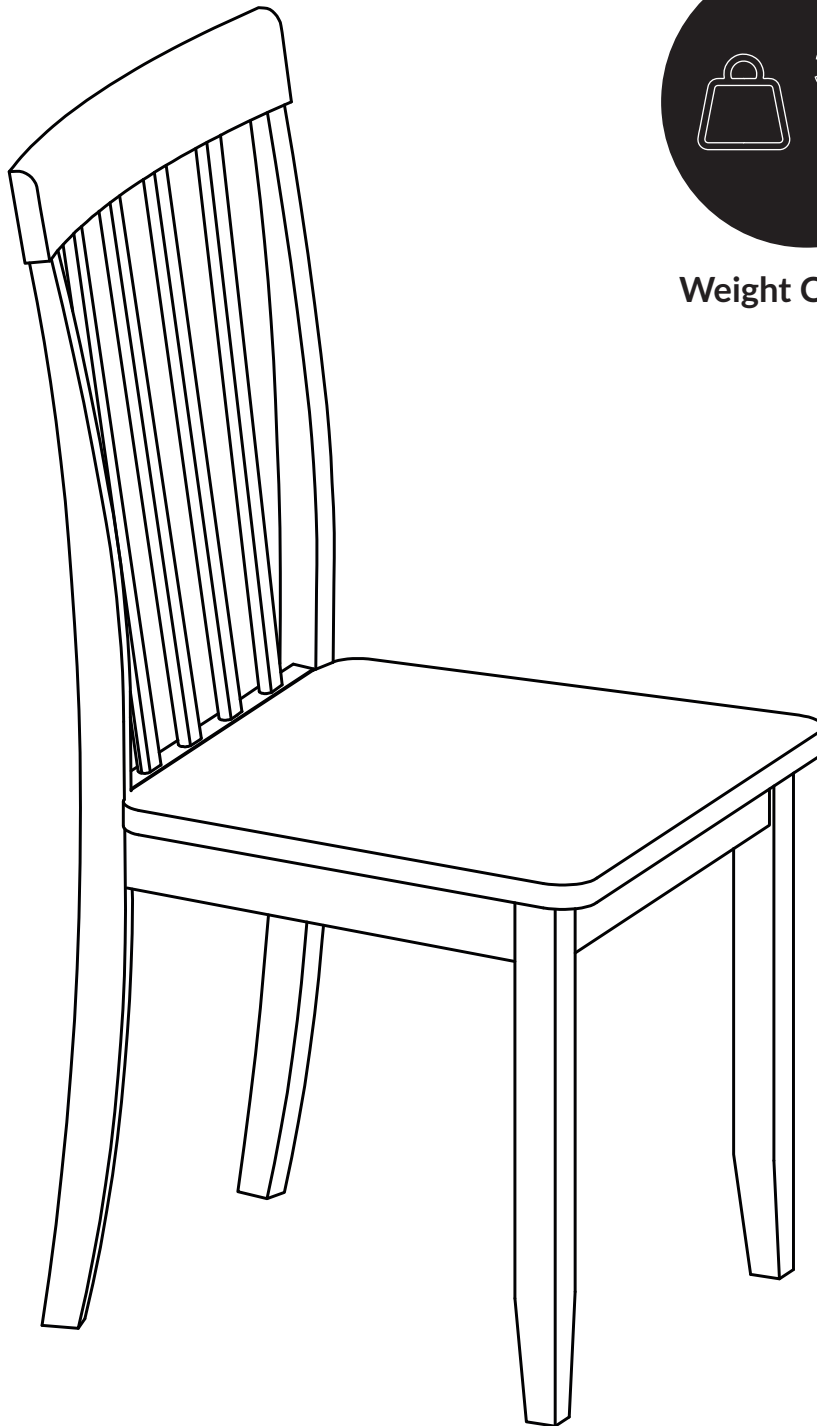

Weight Capacity

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.