



Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 31616 | CAROLINA DINING CHAIR



Weight Capacity



Locate the
HARDWARE PACK
which is attached to
the shipping carton
with red tape.

12/2024



Have questions about
assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com



www.boraamindustries.com







Philips screwdriver
not included.

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.











Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

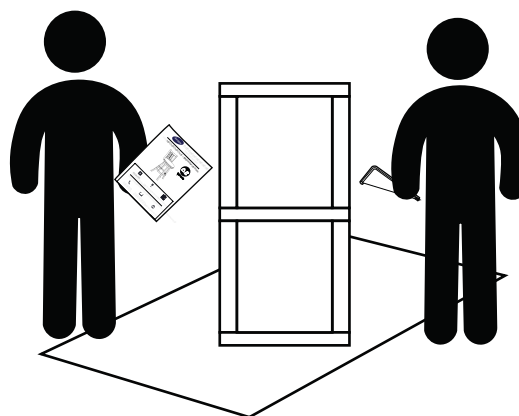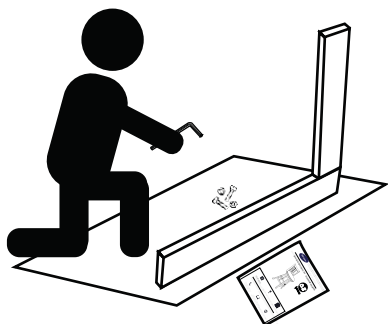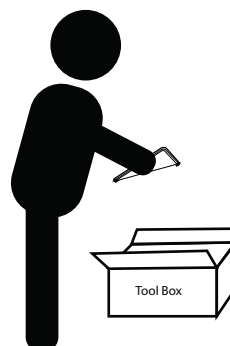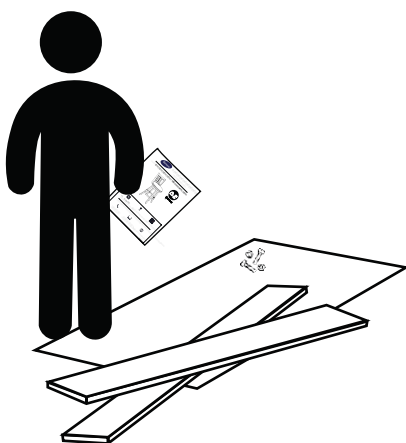






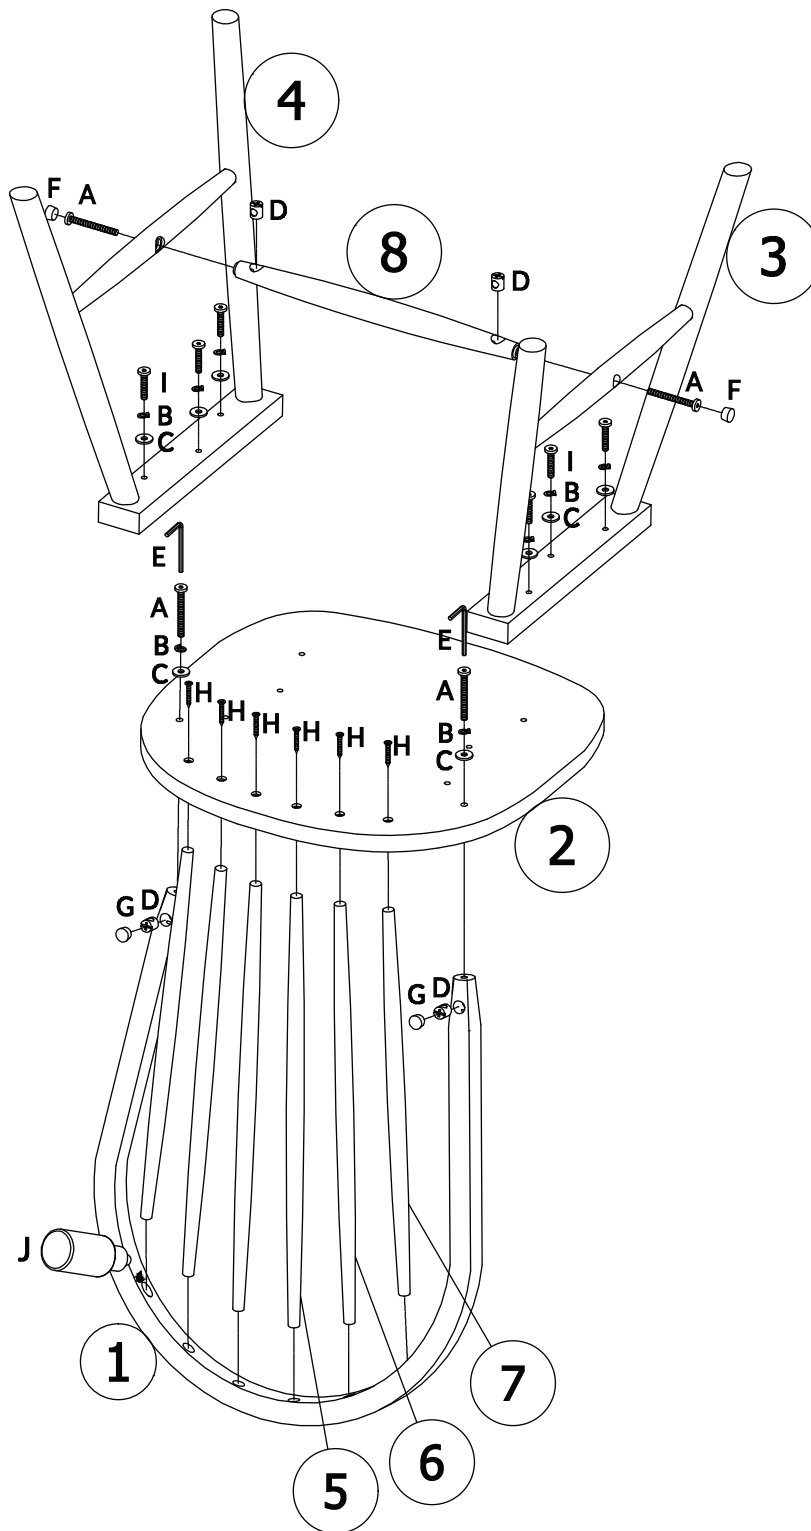Assembly Overview







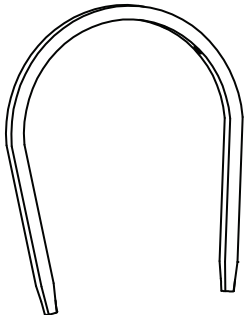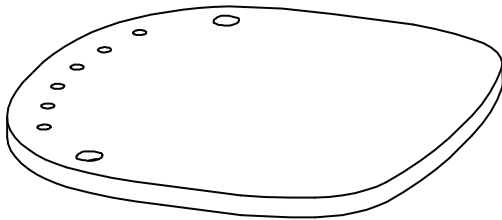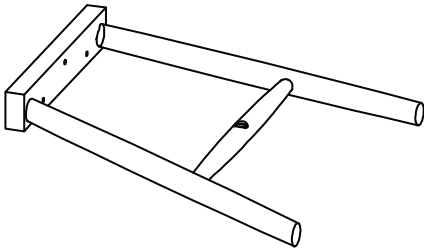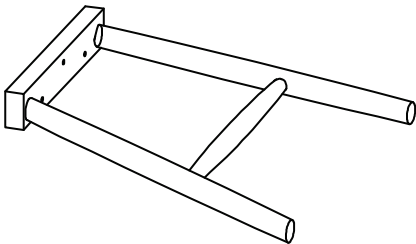
PARTS


<p>① (x1)</p> <p>Hoop:</p> 	<p>② (x1)</p> <p>Seat:</p> 
<p>③ (x1)</p> <p>Leg Frame-Left:</p> 	<p>④ (x1)</p> <p>Leg Frame-Right:</p> 
<p>⑤ (x2)</p> <p>Long Spindle:</p> 	<p>⑥ (x2)</p> <p>Medium Spindle:</p> 
<p>⑦ (x2)</p> <p>Short Spindle:</p> 	<p>⑧ (x1)</p> <p>Crossbar:</p> 

HARDWARE


Ⓐ (x4)	Ⓑ (x8)	Ⓒ (x8)	Ⓓ (x4)	Ⓔ (x1)
				
Bolt M6x60	Spring Washer	Flat Washer	Barrel Nut M6x13	Allen Wrench

Ⓕ (x2)	Ⓖ (x2)	Ⓗ (x6)	Ⓘ (x6)	Ⓝ (x1)
				
Wood Button	Wood Button	Screw M4x30	Bolt M6x35	Glue Tube


01

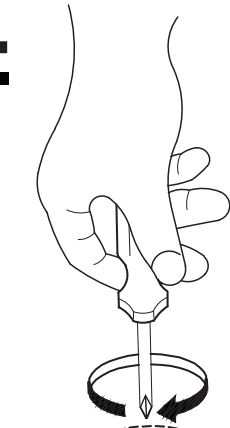

Do not use Power Tools
to assemble.

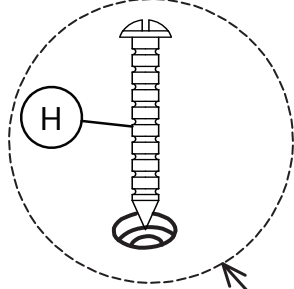


6X

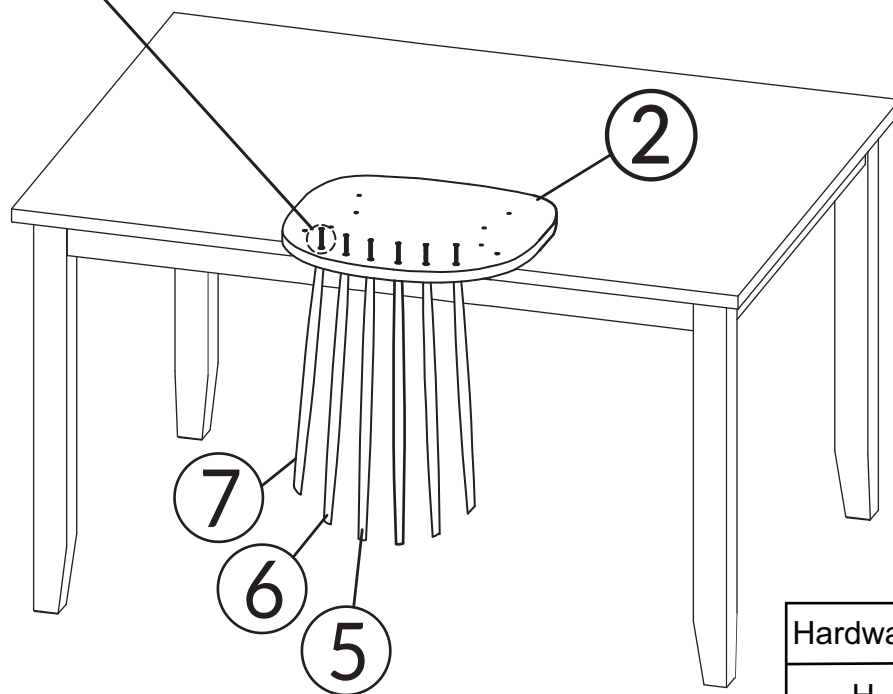


Hardware	Count
H	6

02

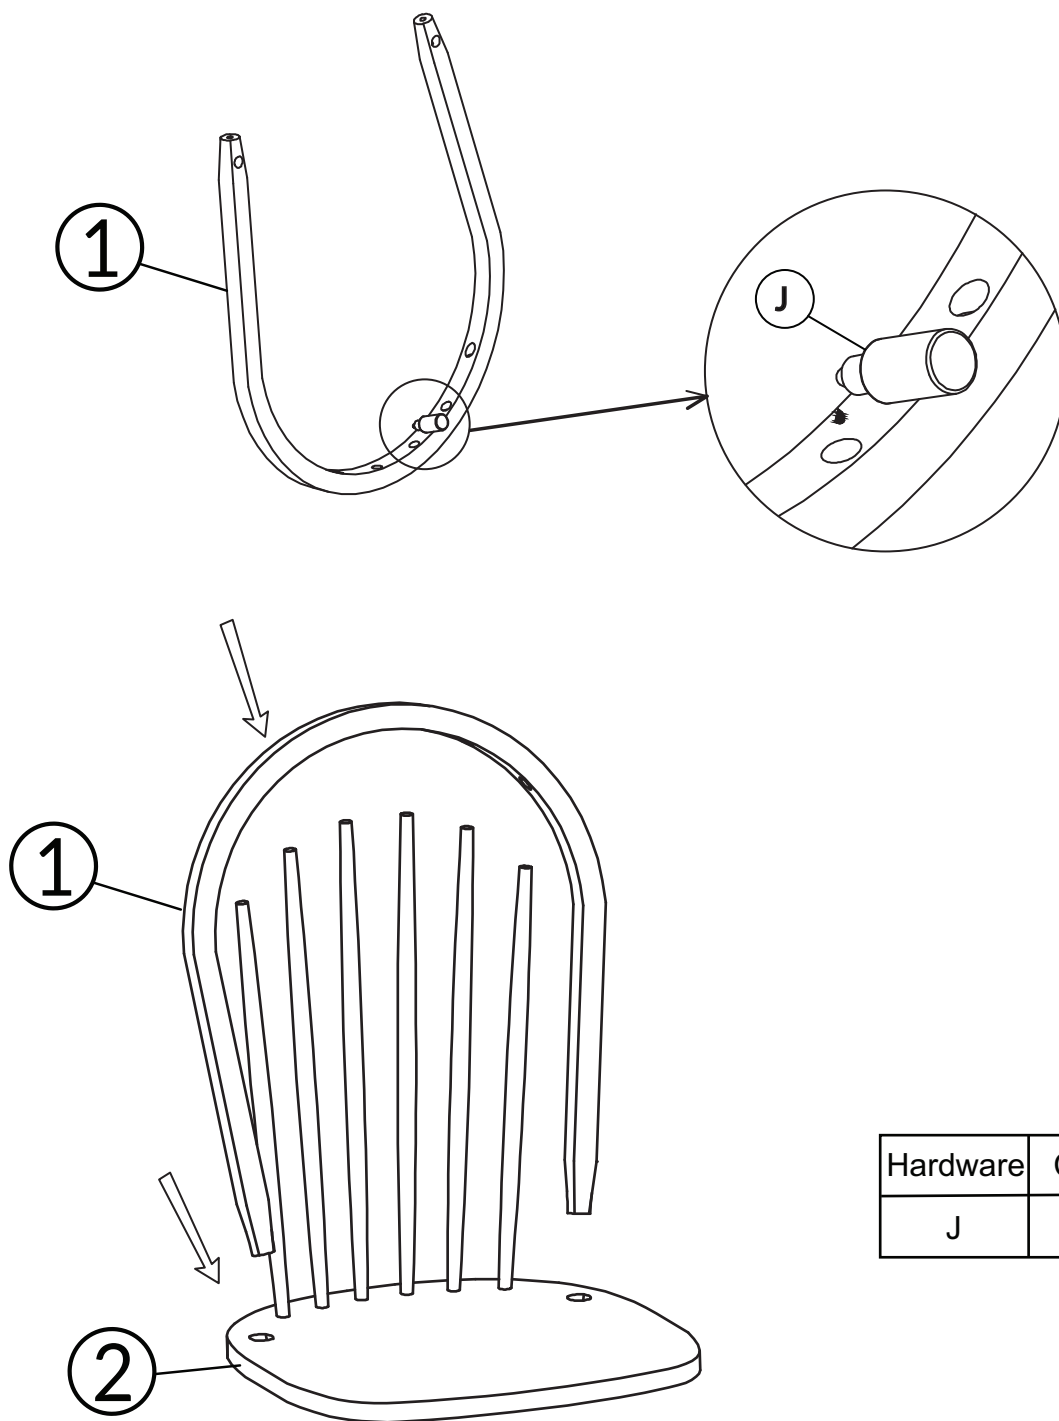


Hardware	Count
J	1

03

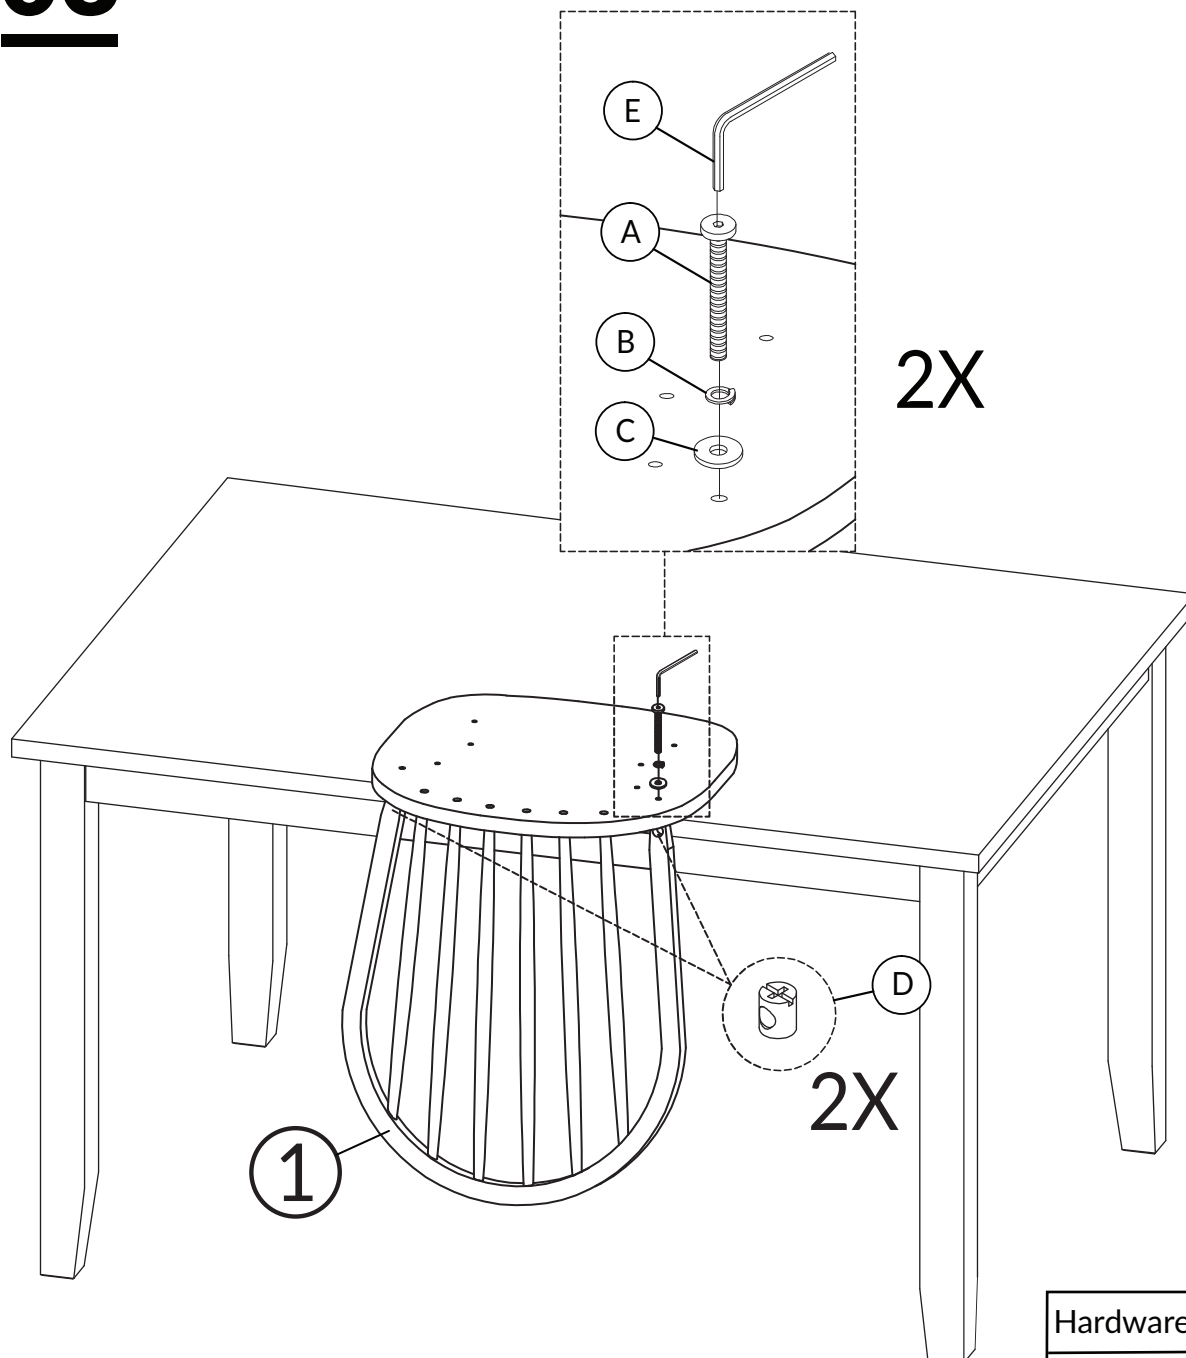

Hardware	Count
A	2
B	2
C	2
D	2
E	1


04

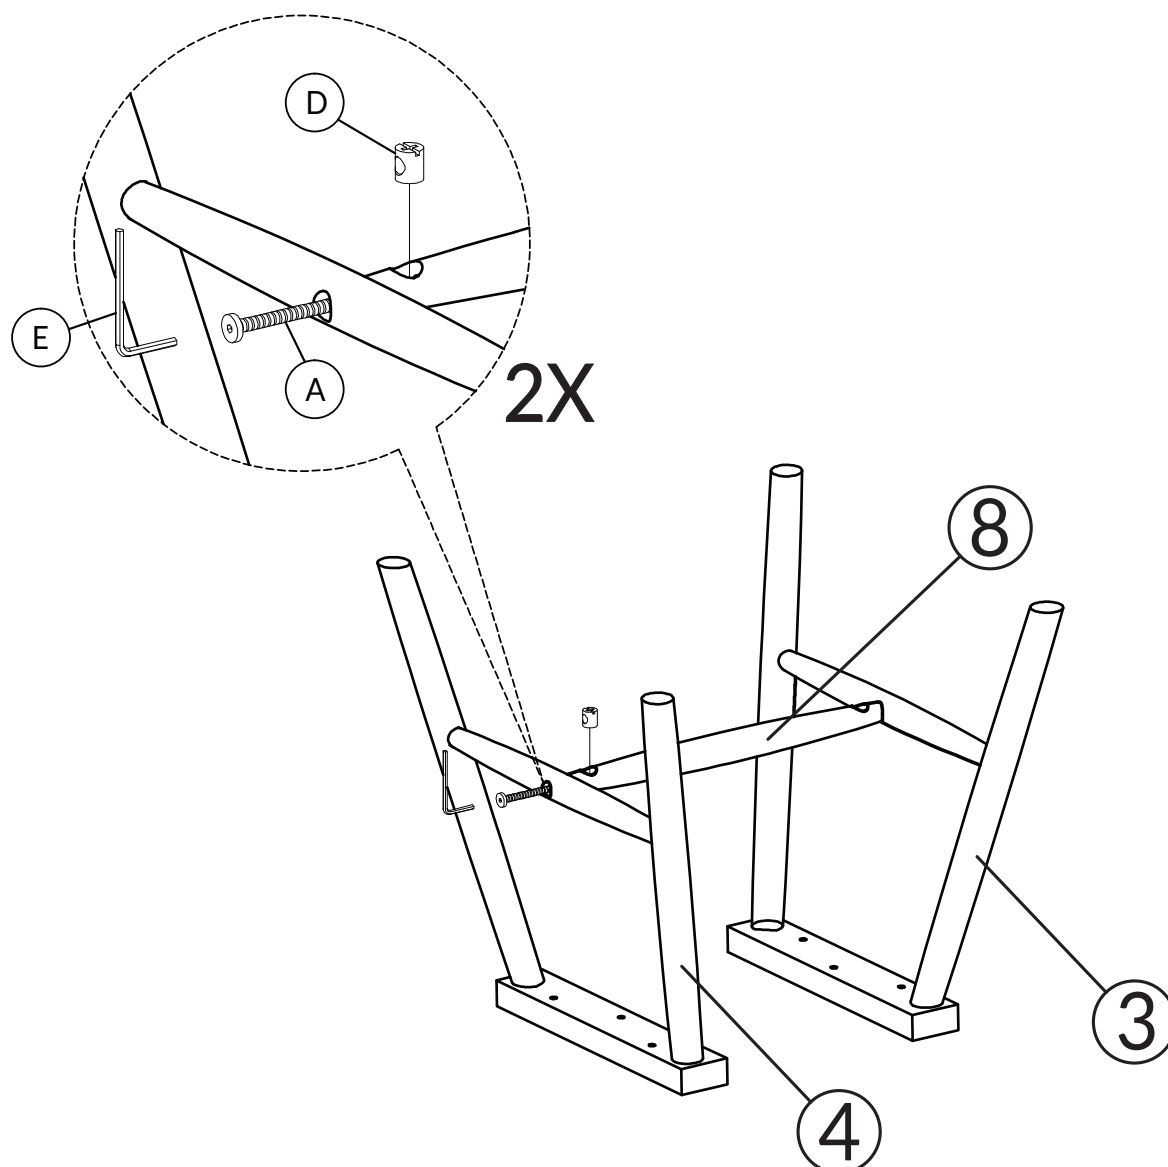

Hardware	Count
A	2
D	2
E	1

DO NOT TIGHTEN BOLT COMPLETELY.

05

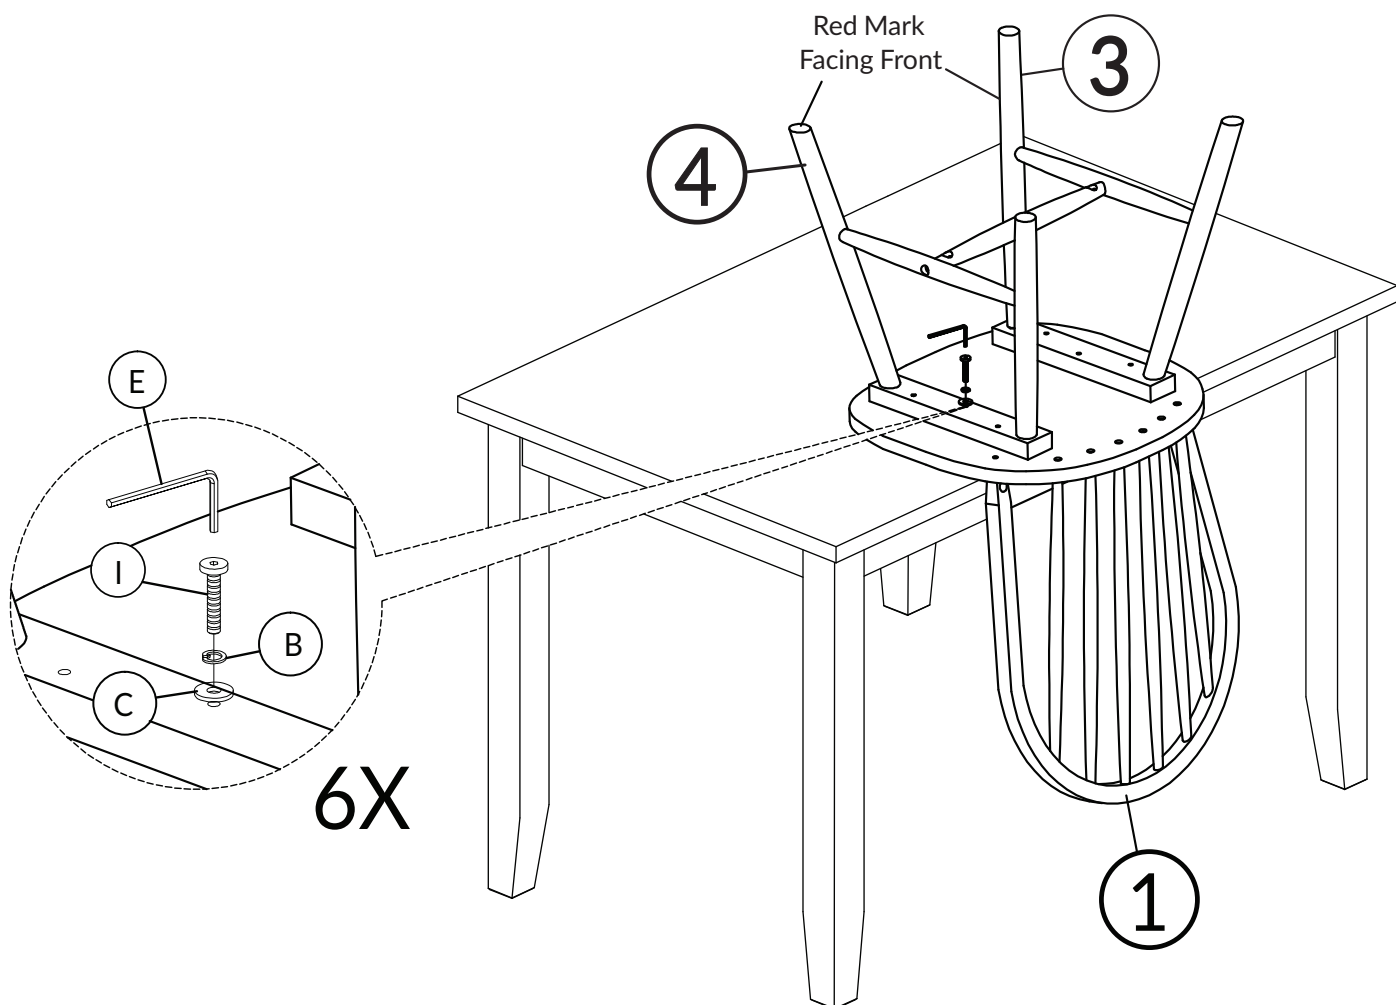


Hardware	Count
I	6
B	6
C	6
E	1




Scan the QR code for a video explaining this step.

TIGHTEN BOLT COMPLETELY.

06

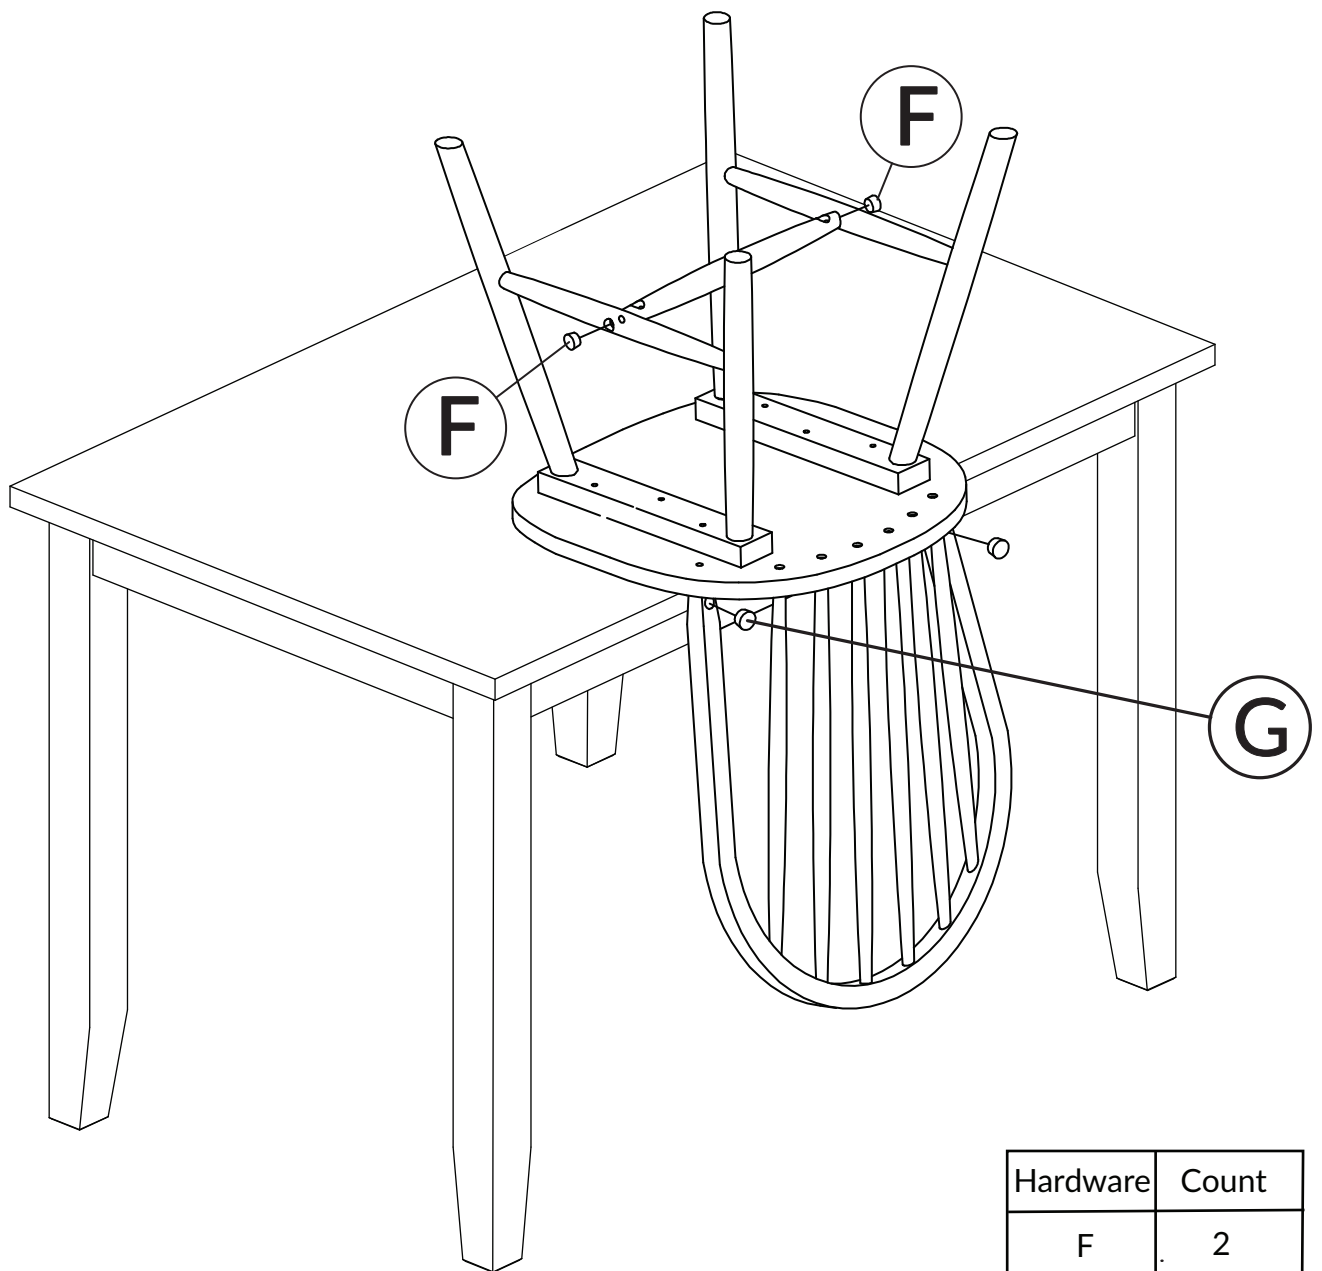

Hardware	Count
F	2
G	2

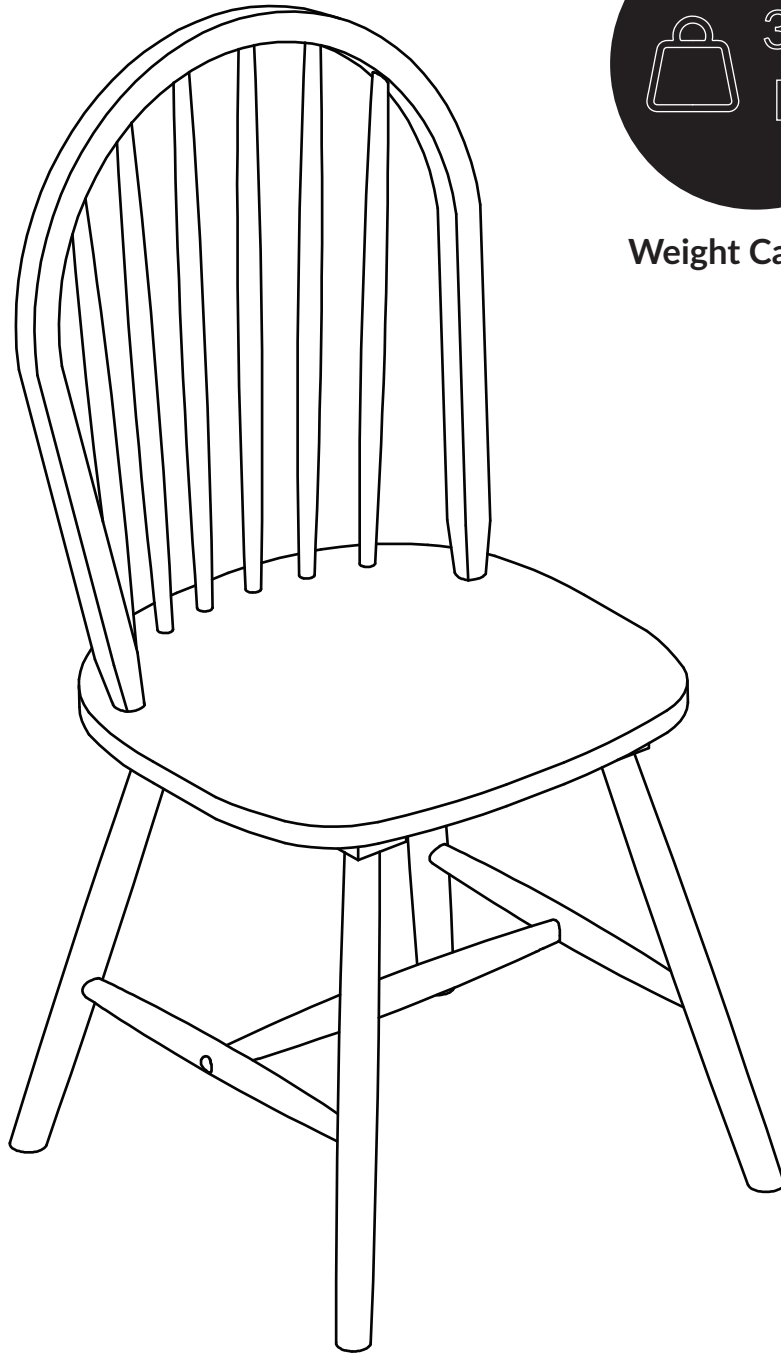

Weight Capacity

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.

847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com