




Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 71142,71242,71342,71442

71542,71642,71742,71842,71942

FLORENCE PUB TABLE

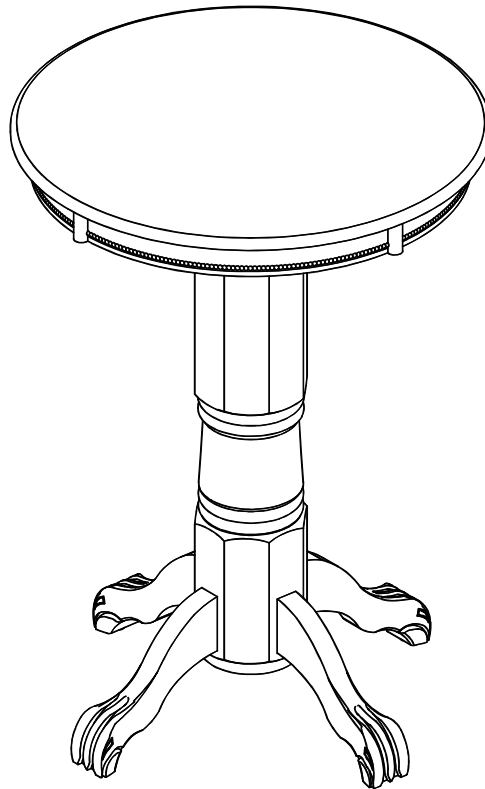

Weight Capacity



Locate the
HARDWARE PACK
which is attached to
the shipping carton
with red tape.

01/2024



Have questions about
assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com







www.boraamindustries.com

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.







Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

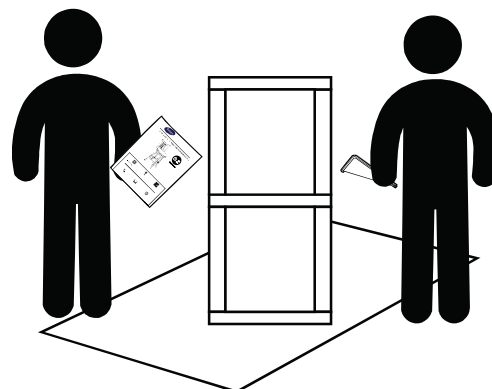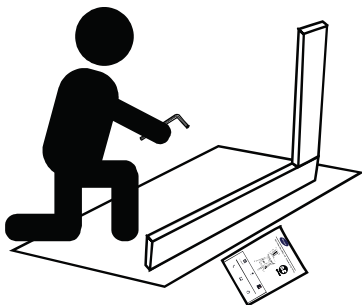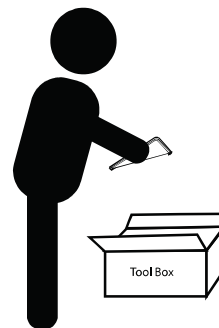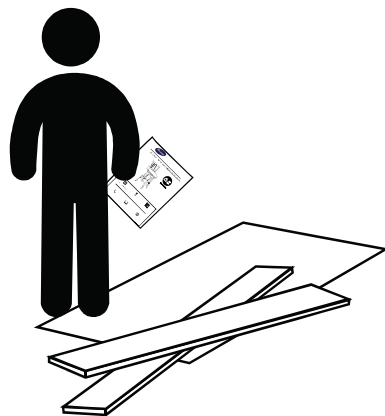


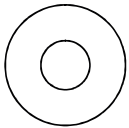


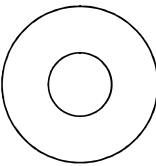


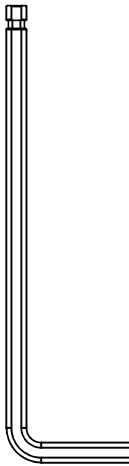
Assembly Overview

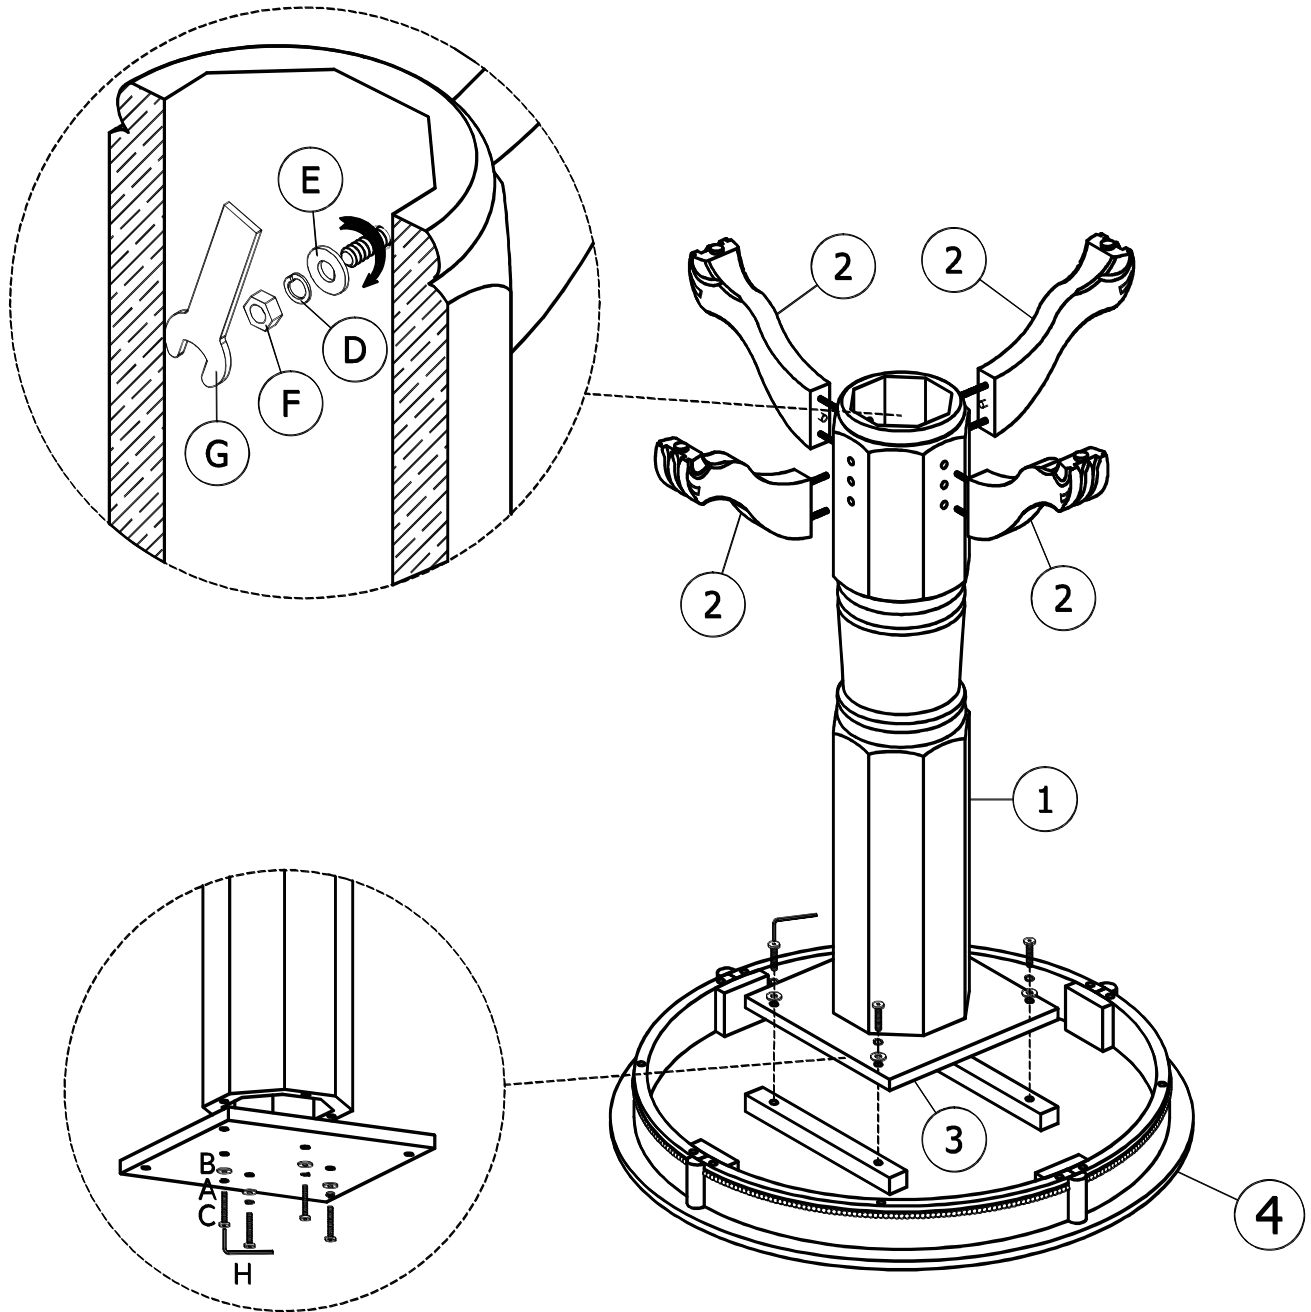


PARTS
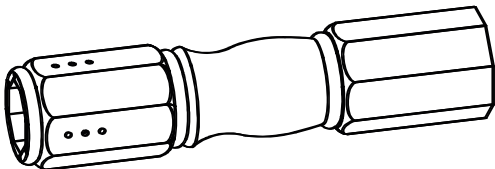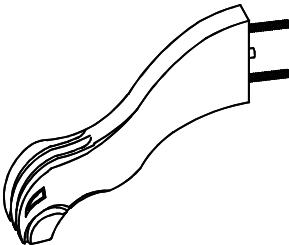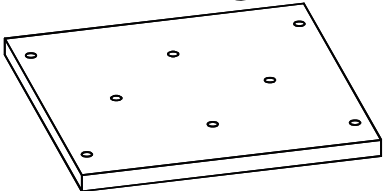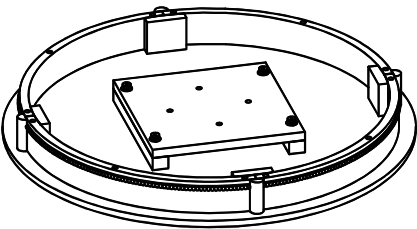
<p>① (x1)</p> <p>Pedestal:</p> 	<p>② (x4)</p> <p>Empire Leg:</p> 
<p>③ (x1)</p> <p>REMOVED FROM ④</p> 	<p>④ (x1)</p> <p>Top Panel:</p> 

HARDWARE



① (x4)	② (x4)	③ (x4)	④ (x8)	⑤ (x8)	⑥ (x8)	⑦ (x1)	⑧ (x1)
							
Spring Washer M6*10	Flat Washer M6*19	Bolt M6x45	Spring Washer M8*13	Flat Washer M8*19	Nut M8*13	Wrench K13*90	Allen Wrench M4*110

01

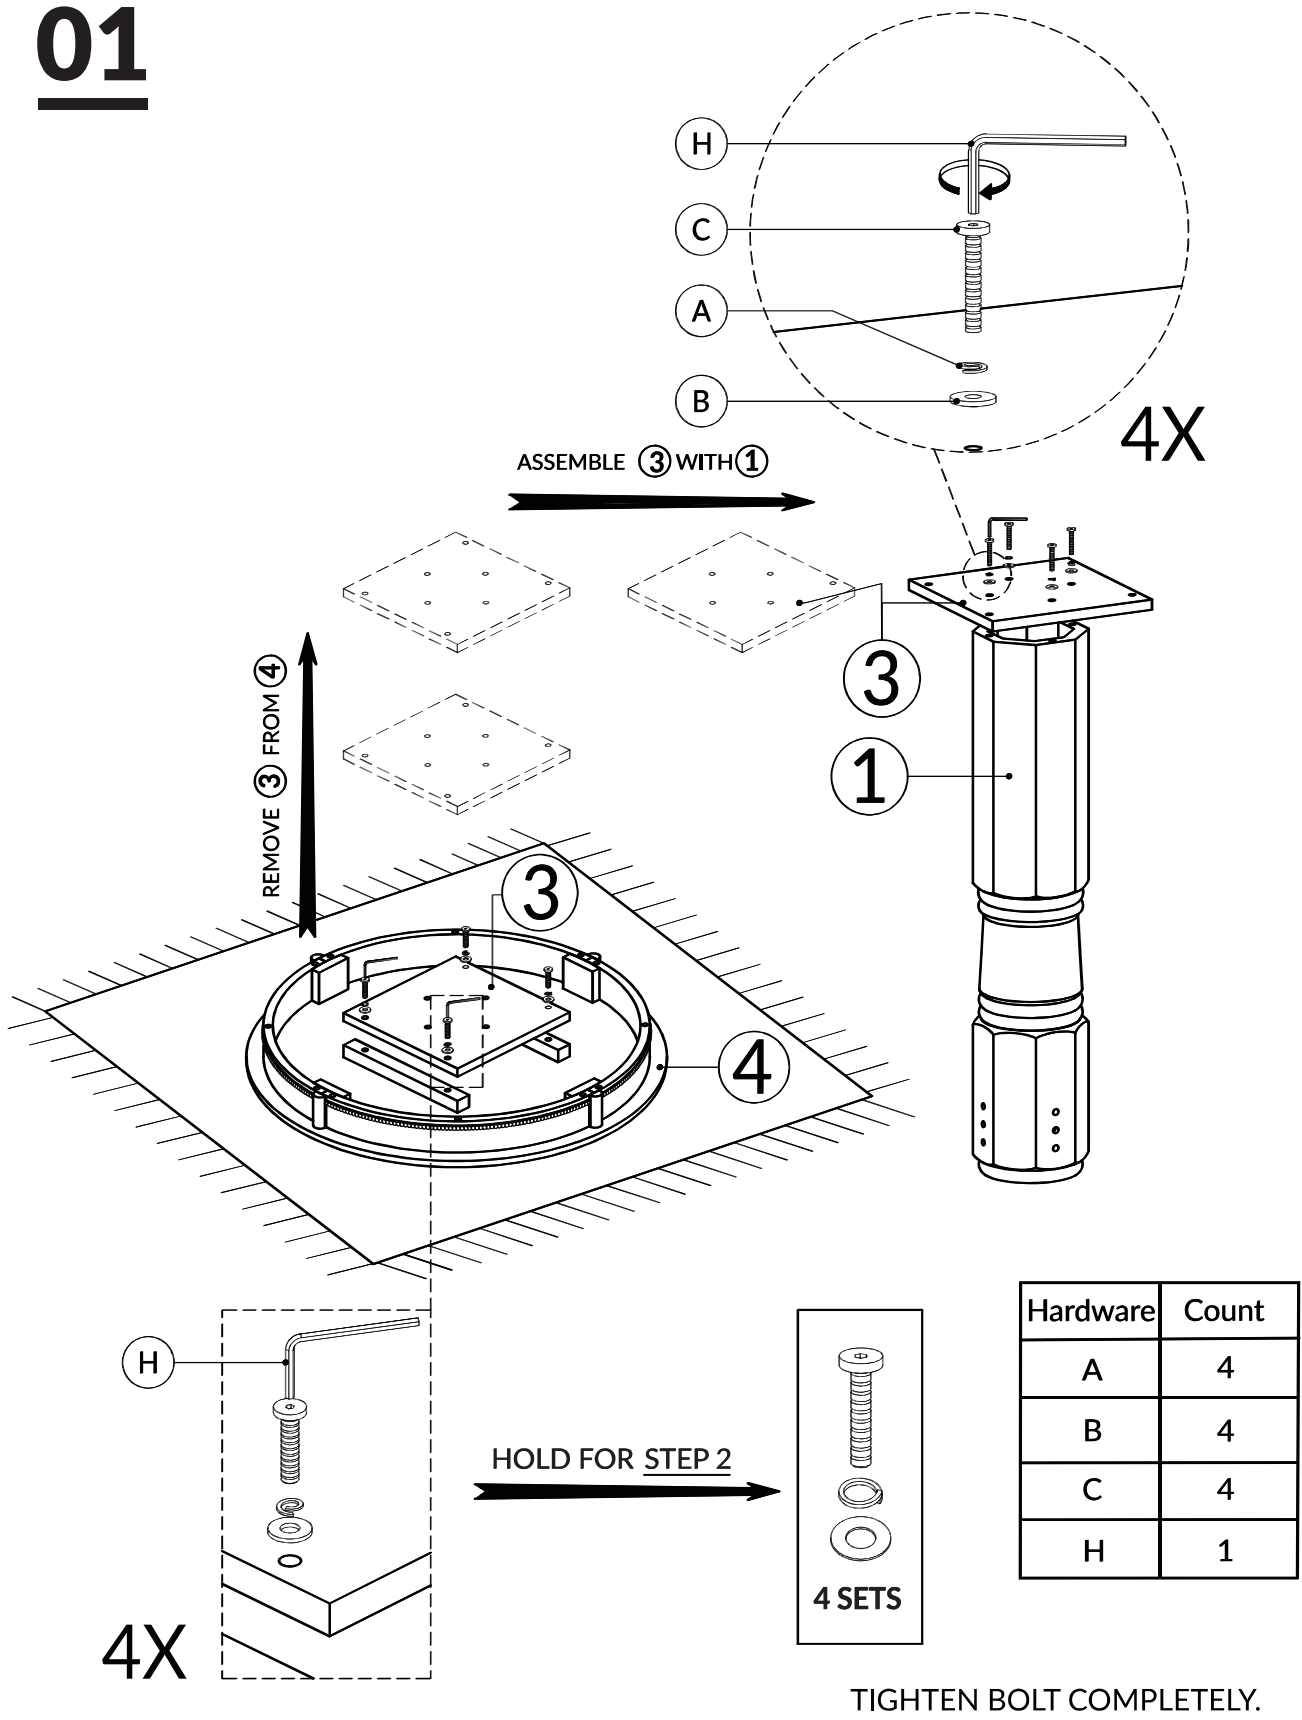

02


ASSEMBLY GROUP ③① INTO ④ BY
HARDWARE DISCONNECTED IN STEP 1

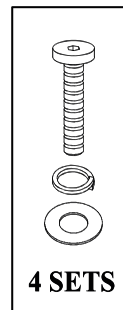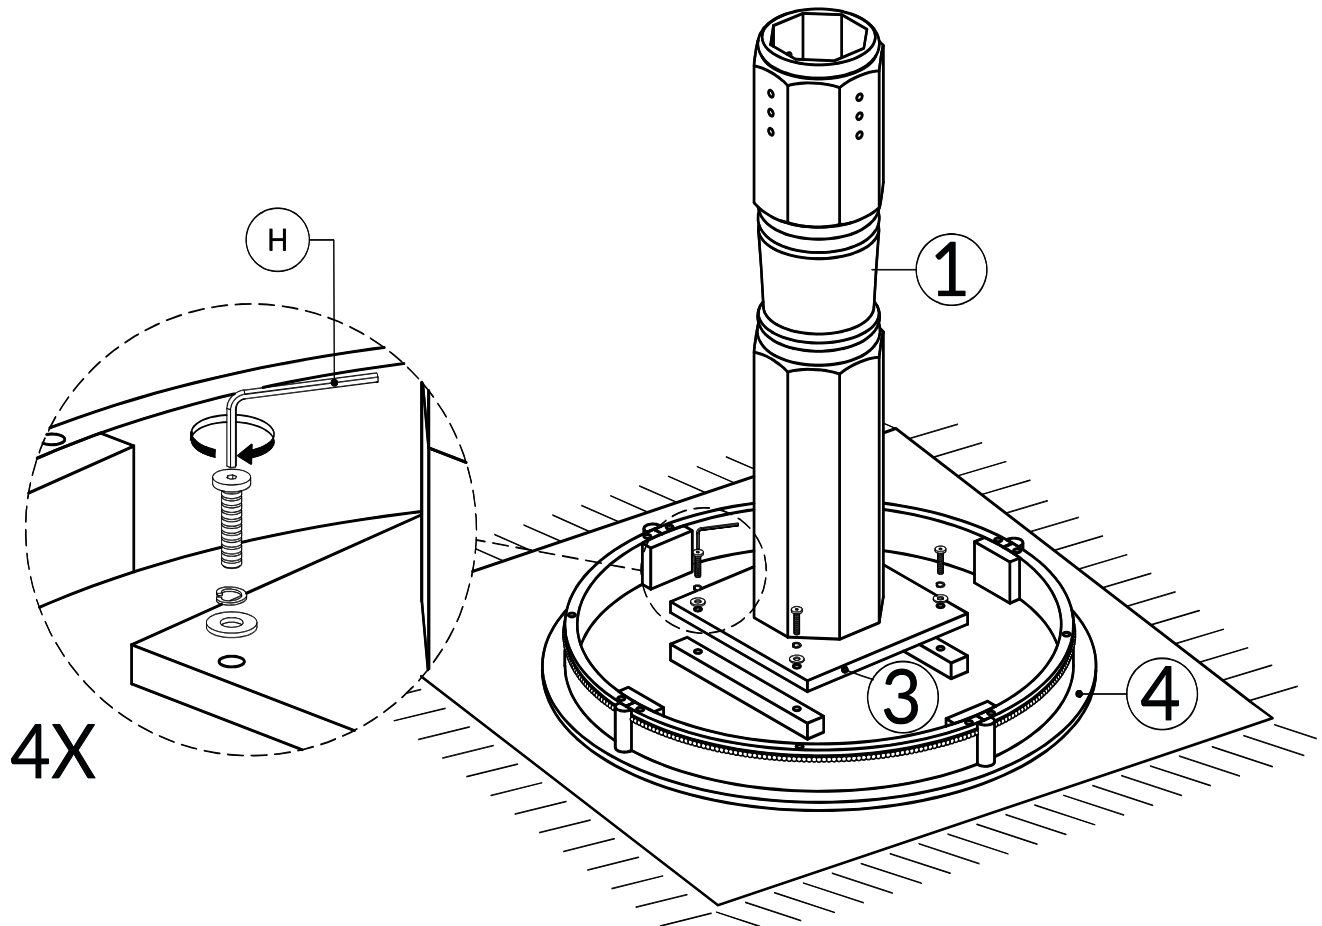

Hardware	Count
H	1


TIGHTEN BOLT COMPLETELY.

03

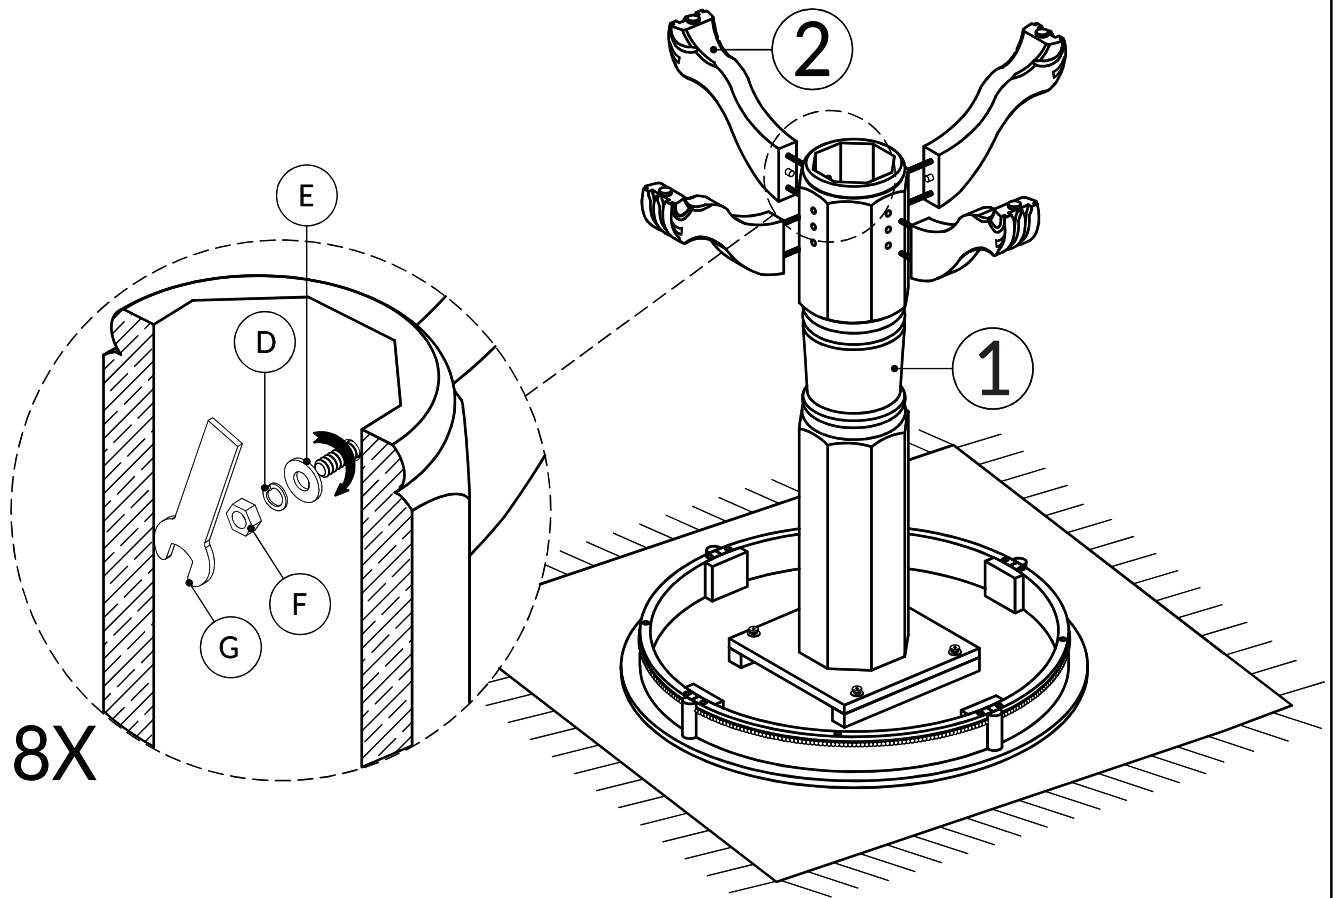

Hardware	Count
D	8
E	8
F	8
G	1

TIGHTEN HEX NUT COMPLETELY.

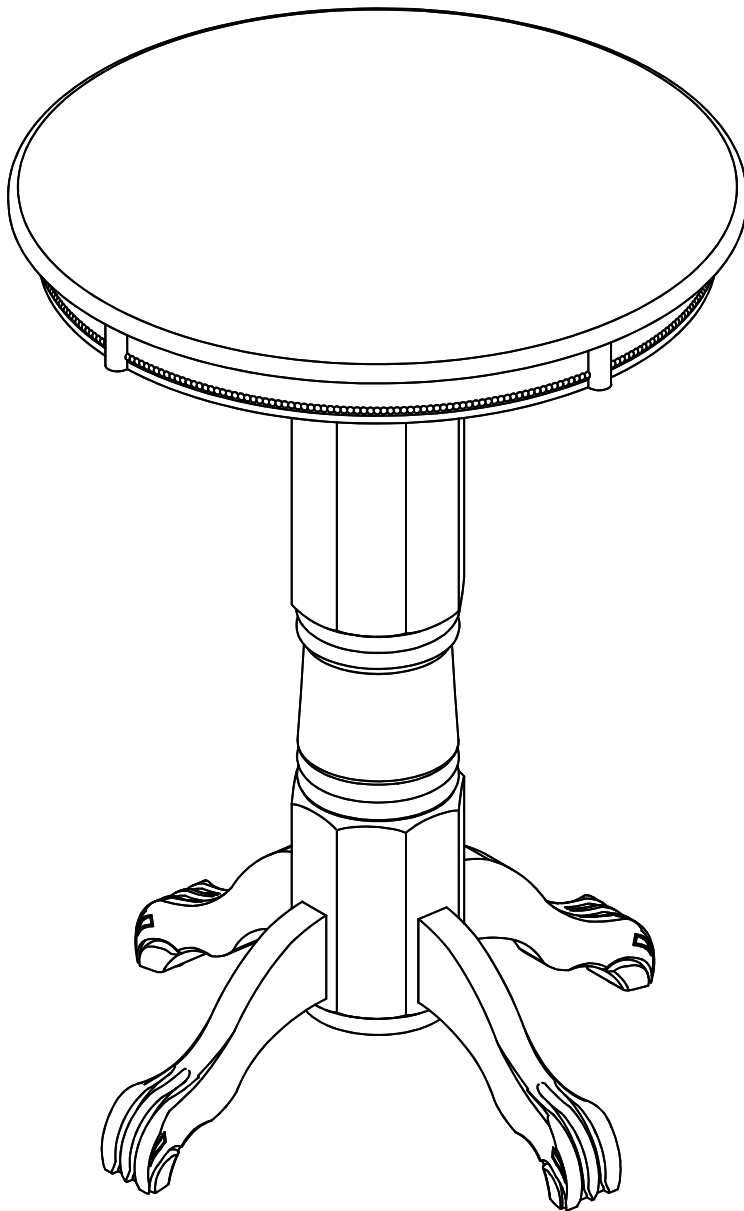

Weight Capacity

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.