




Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 43824,43829,43224,43229,43924,43929

HAMILTON SWIVEL STOOL

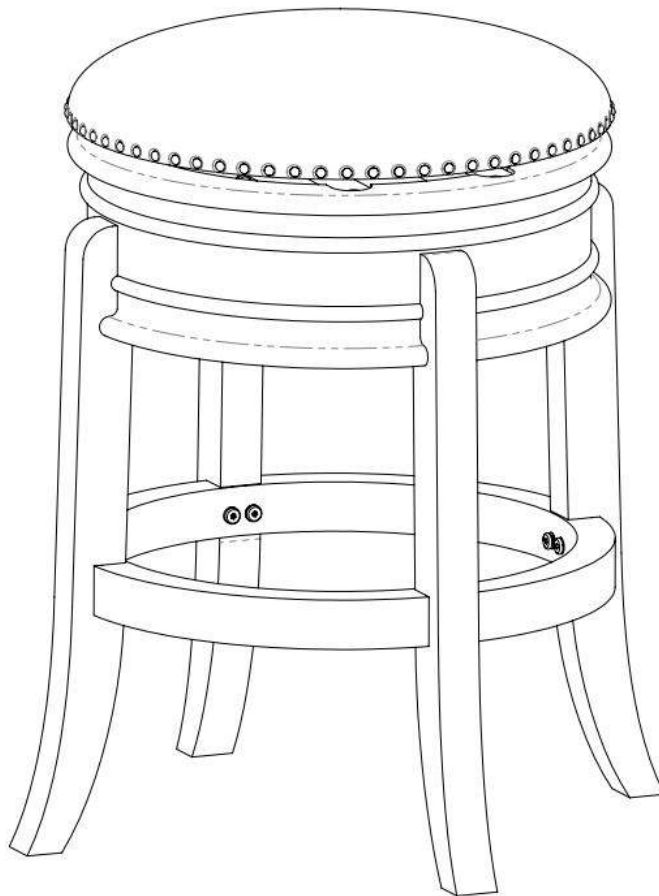

Weight Capacity



Locate the **HARDWARE PACK** which is attached to the shipping carton with red tape.

02/2024



Have questions about assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com






www.boraamindustries.com

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.







Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

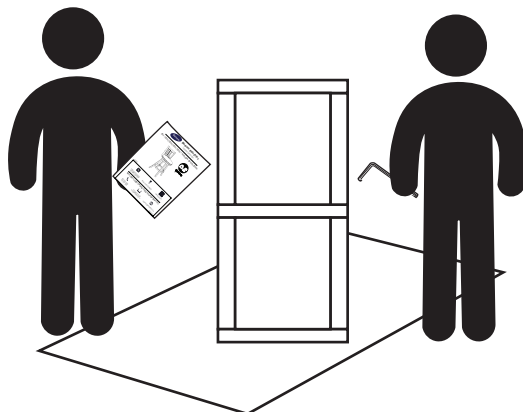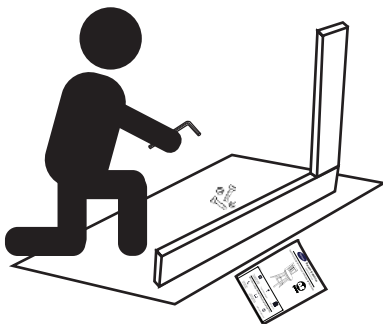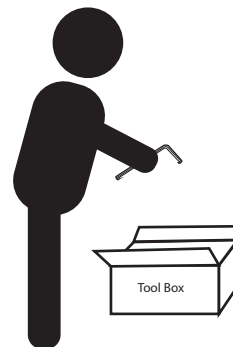






Assembly Overview

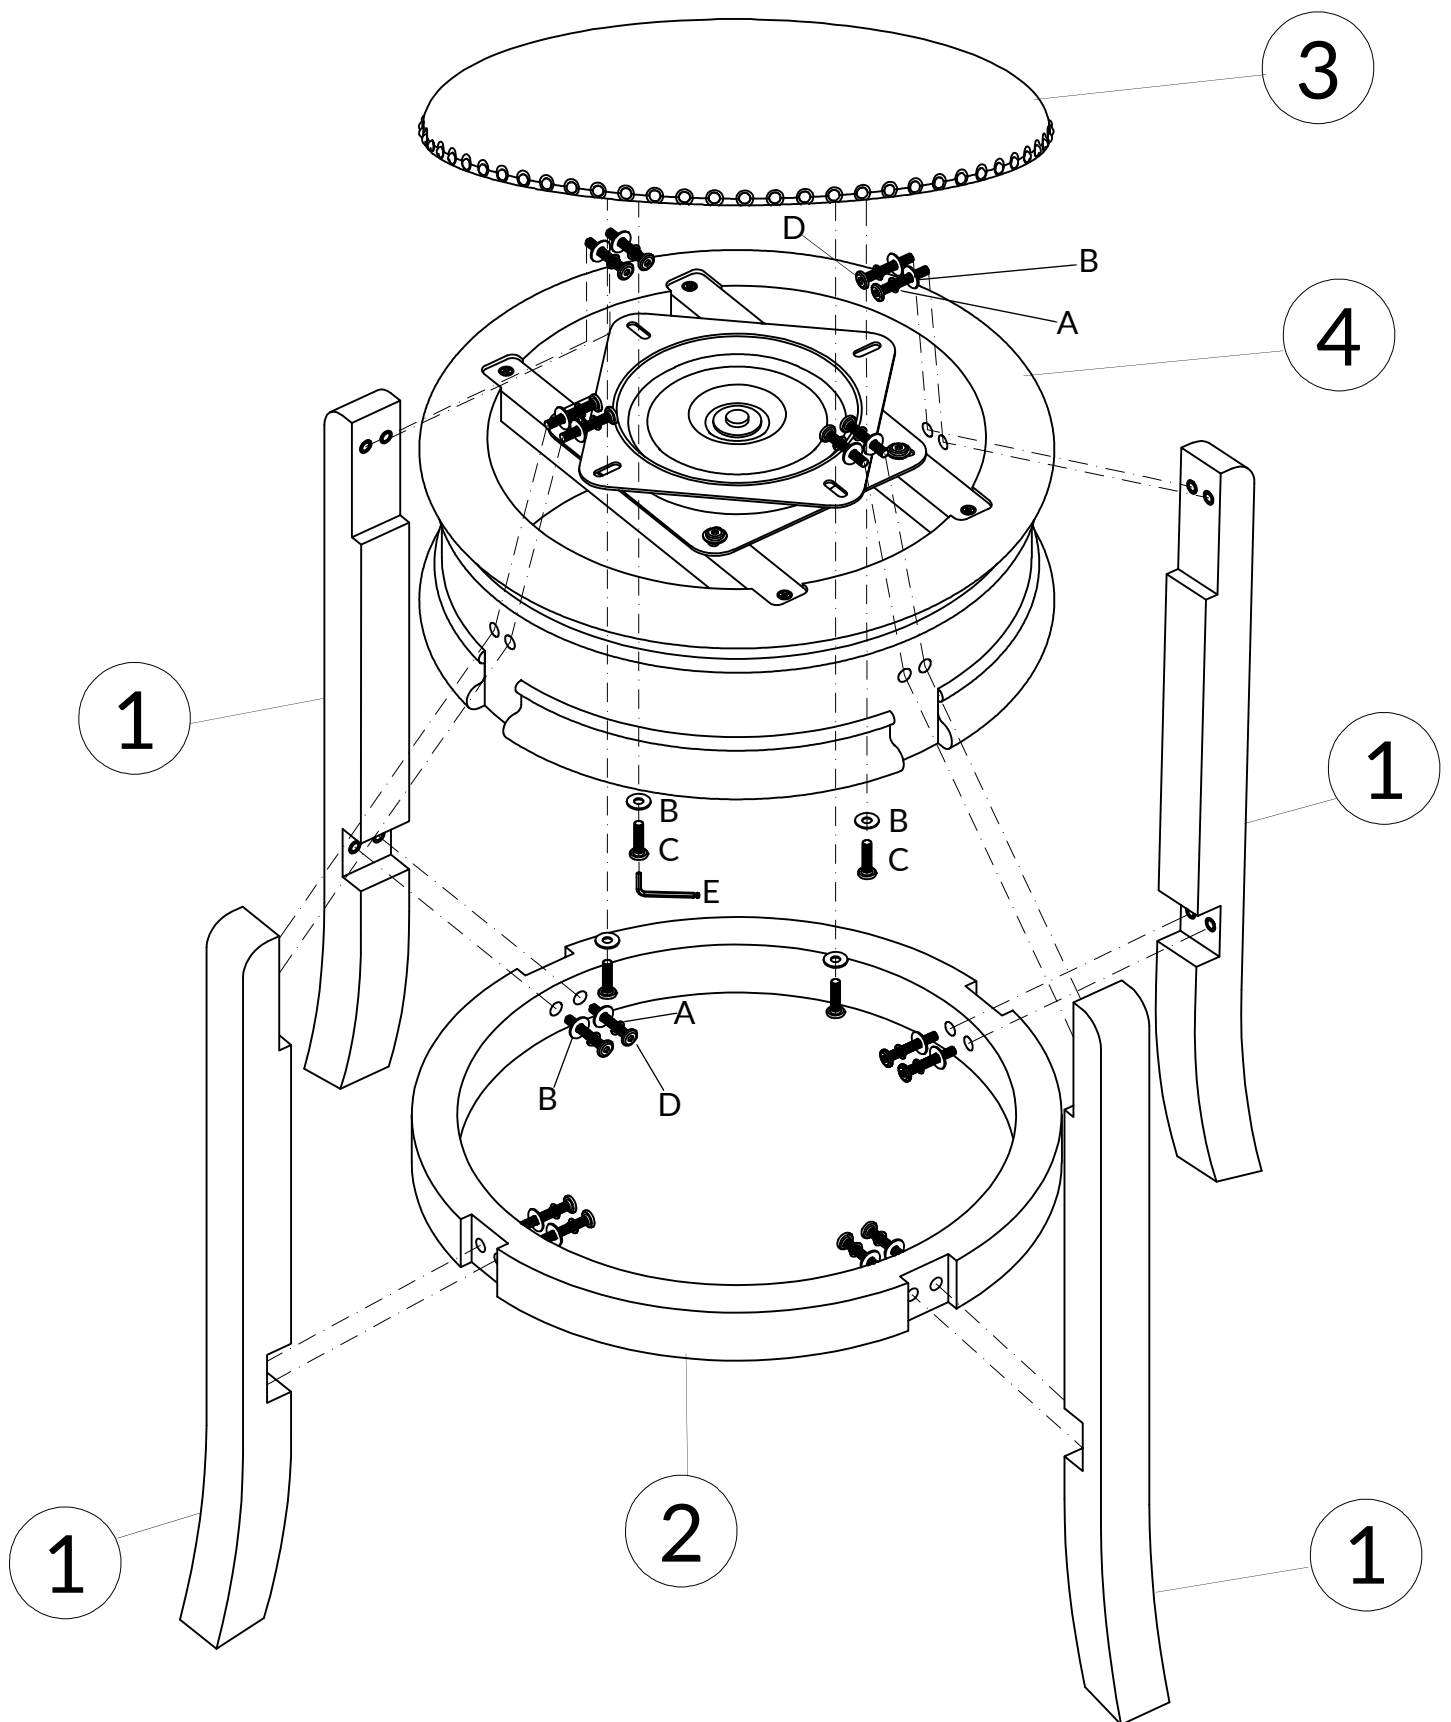

PARTS

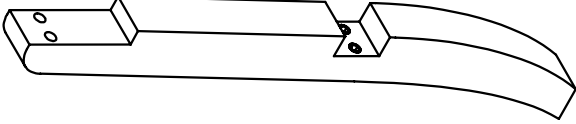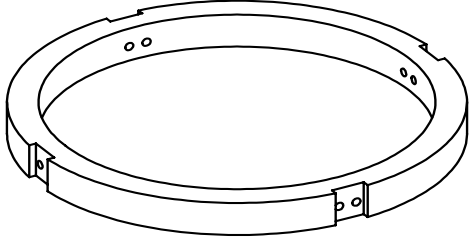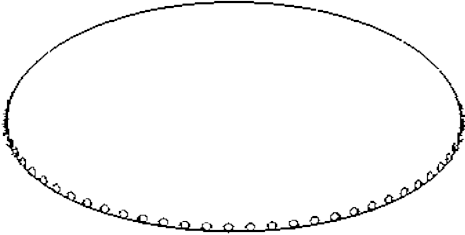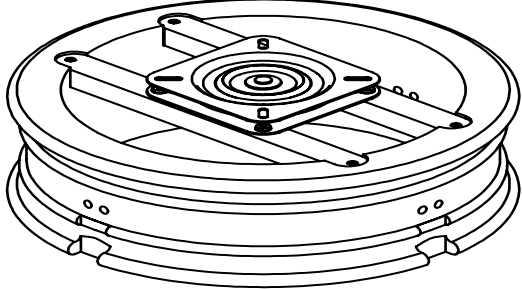
①(x4)	②(x1)
Legs : 	Footrest : 
③(x1)	④(x1)
Seat Cushion : 	Apron With Swivel Plate : 

HARDWARE


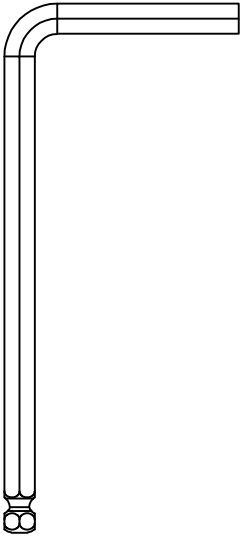
Ⓐ(x16)	Ⓑ(x20)	Ⓒ(x4)	Ⓓ(x16)	Ⓔ(x1)
				
Spring Washer M6*13	Flat Washer M6*16	Bolt M6*20	Bolt M6*40	Allen Wrench M4*110

847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com

01

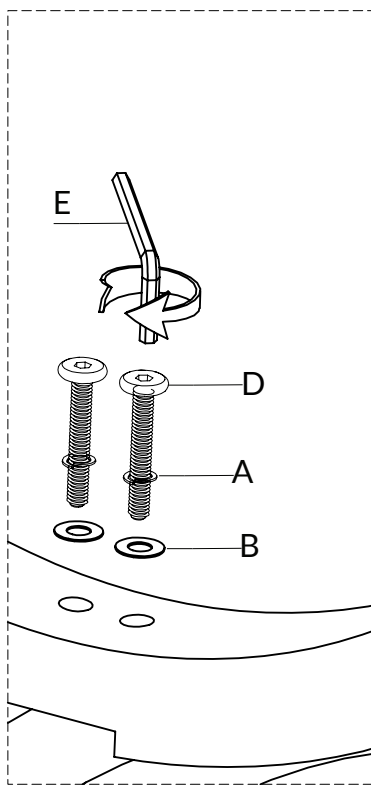

4X

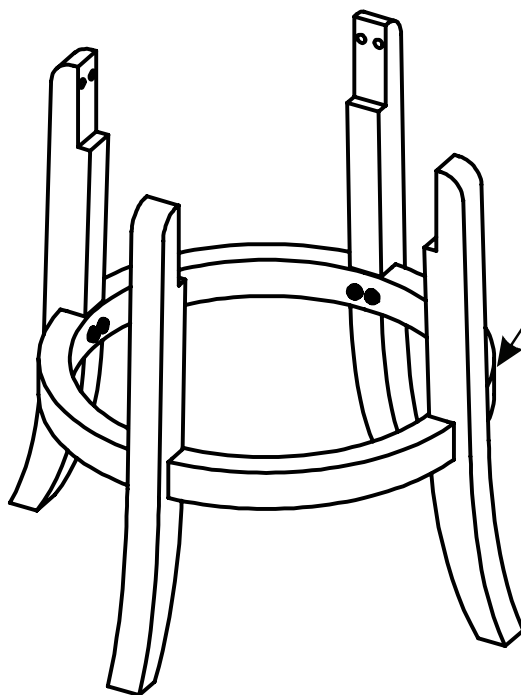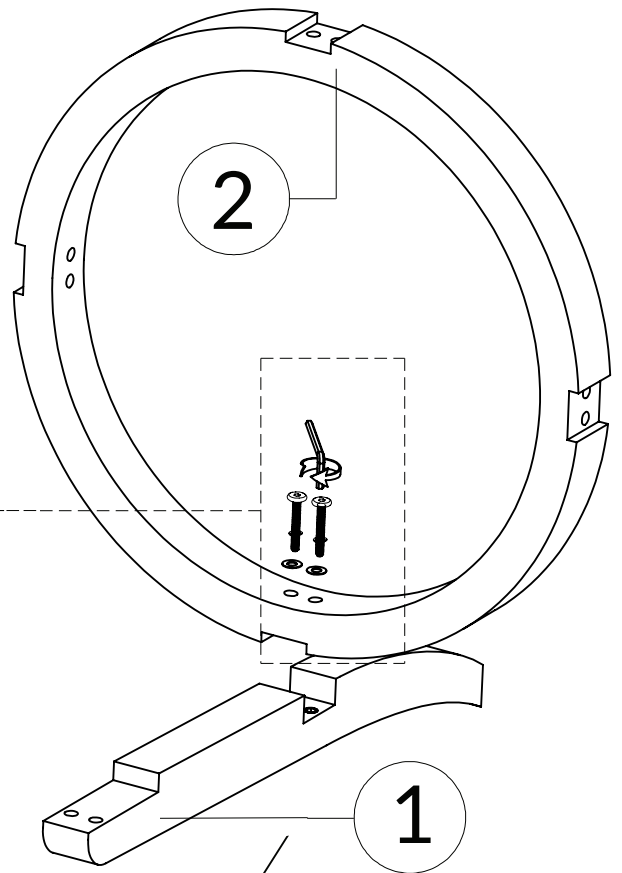


Hardware	Count
A	8
B	8
D	8
E	1


DO NOT TIGHTEN BOLT COMPLETELY.

Please make sure that the protective metal kick plate from Footrest (Part #2) is facing upwards.
Remove the white Tape from the protective metal kick plate before using.


02

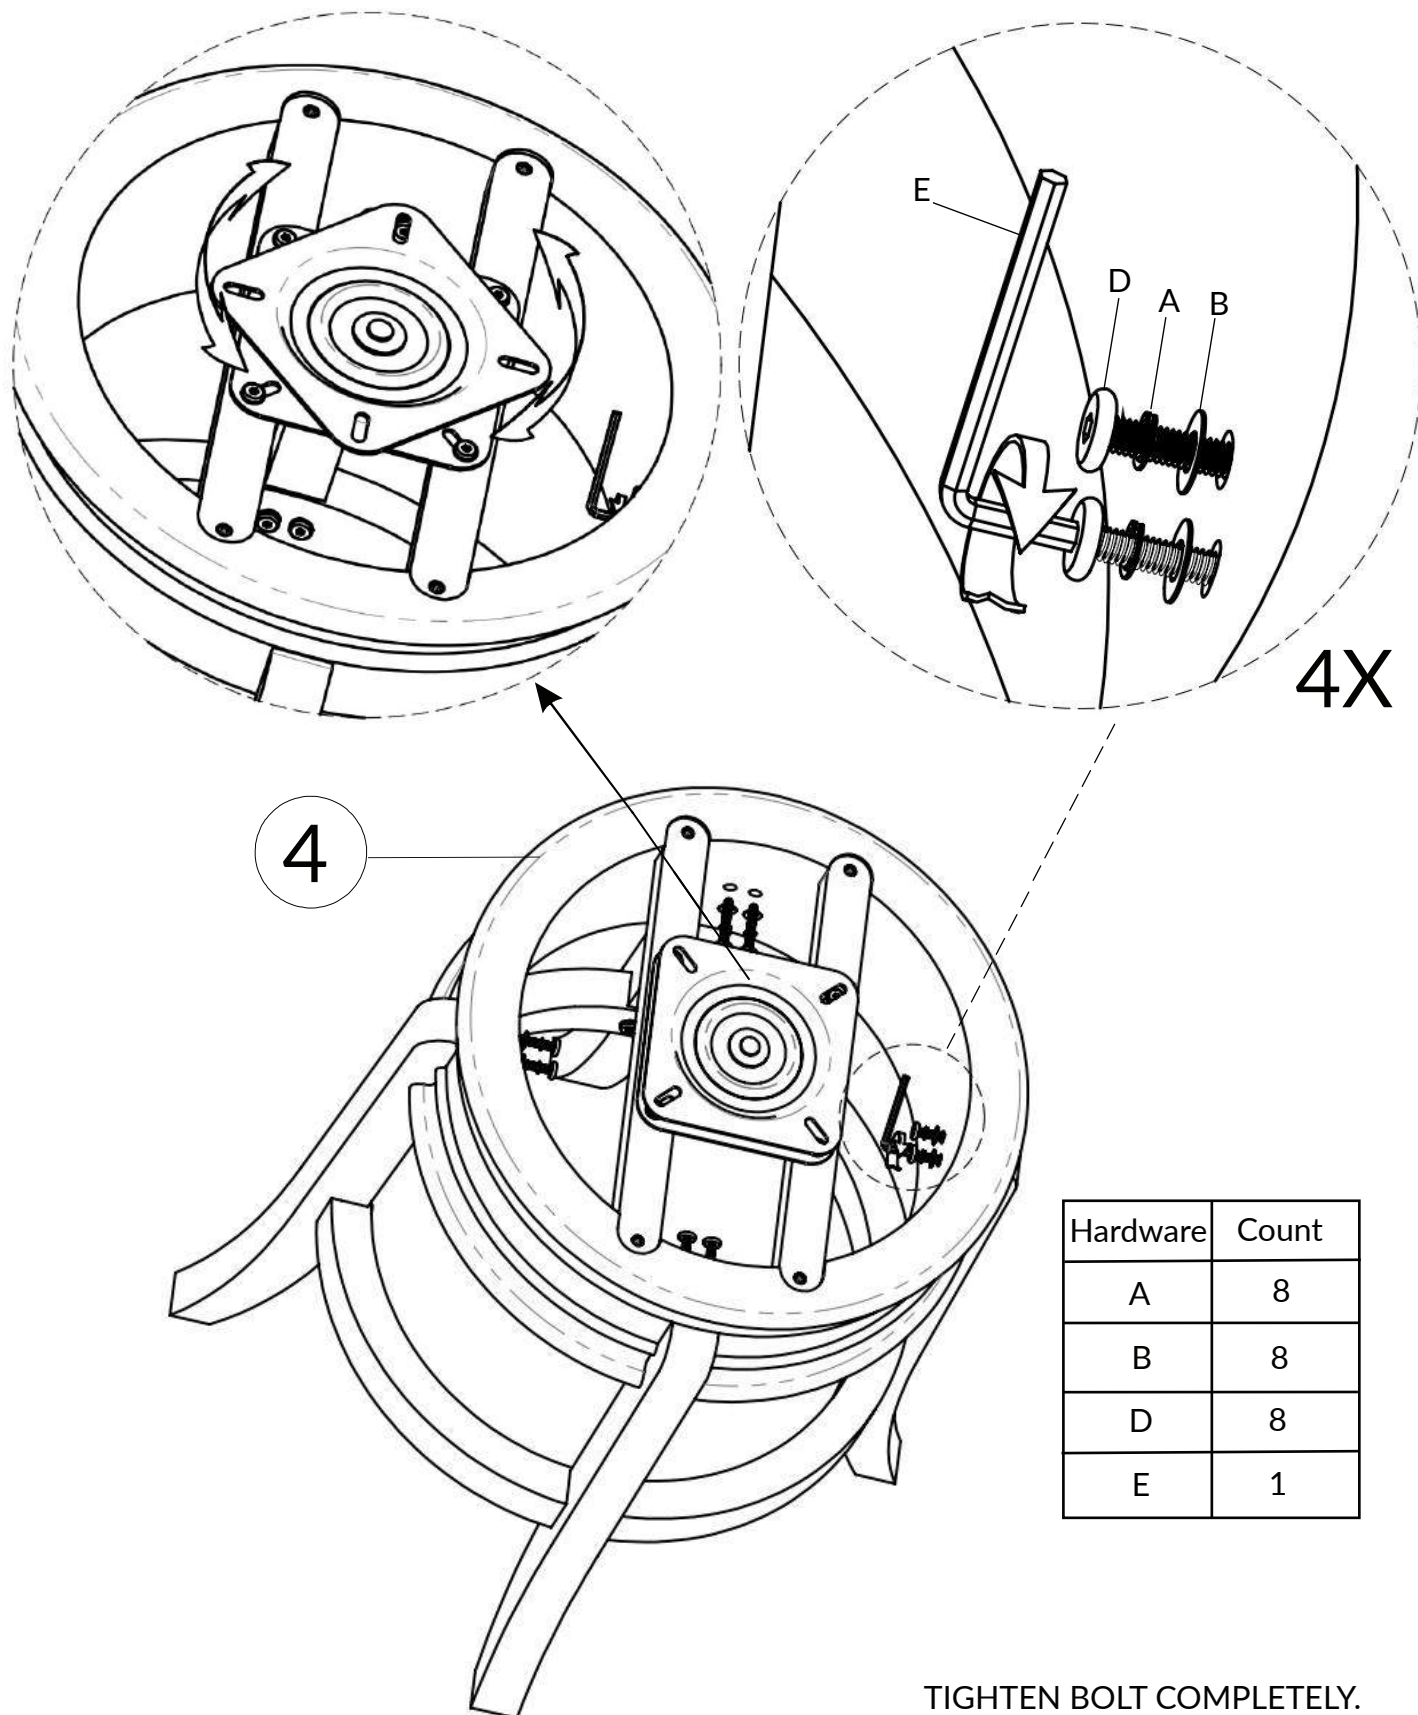

03

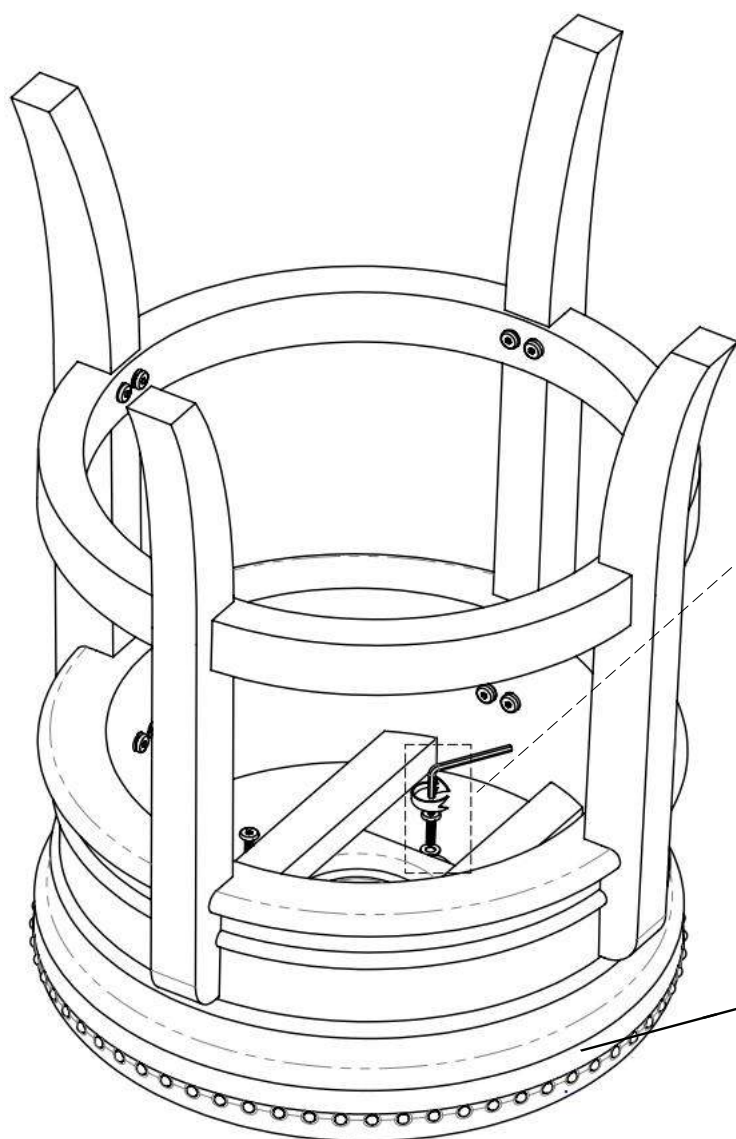

4X

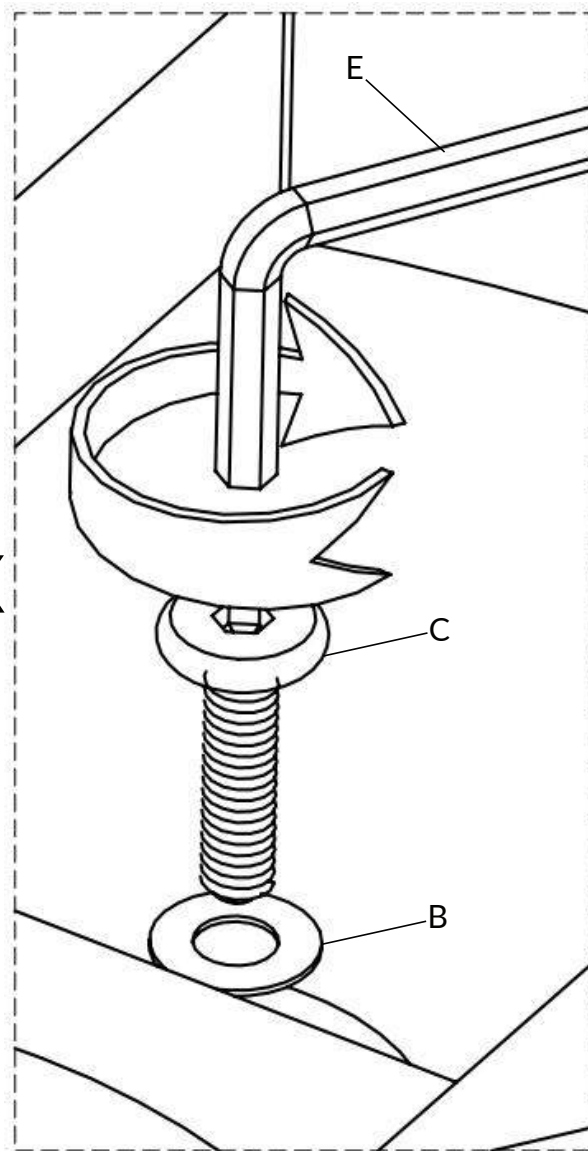


Hardware	Count
B	4
C	4
E	1

3

TIGHTEN BOLT COMPLETELY.



Weight Capacity

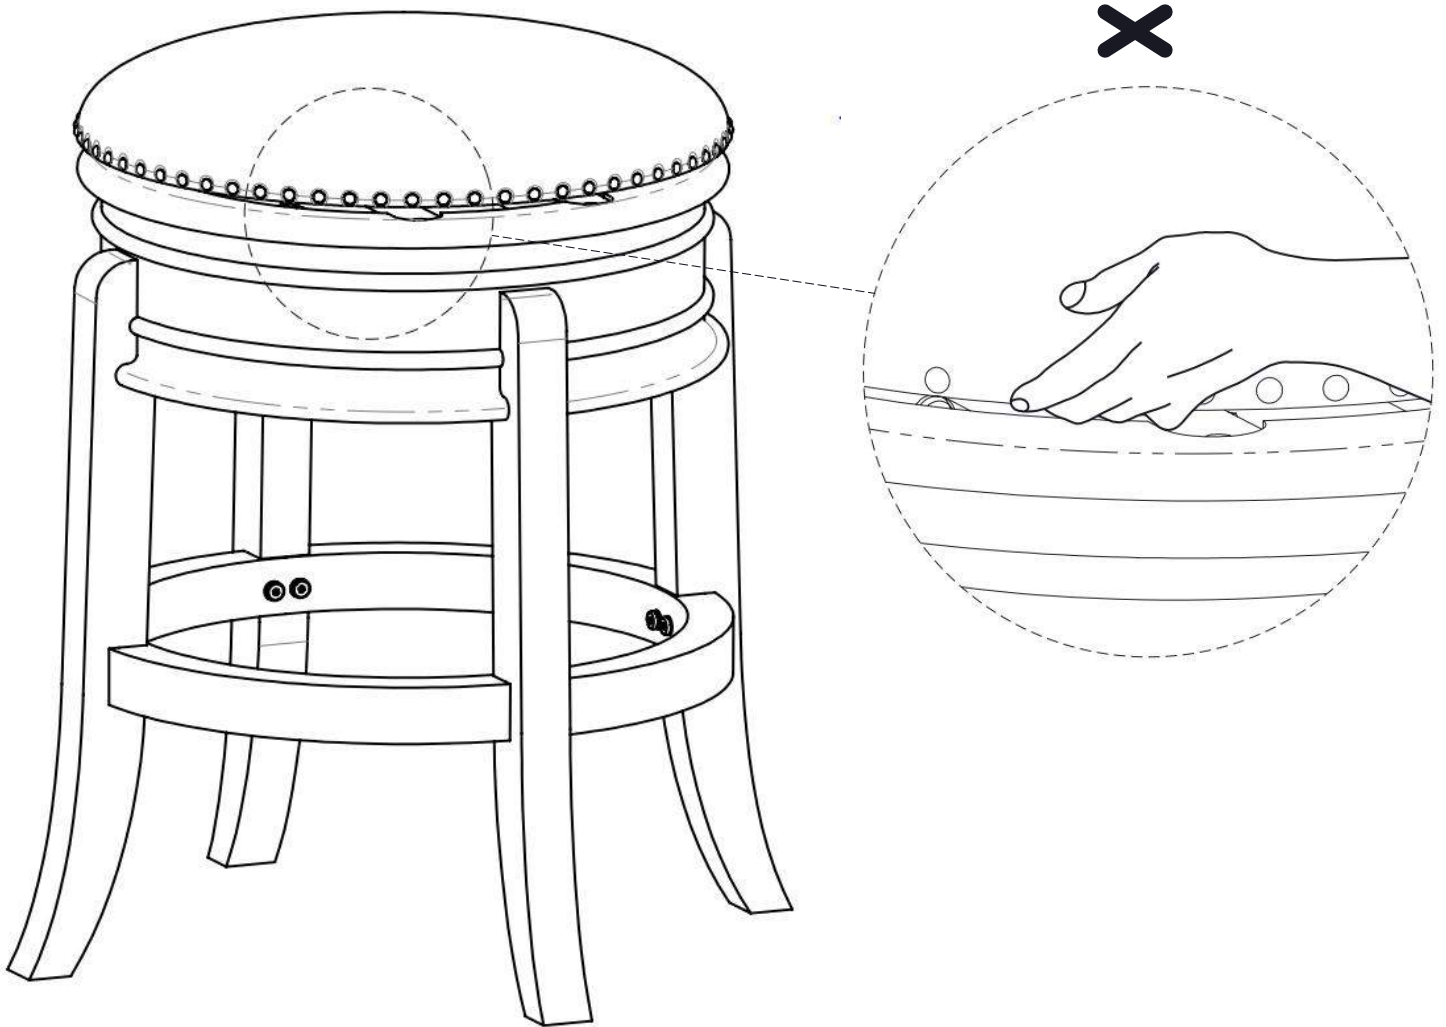

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.