


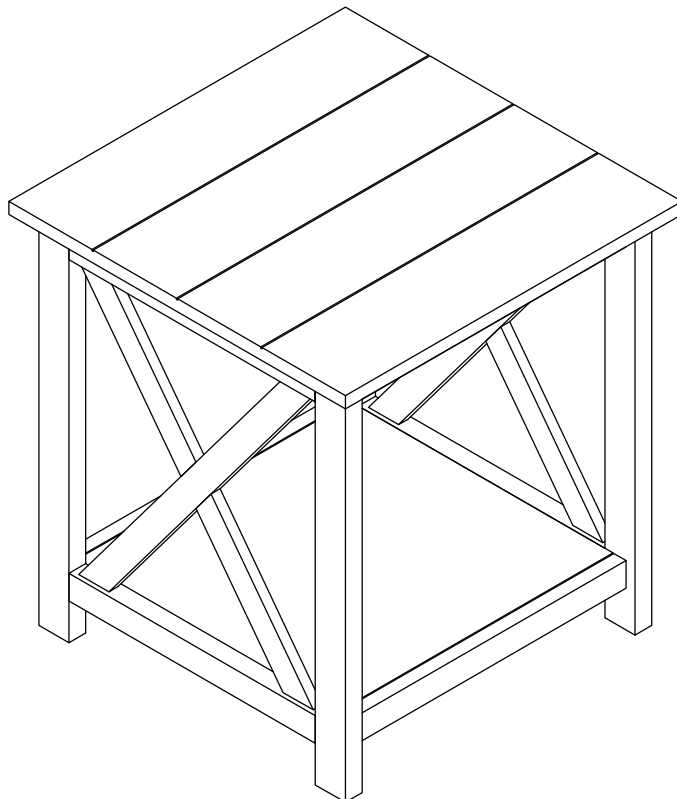

Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 77410 | JAMESTOWNENDTABLE



Weight Capacity



Locate the
HARDWARE PACK
which is attached to
the shipping carton
with red tape.

01/2024



Have questions about
assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com







www.boraamindustries.com

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.






Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

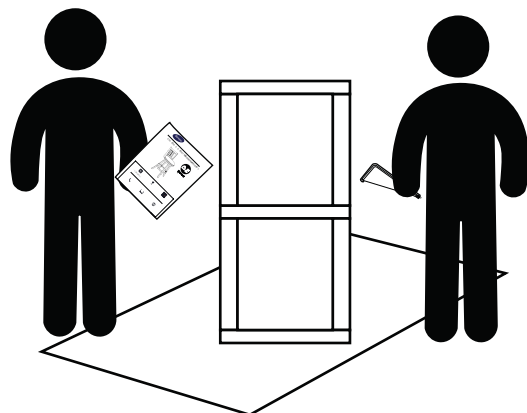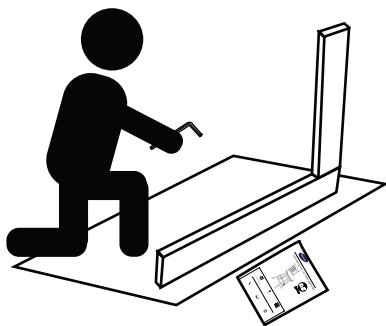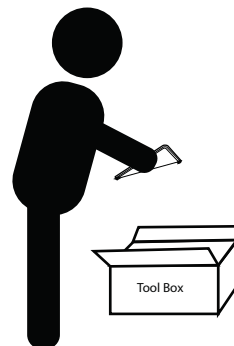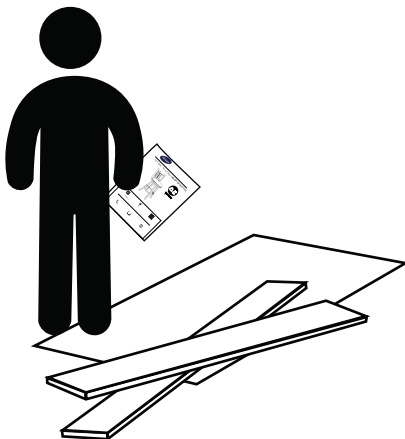



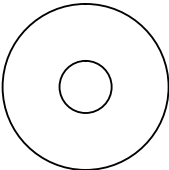


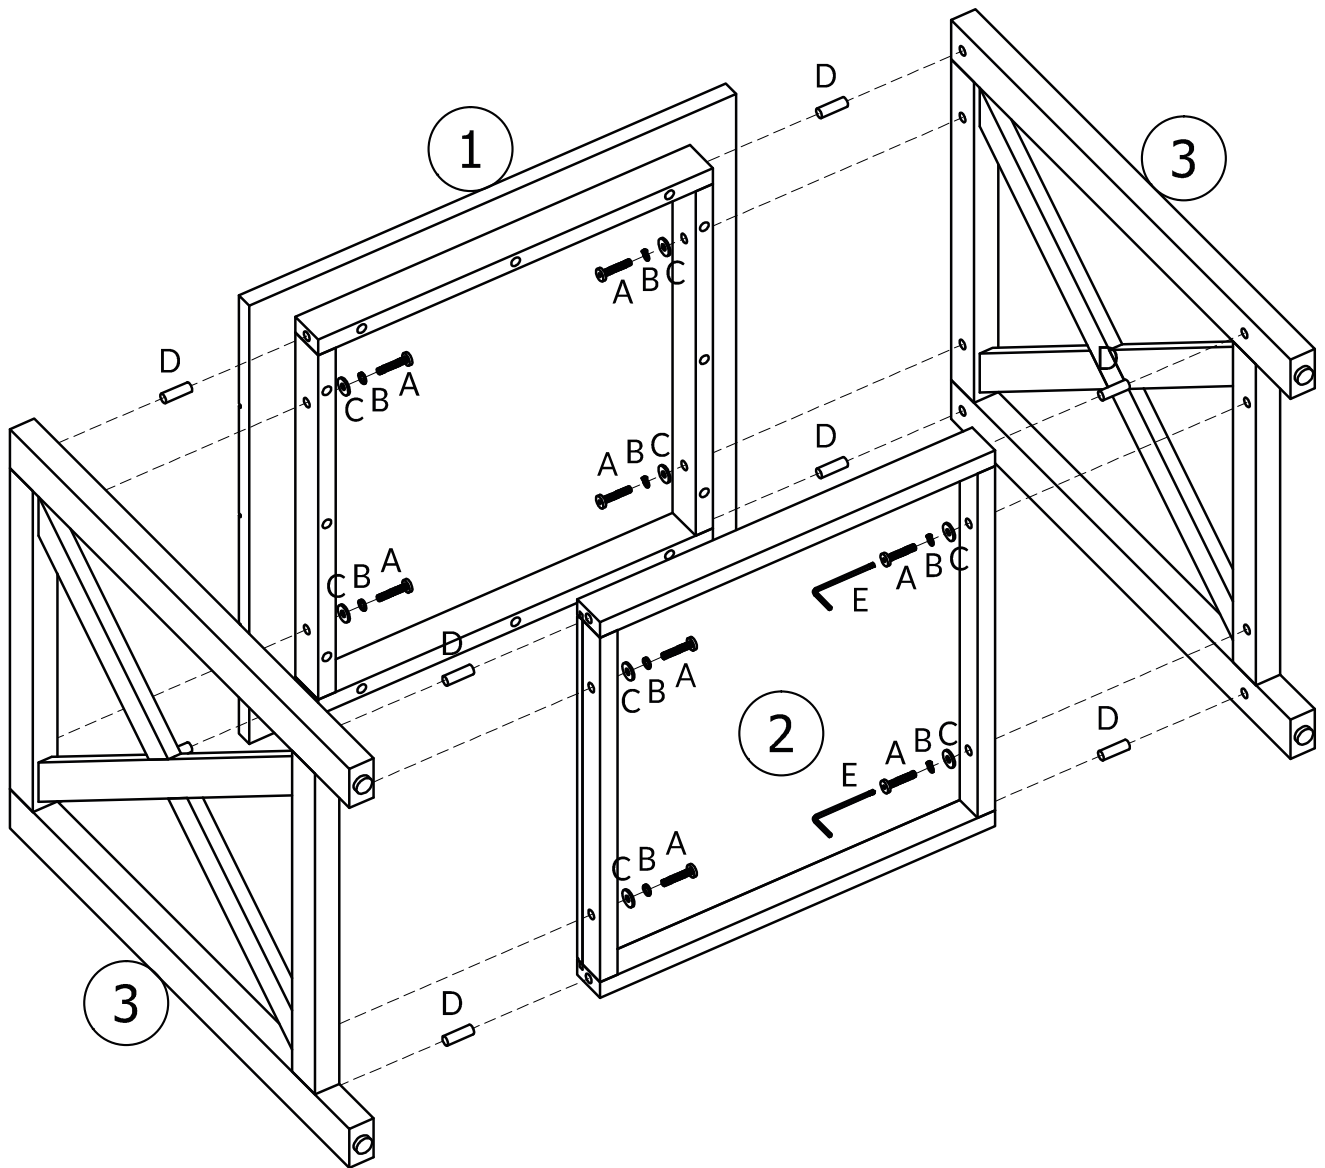Assembly Overview

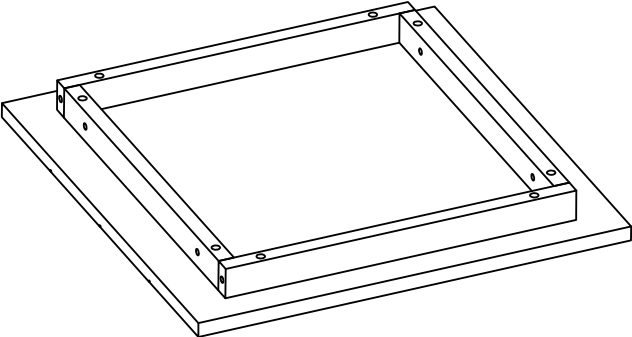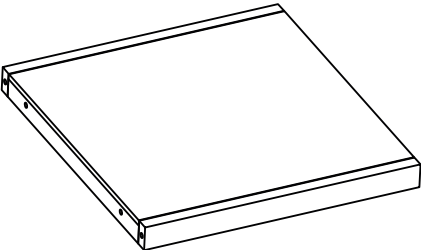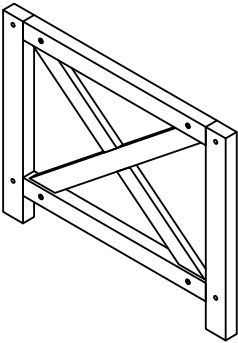


PARTS

<div> <div>① (x1)</div> <div> <div>Top Panel :</div>  </div> </div>	
<div> <div>② (x1)</div> <div> <div>Shelf :</div>  </div> </div>	<div> <div>③ (x2)</div> <div> <div>Side Panel :</div>  </div> </div>

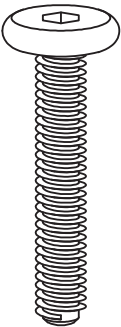HARDWARE

<div> <div>Ⓐ (x8)</div>  </div>	<div> <div>Ⓑ (x8)</div>  </div>	<div> <div>Ⓒ (x8)</div>  </div>	<div> <div>Ⓓ (x8)</div>  </div>	<div> <div>Ⓔ (x1)</div>  </div>
<div> <div>Bolt M6x35</div> </div>	<div> <div>Spring Washer</div> </div>	<div> <div>Flat Washer</div> </div>	<div> <div>Wooden Dowel</div> </div>	<div> <div>Allen Wrench</div> </div>


01

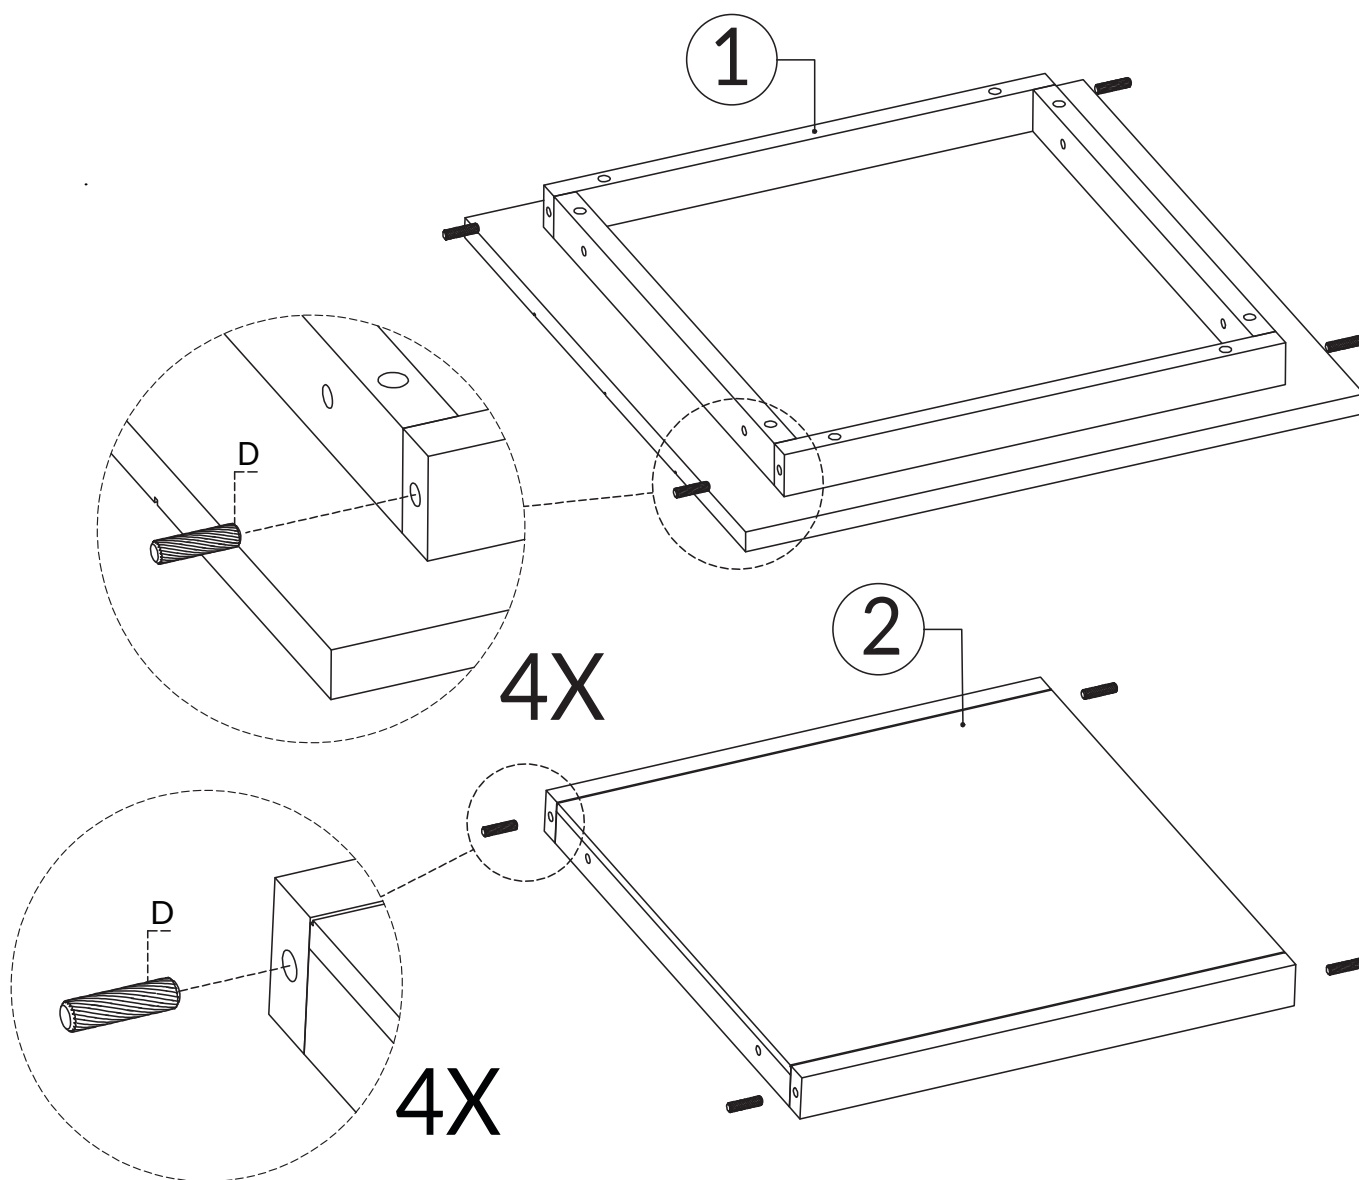

Hardware	Count
D	8

DO NOT TIGHTEN BOLT COMPLETELY.


02

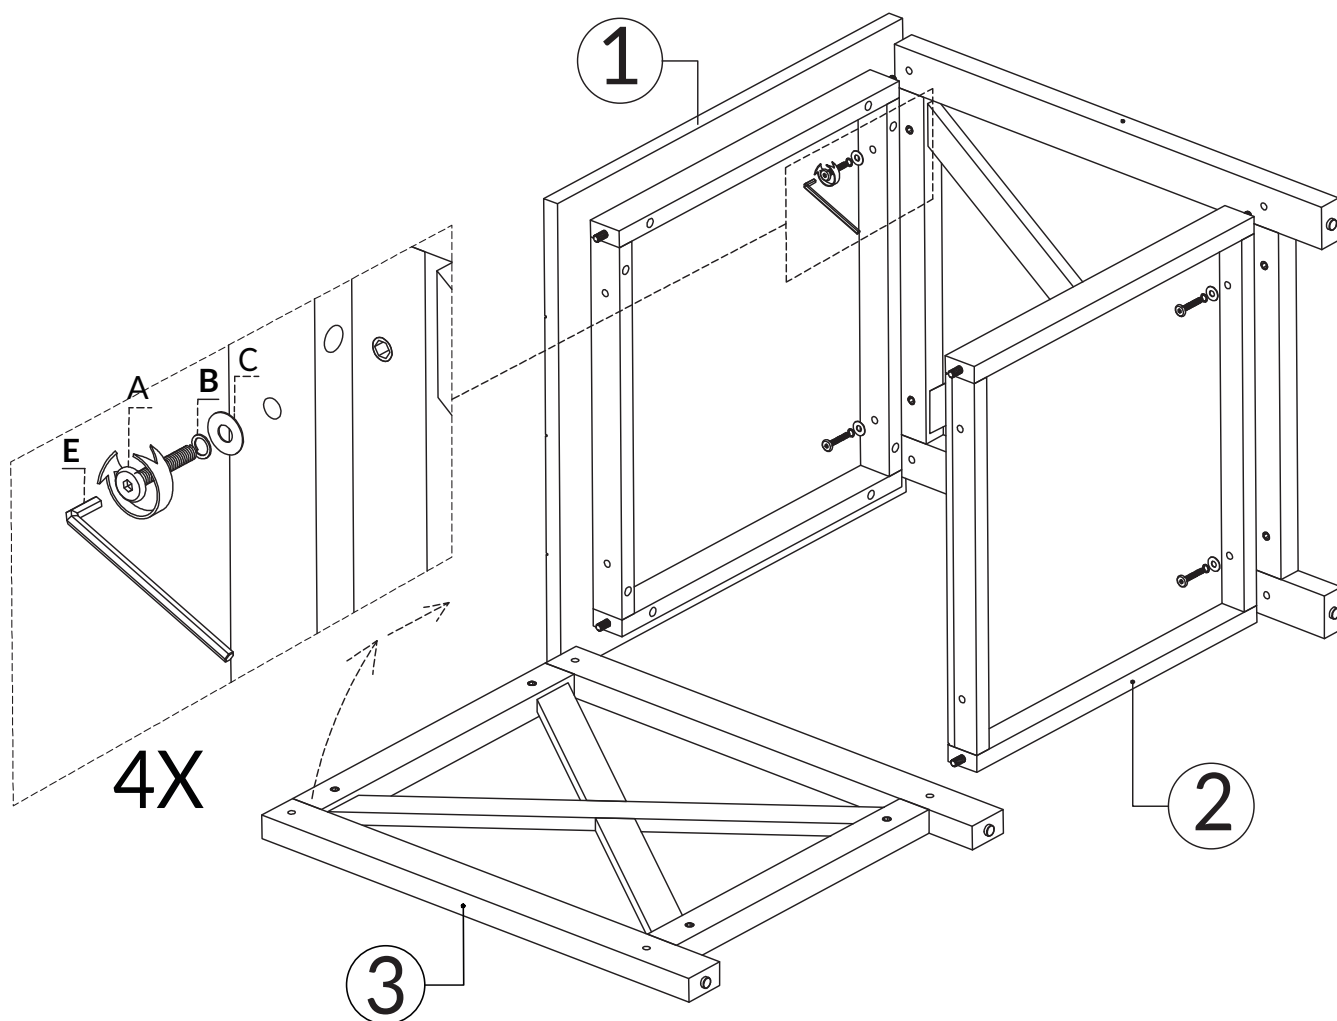

Hardware	Count
A	4
B	4
C	4
E	1

TIGHTEN BOLT COMPLETELY.

03

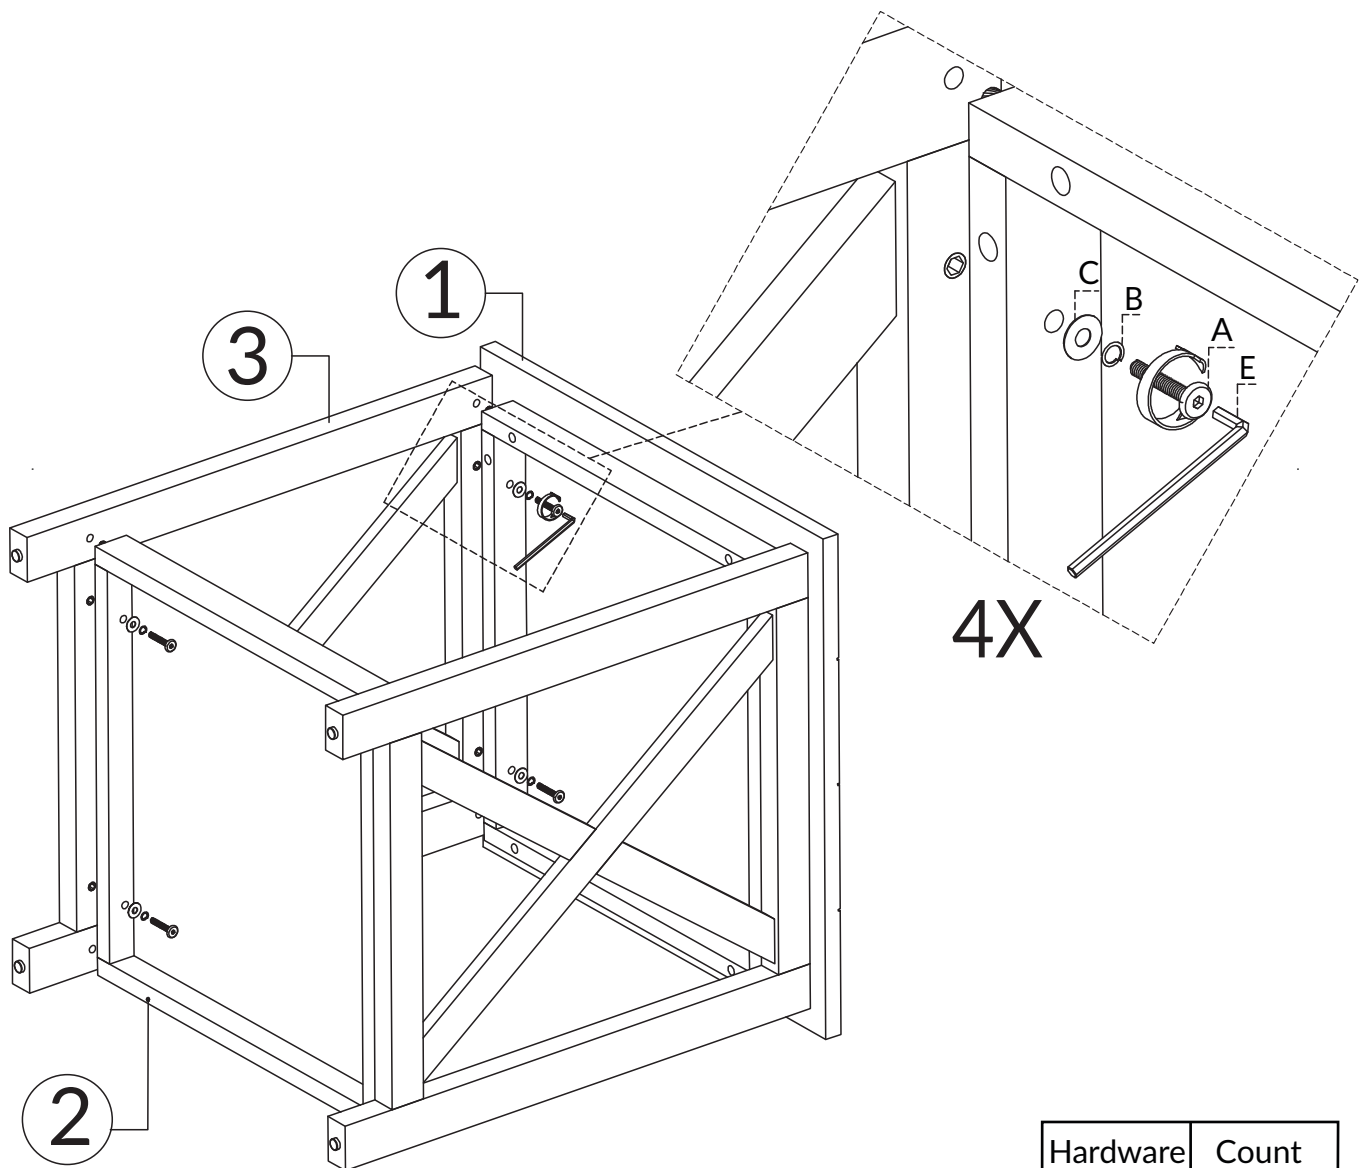


Hardware	Count
A	4
B	4
C	4
E	1

TIGHTEN BOLT COMPLETELY.



Weight Capacity

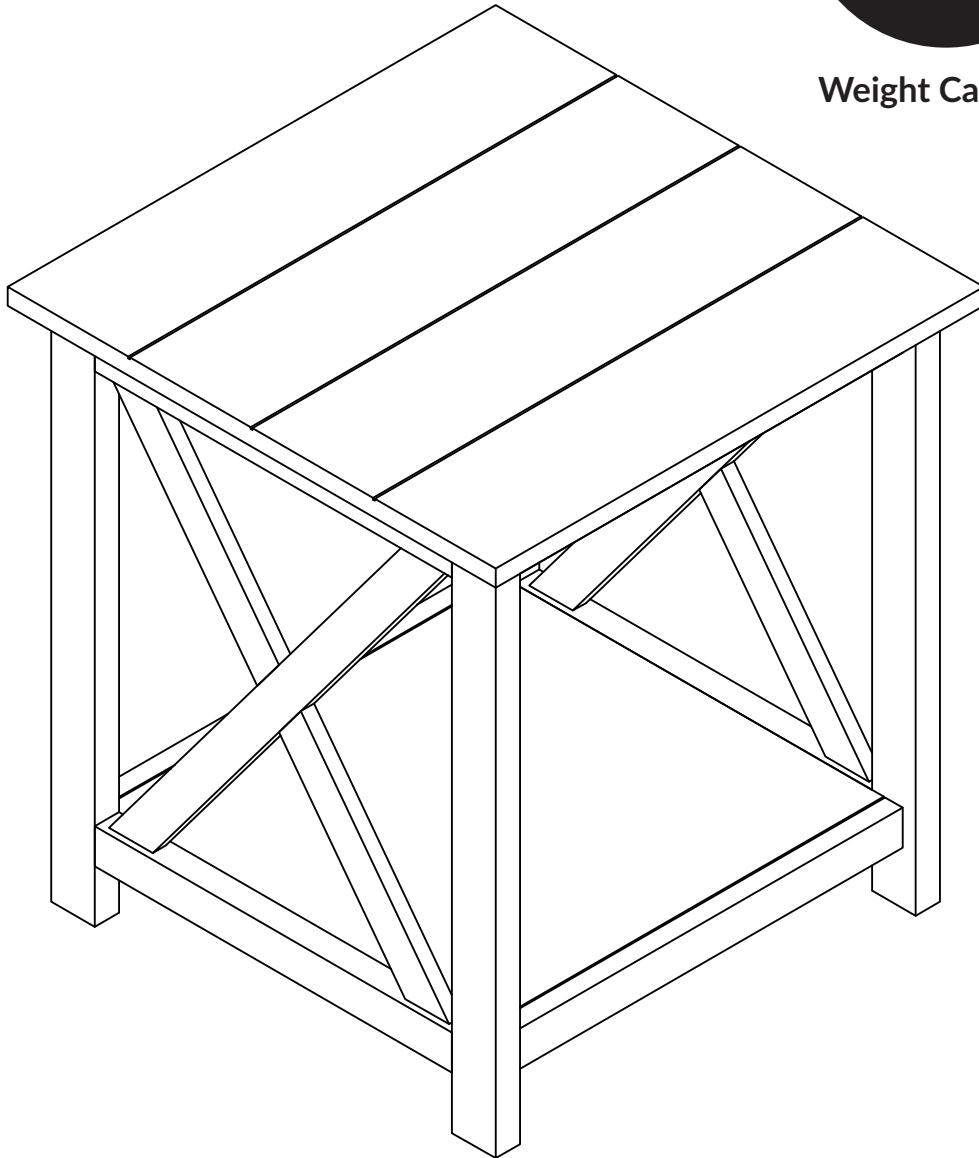

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.