


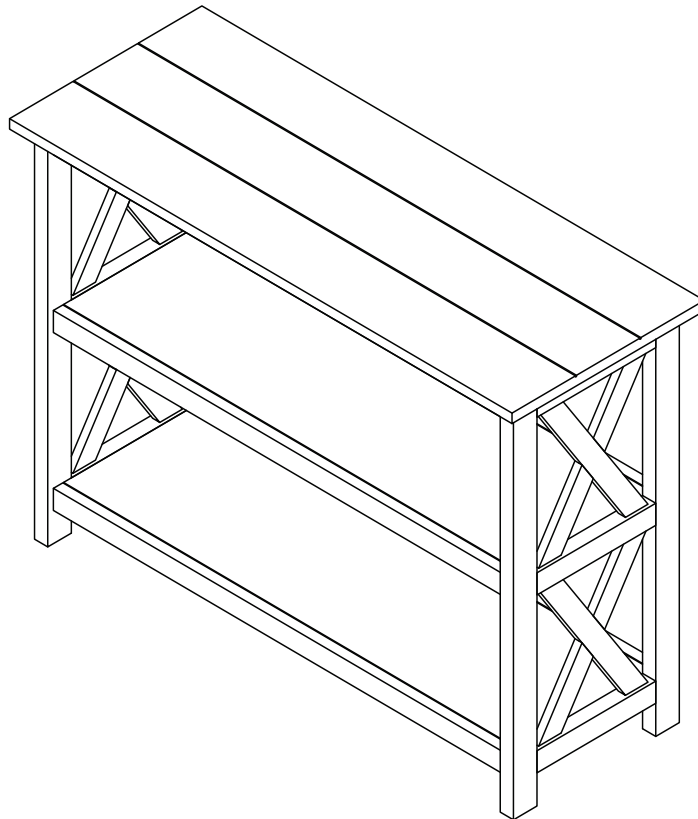

Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 77411 | JAMESTOWN ENTRYWAY TABLE



Weight Capacity



Locate the **HARDWARE PACK** which is attached to the shipping carton with red tape.

01/2024



Have questions about assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com







www.boraamindustries.com

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.






Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

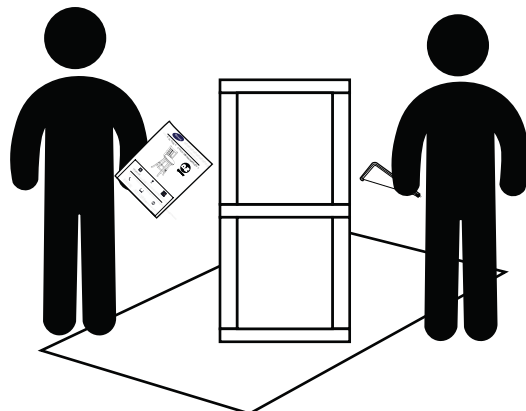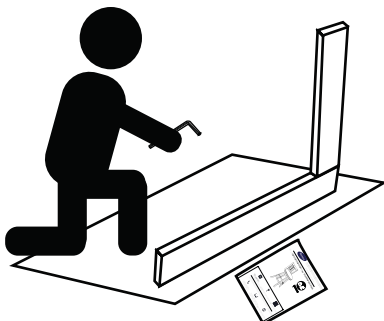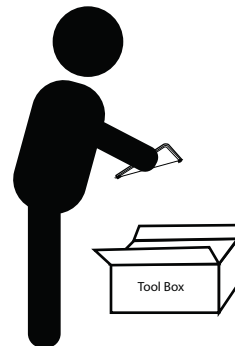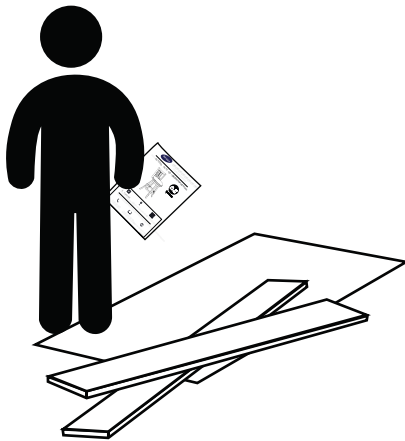



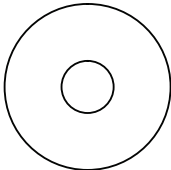


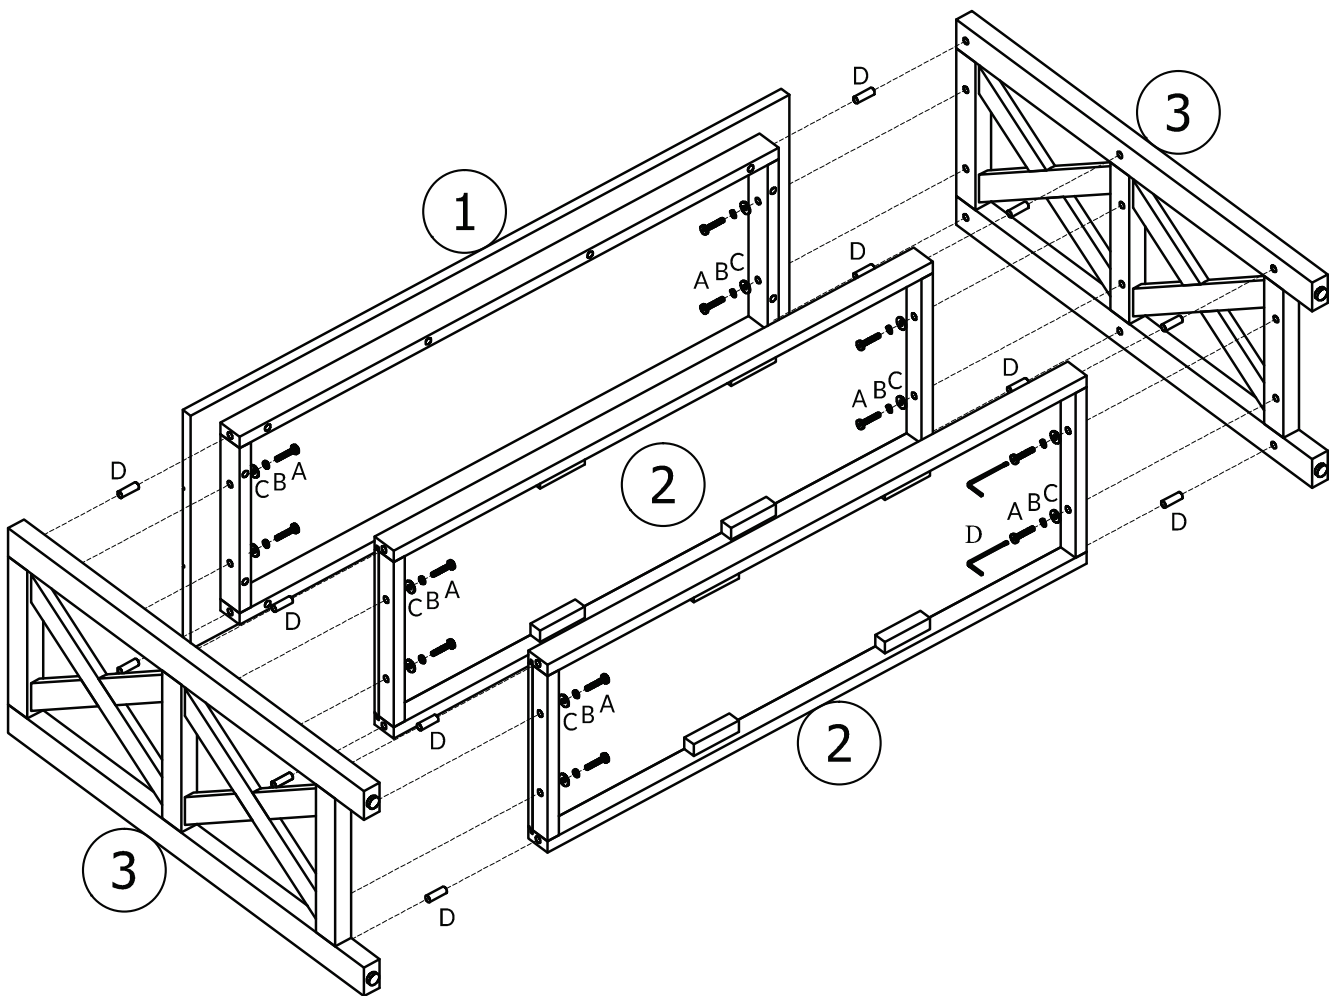Assembly Overview

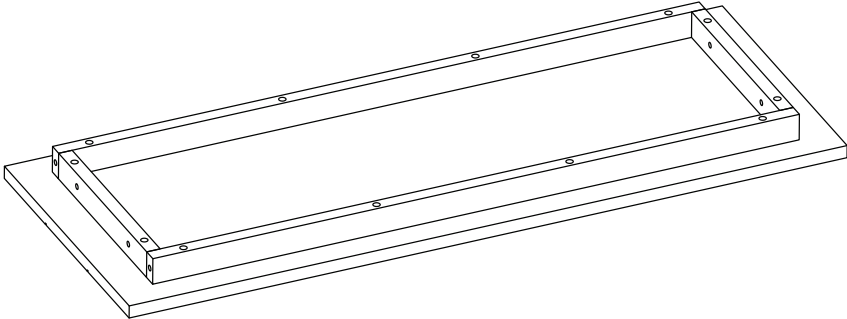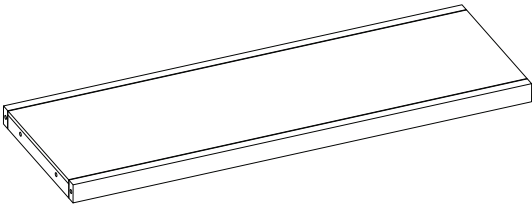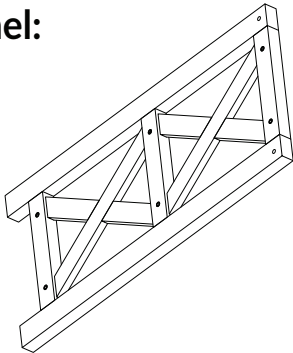


PARTS

| | |
|--|--|
| <div>① (x1)</div> <div>Top Panel:</div>  | |
| <div>② (x2)</div> <div>Shelf:</div>  | <div>③ (x2)</div> <div>Side Panel:</div>  |

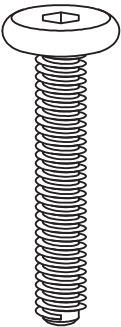HARDWARE


| <div>Ⓐ (x12)</div> | <div>Ⓑ (x12)</div> | <div>Ⓒ (x12)</div> | <div>Ⓓ (x12)</div> | <div>Ⓔ (x1)</div> |
|---|---|---|---|---|
|  |  |  |  |  |
| <div>Bolt</div> <div>M6x35</div> | <div>Spring</div> <div>Washer</div> | <div>Flat</div> <div>Washer</div> | <div>Wooden</div> <div>Dowel</div> | <div>Allen</div> <div>Wrench</div> |

01

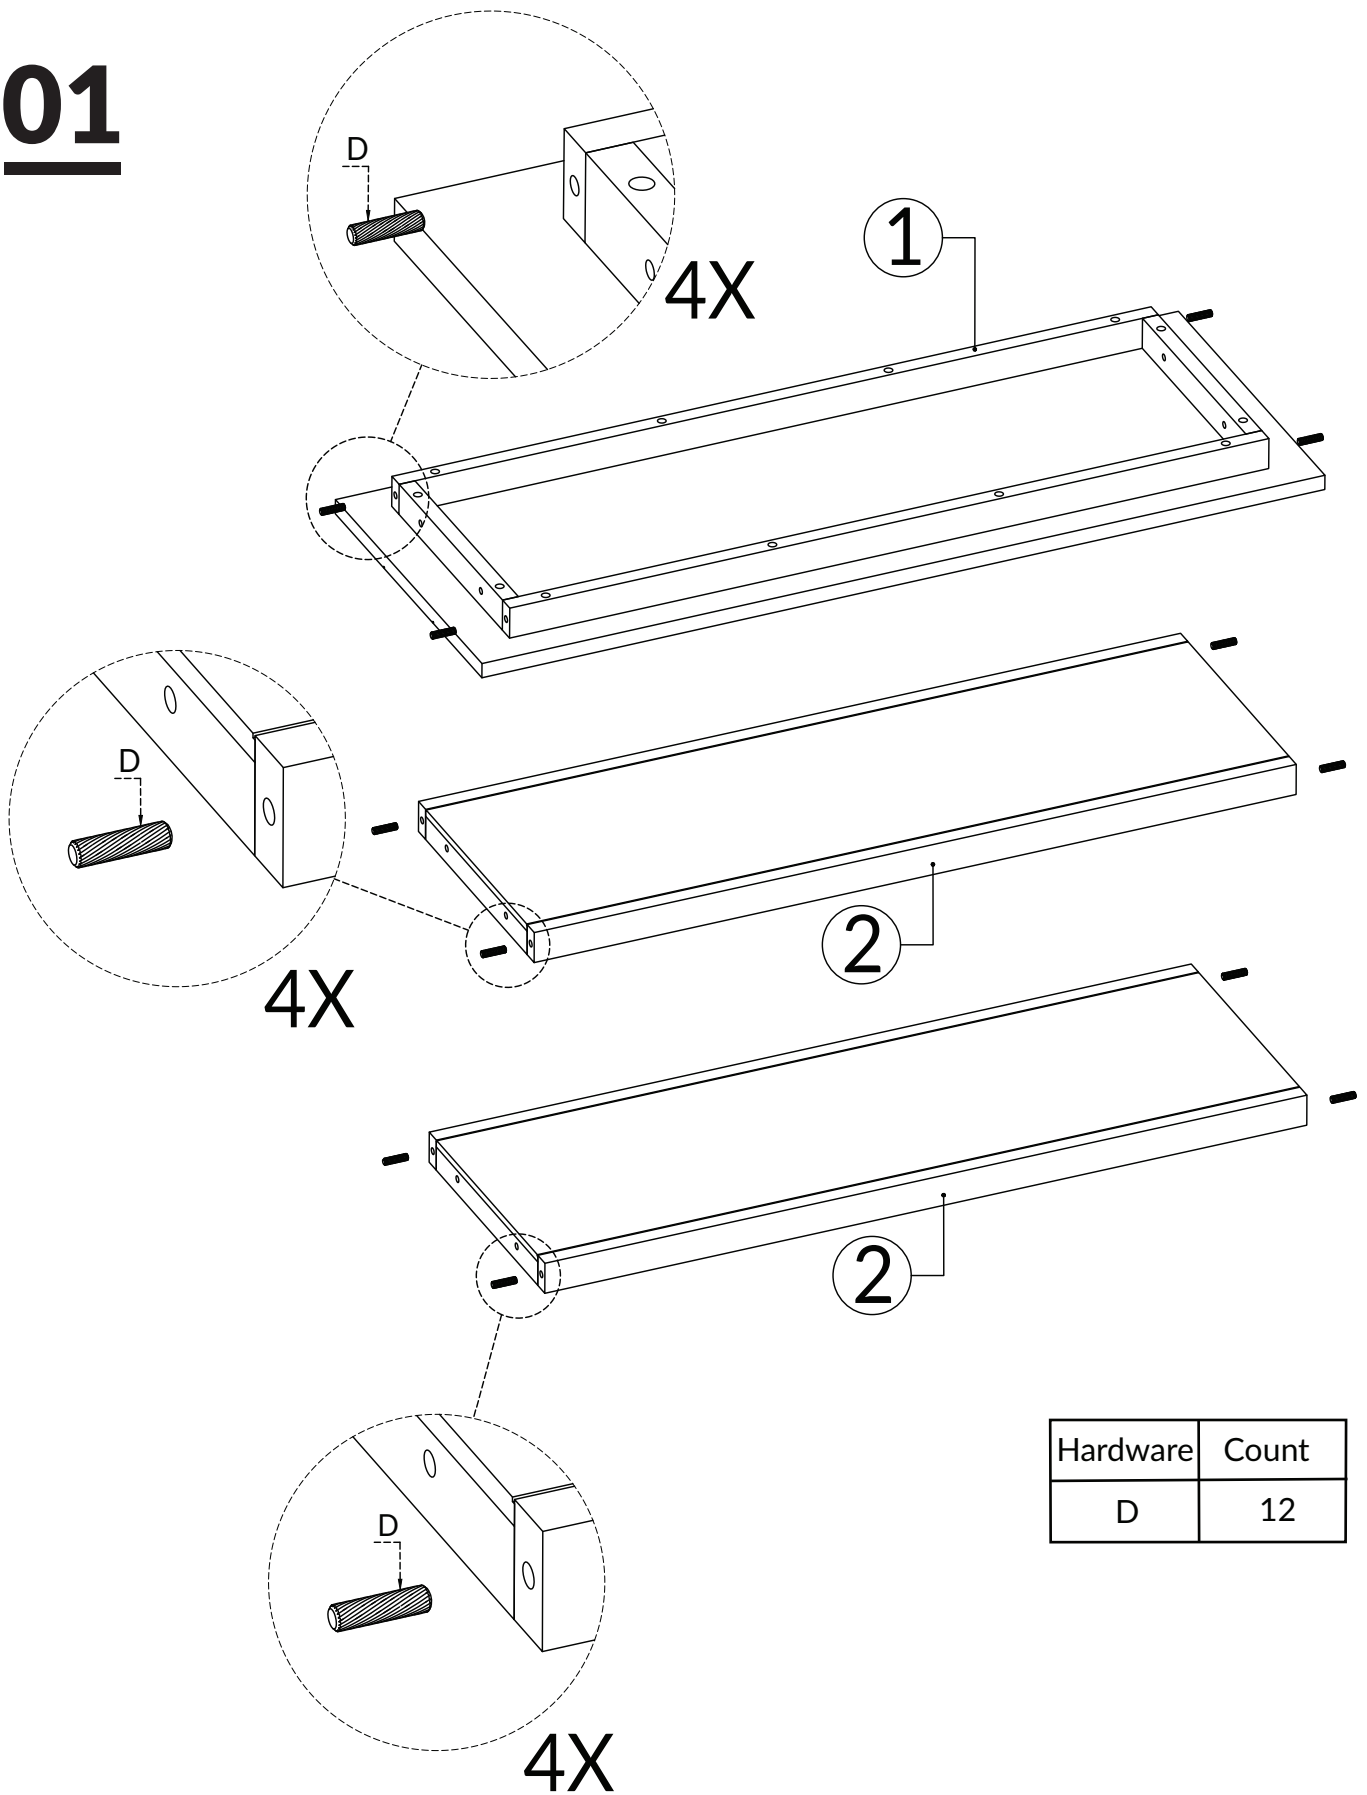

| Hardware | Count |
|----------|-------|
| D | 12 |


02

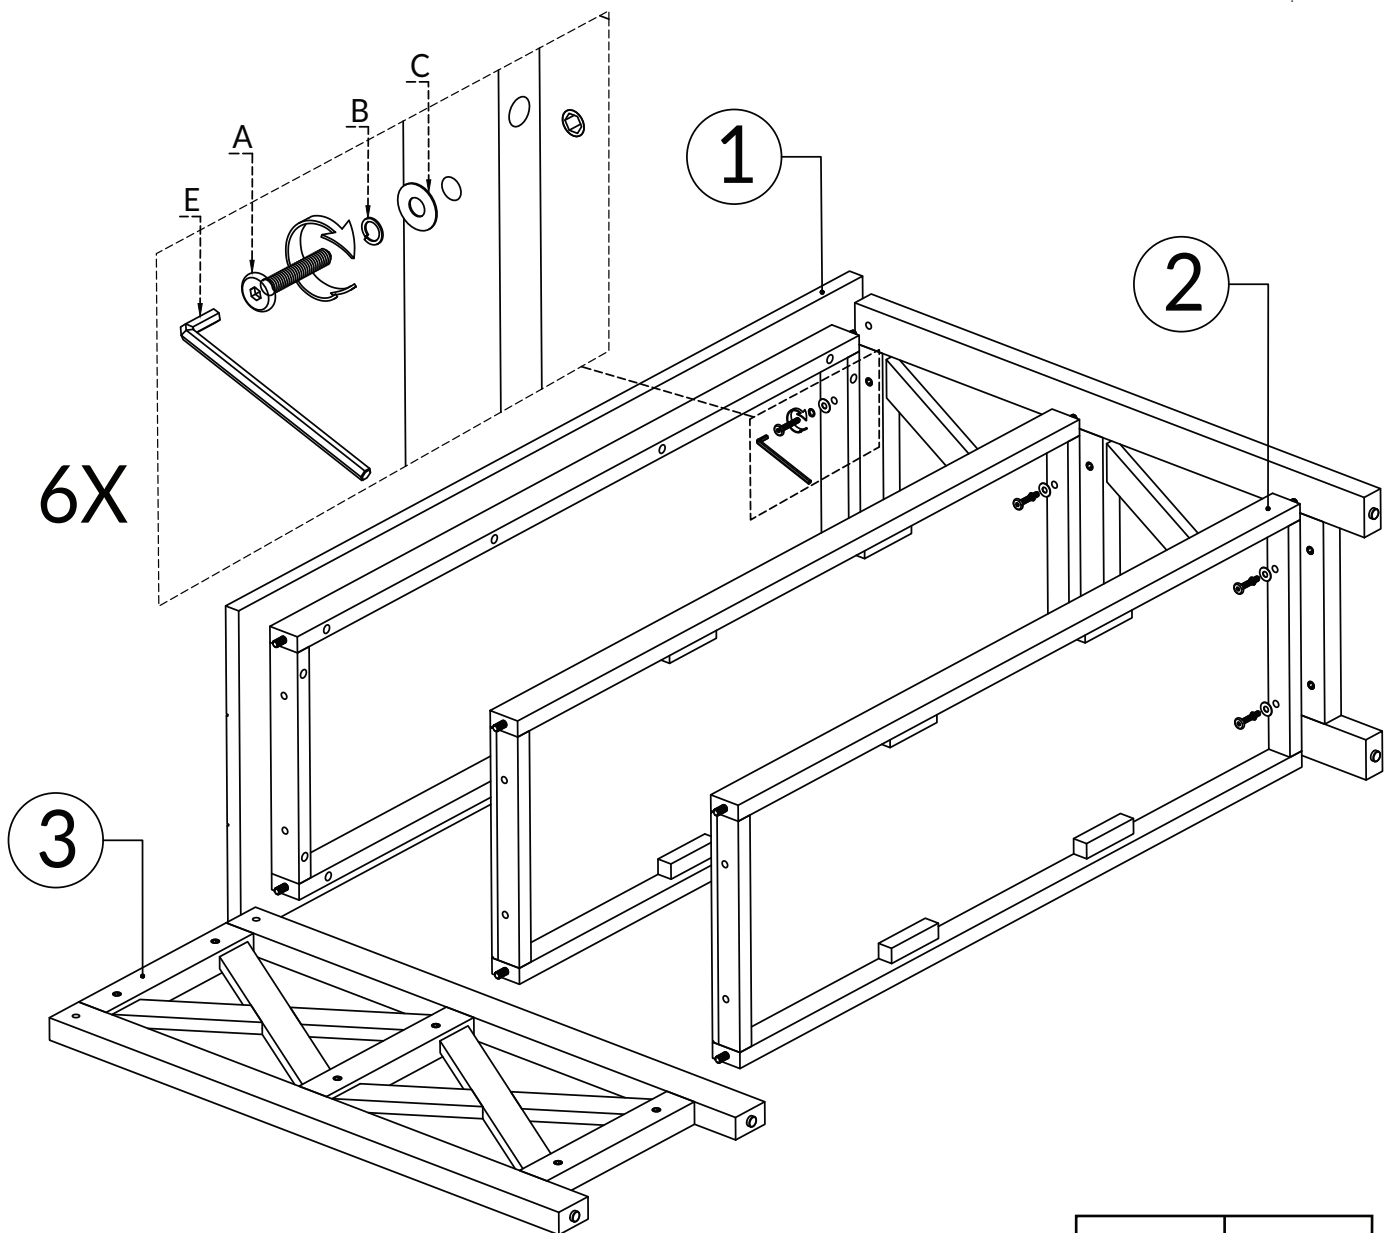

| Hardware | Count |
|----------|-------|
| A | 6 |
| B | 6 |
| C | 6 |
| E | 1 |

TIGHTEN BOLT COMPLETELY.

03

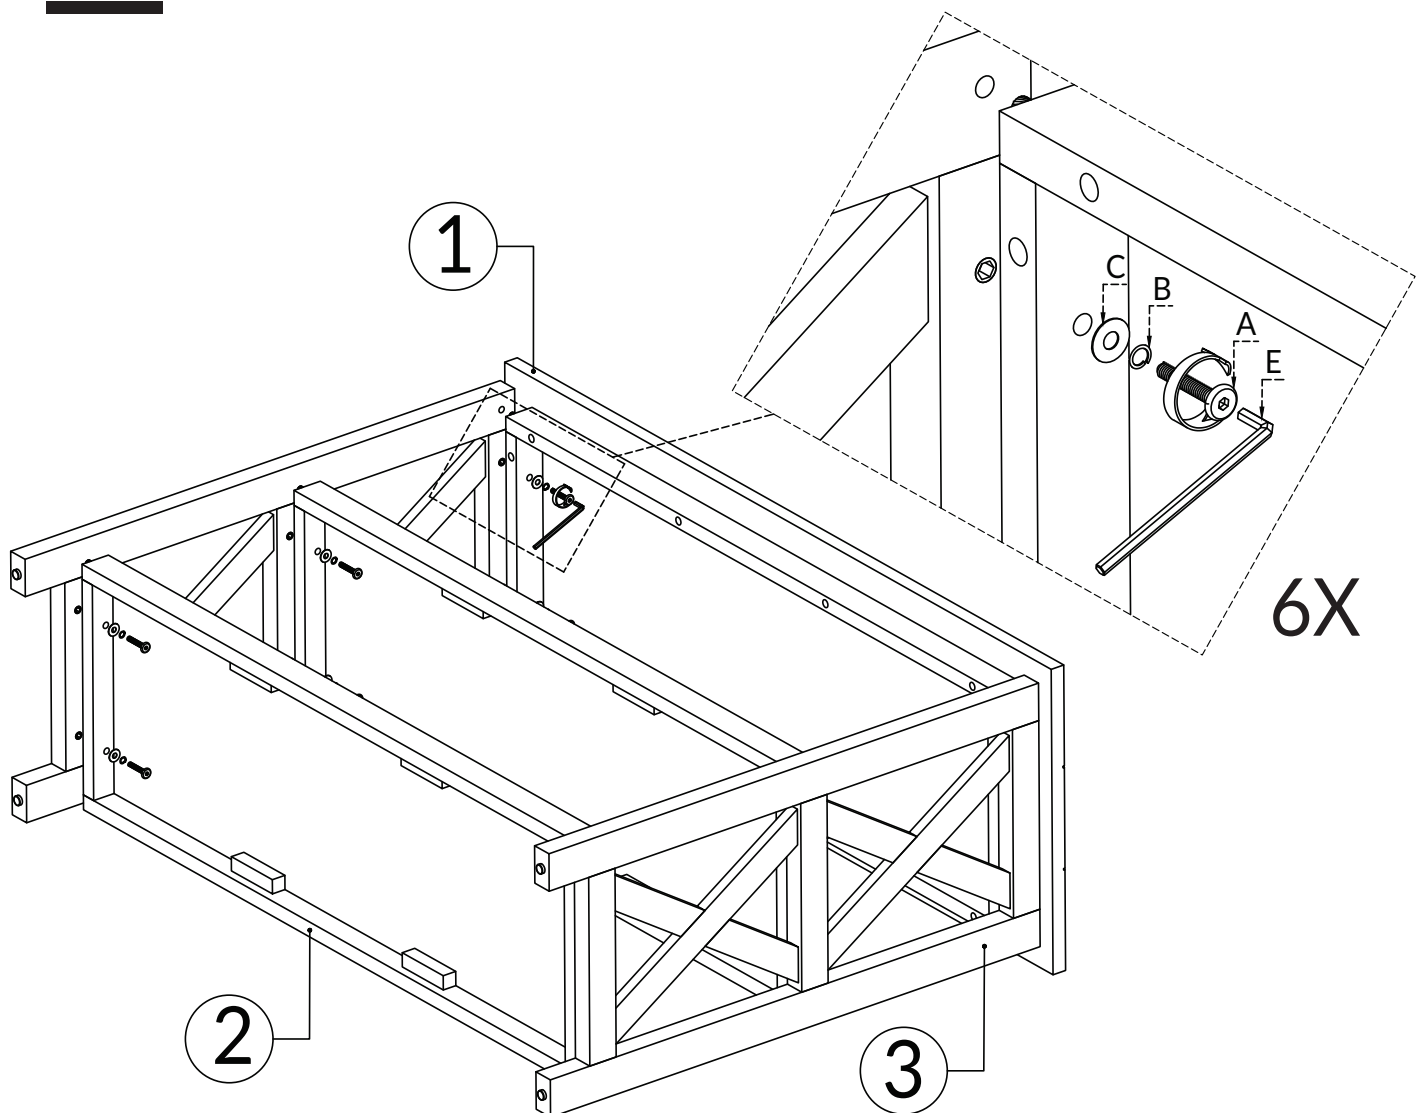


| Hardware | Count |
|----------|-------|
| A | 6 |
| B | 6 |
| C | 6 |
| E | 1 |

TIGHTEN BOLT COMPLETELY.



Weight Capacity

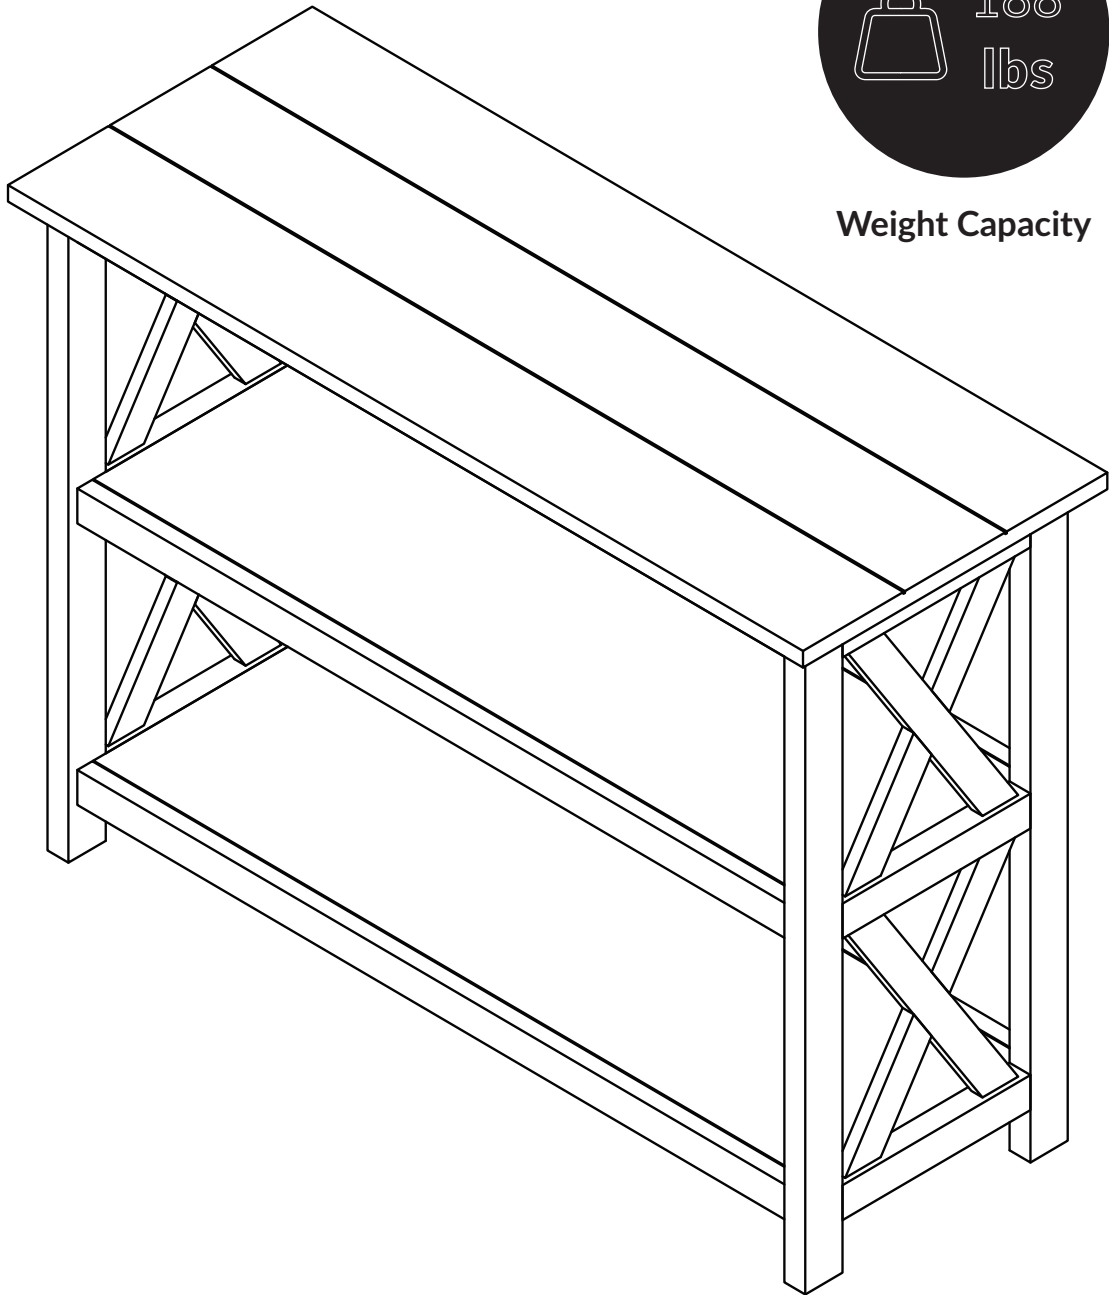

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.