



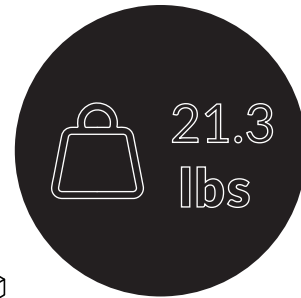

# Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 77408 | JAMESTOWN SIDETABLE

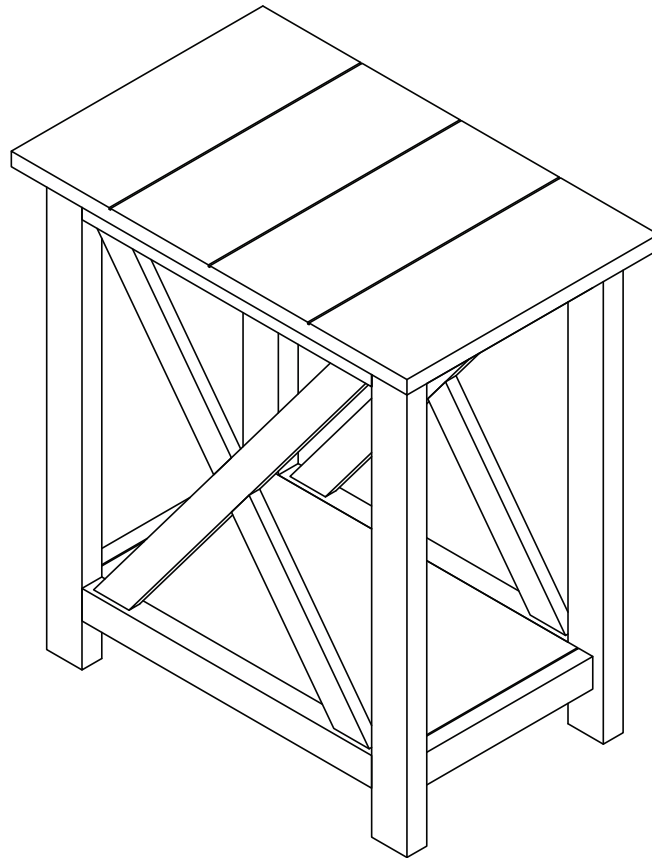

Weight Capacity



Locate the  
**HARDWARE PACK**  
which is attached to  
the shipping carton  
with red tape.

10/2024



Have questions about  
assembling your item?



Items or parts damaged?



Missing a part?

**We're here to help! (Monday-Friday from 9am-5pm CST)**



847-949-6300  
877-267-2261



customerservice@  
boraamindustries.com







www.boraamindustries.com

# Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.






Locate the  
**HARDWARE PACK**  
which is attached to the  
shipping carton with red  
tape.

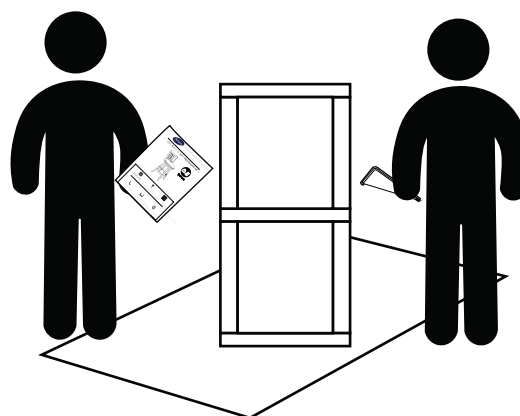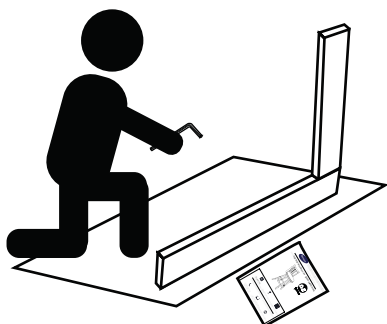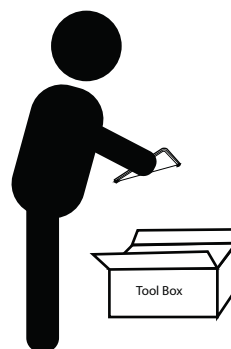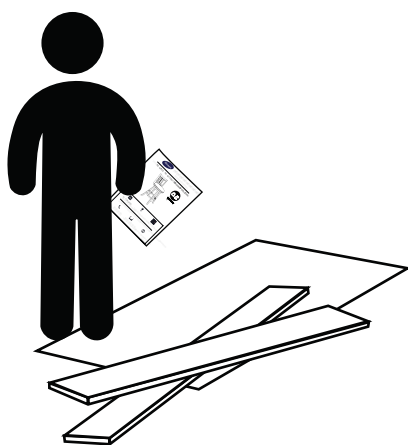



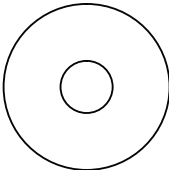

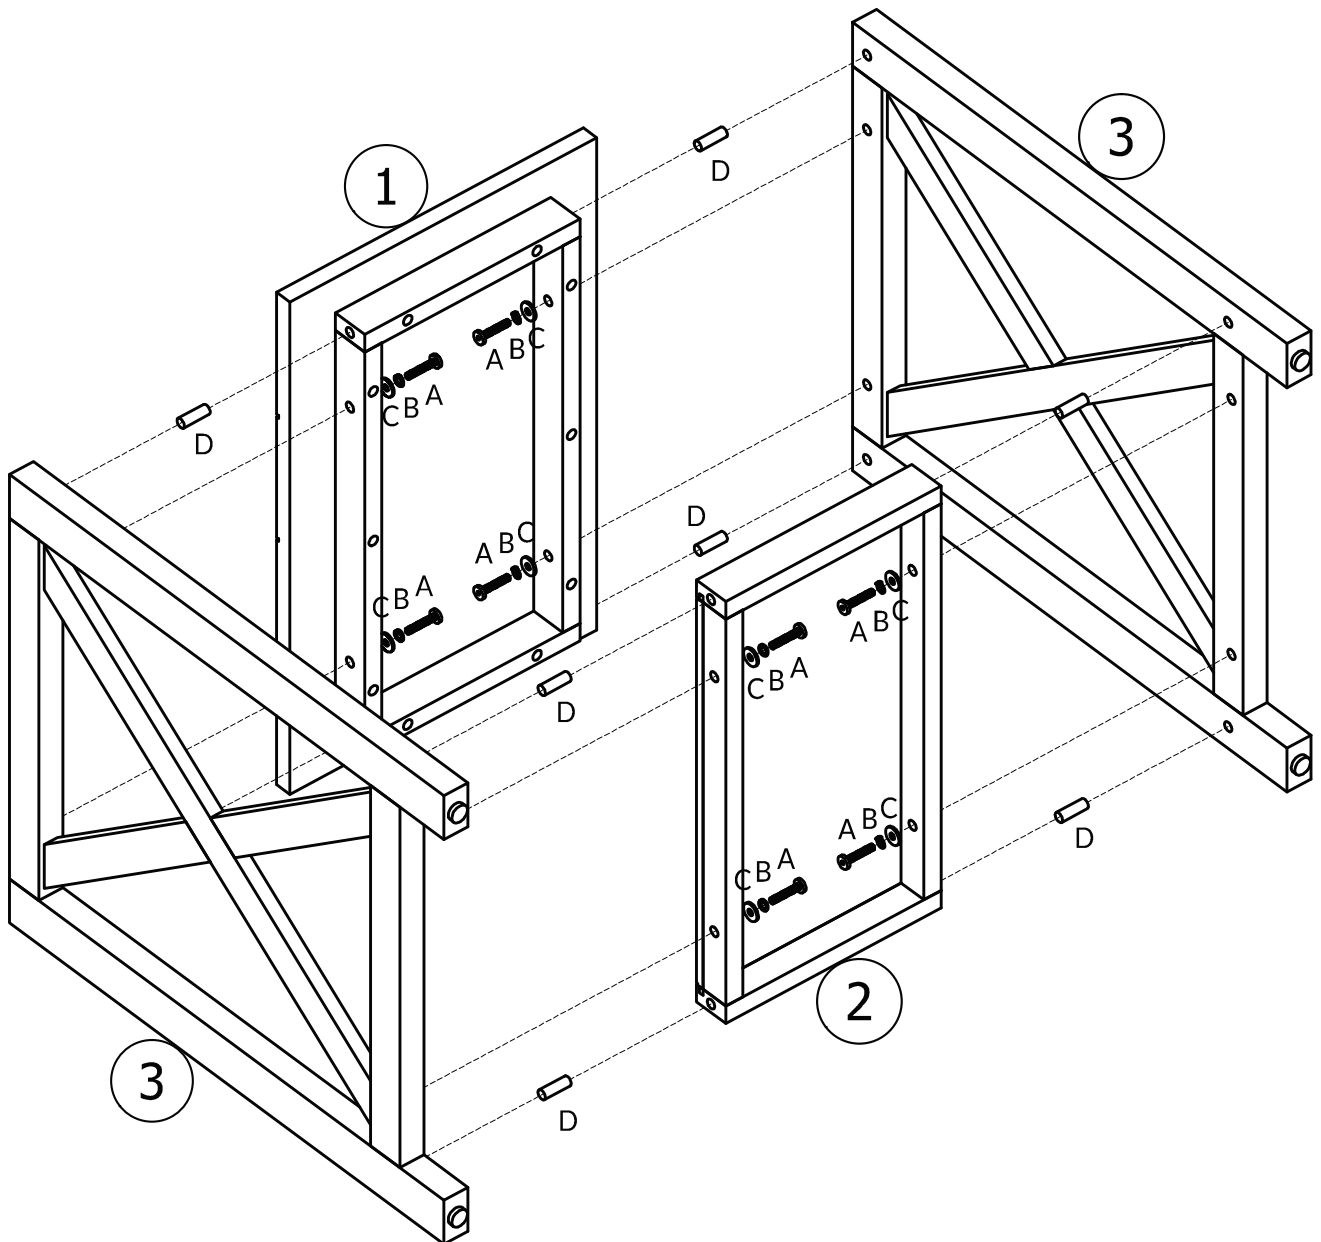
# Assembly Overview

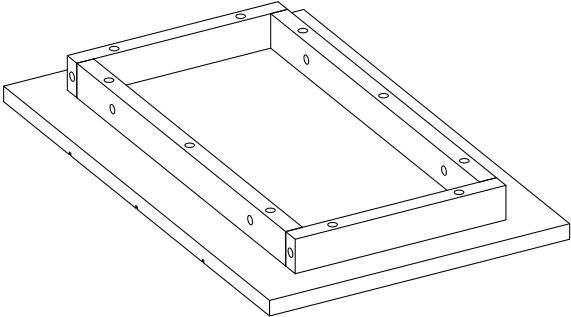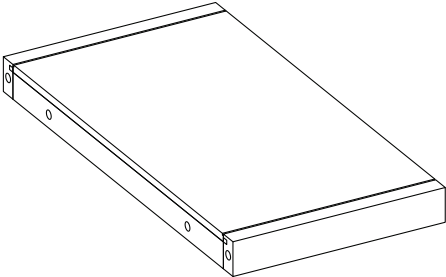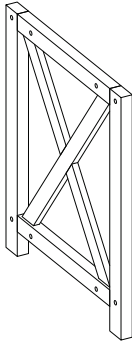


# PARTS

<div> <div>① (x1)</div> <div> <div>Top Panel :</div>  </div> </div>	
<div> <div>② (x1)</div> <div> <div>Shelf :</div>  </div> </div>	<div> <div>③ (x2)</div> <div> <div>Side Panel :</div>  </div> </div>
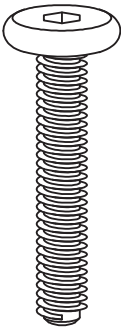
# HARDWARE


<div> <div>Ⓐ (x8)</div>  </div>	<div> <div>Ⓑ (x8)</div>  </div>	<div> <div>Ⓒ (x8)</div>  </div>	<div> <div>Ⓓ (x8)</div>  </div>	<div> <div>Ⓔ (x1)</div>  </div>
<div> <div>Bolt M6x35</div> </div>	<div> <div>Spring Washer</div> </div>	<div> <div>Flat Washer</div> </div>	<div> <div>Wooden Dowel</div> </div>	<div> <div>Allen Wrench</div> </div>

# 01

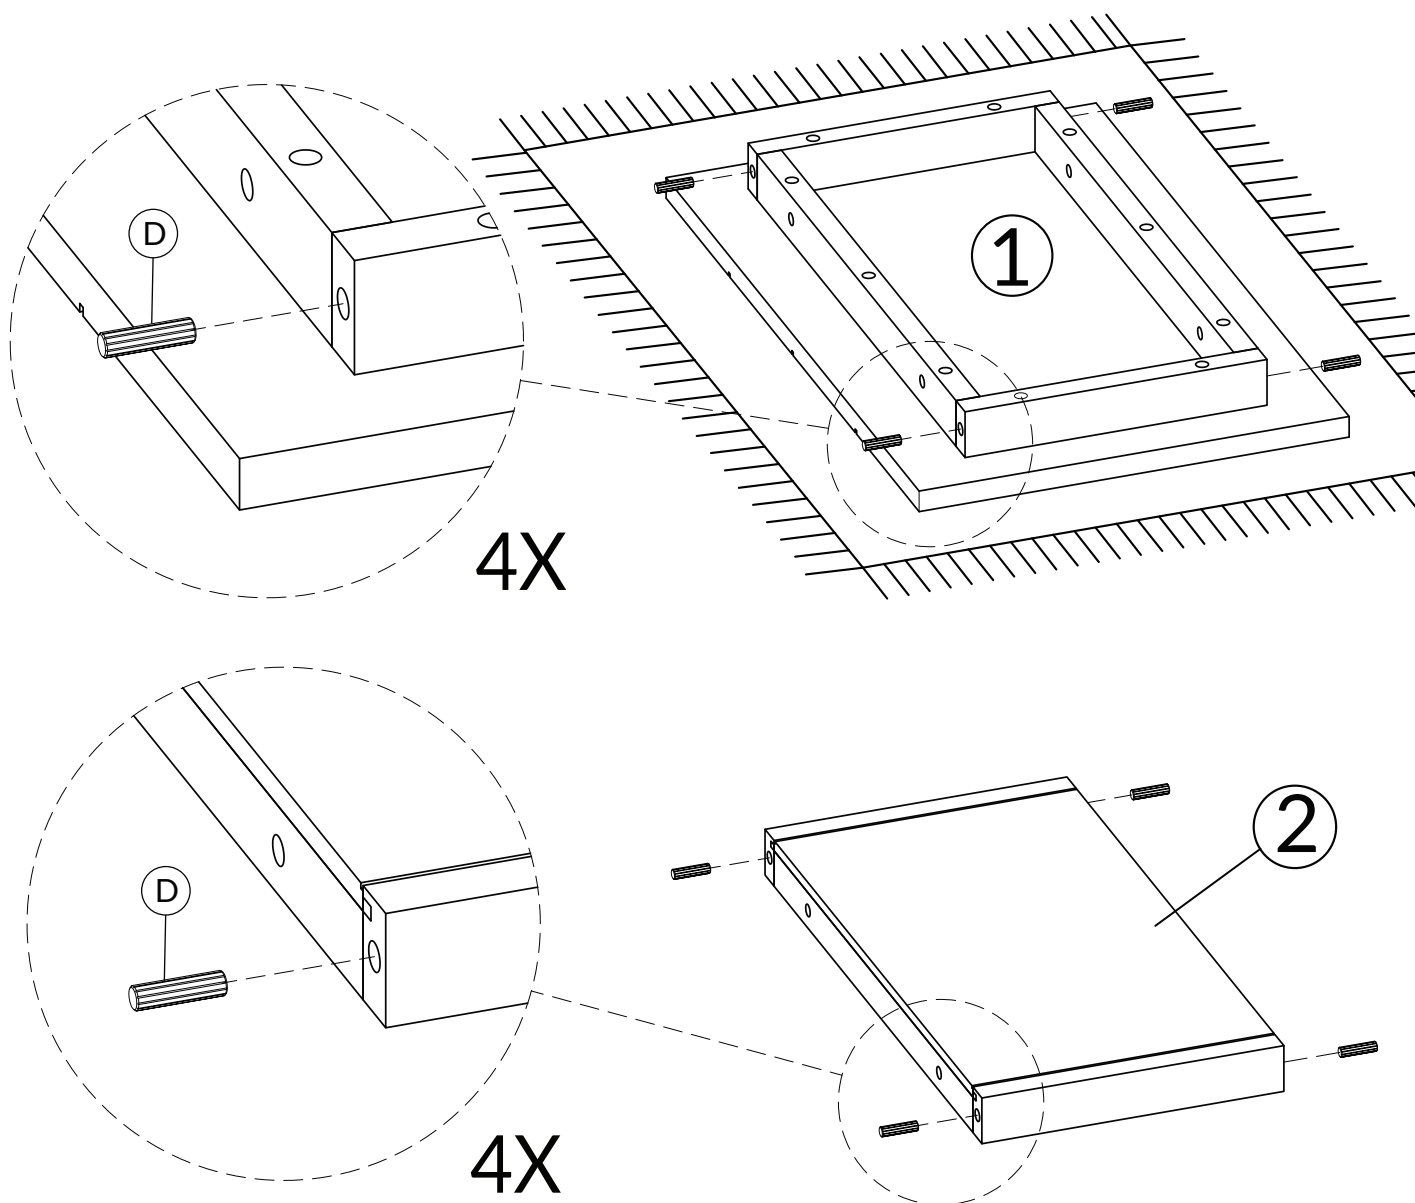

Hardware	Count
D	8


# 02

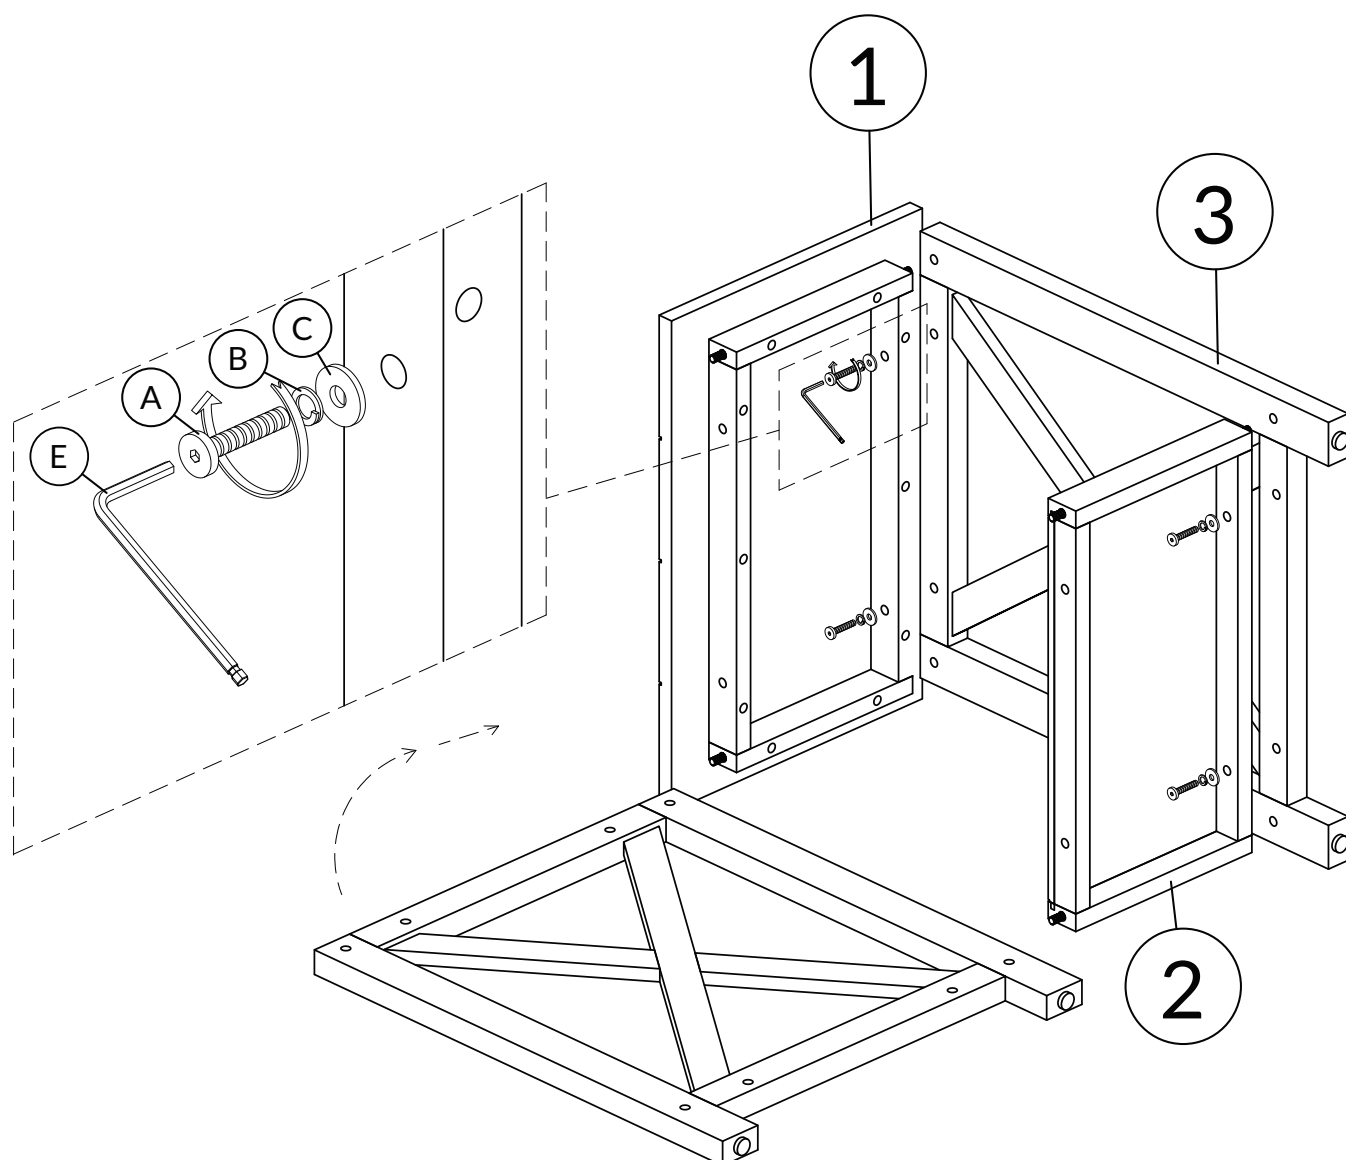

Hardware	Count
A	4
B	4
C	4
E	1

TIGHTEN BOLT COMPLETELY.

# 03

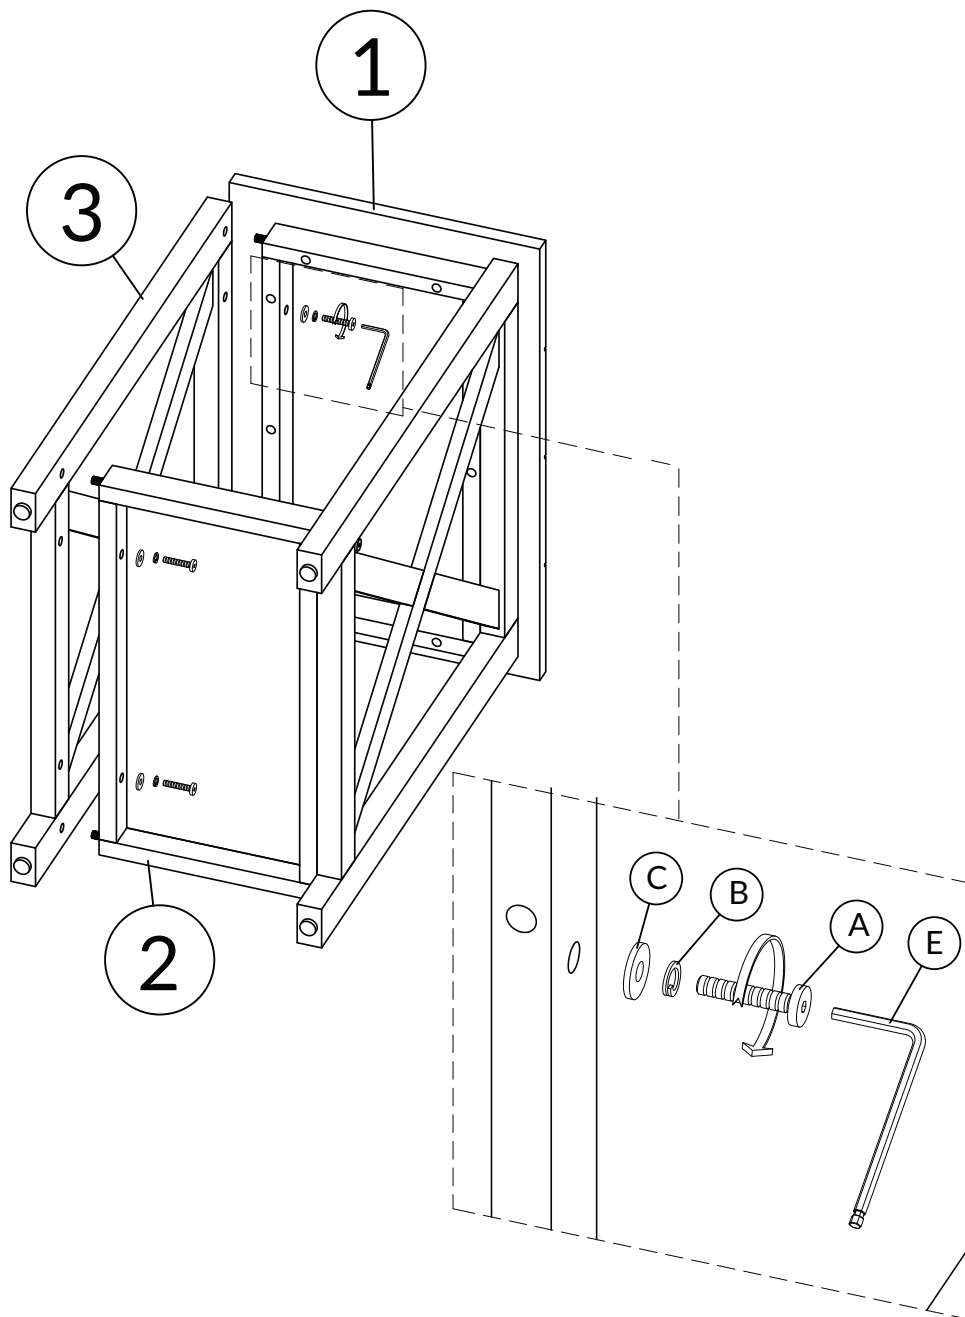


Hardware	Count
A	4
B	4
C	4
E	1

TIGHTEN BOLT COMPLETELY.



**Weight Capacity**

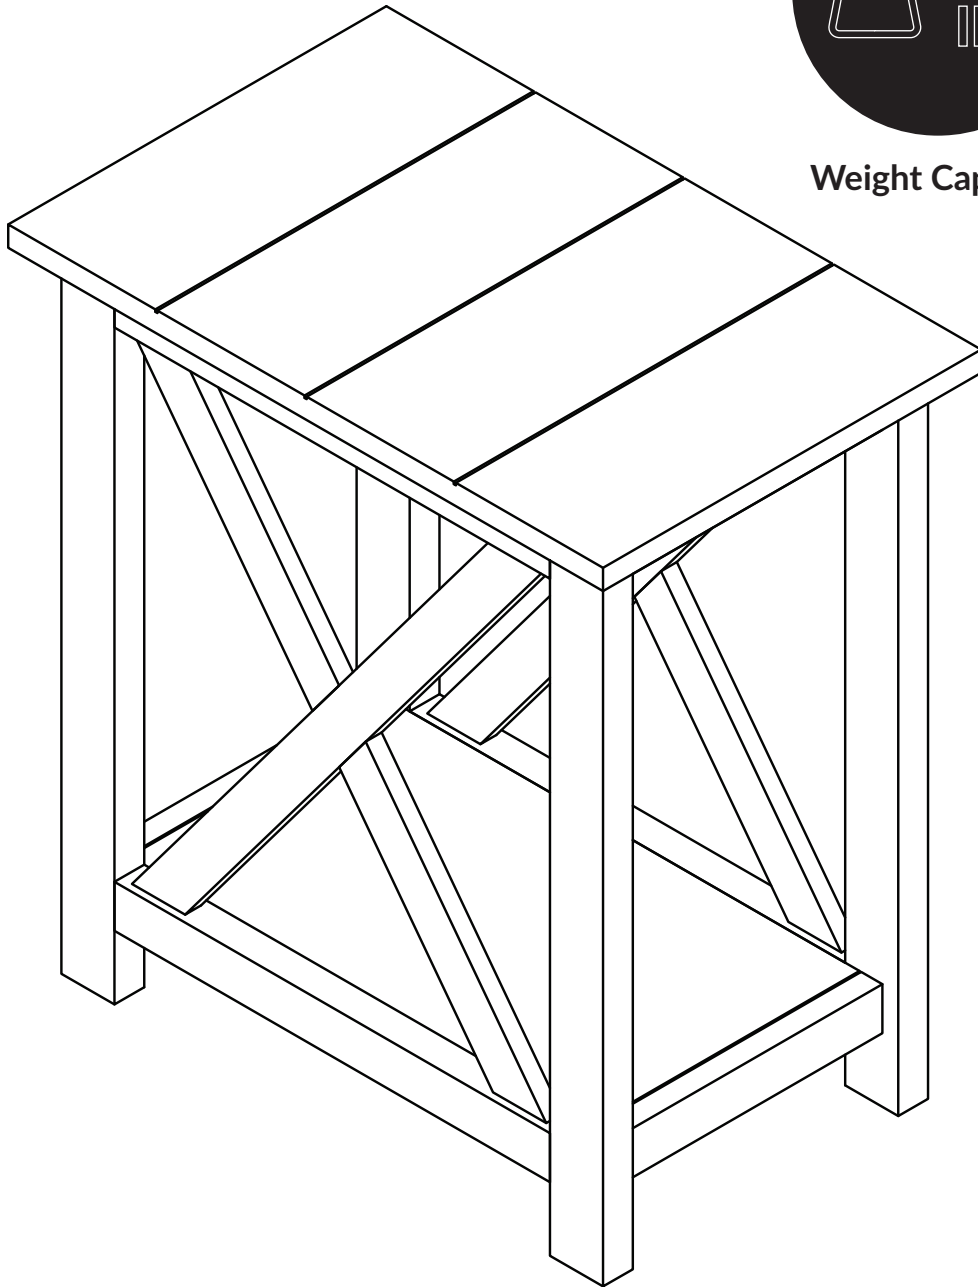

**BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.**