




Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 78024,78029 | RASMUS STOOL

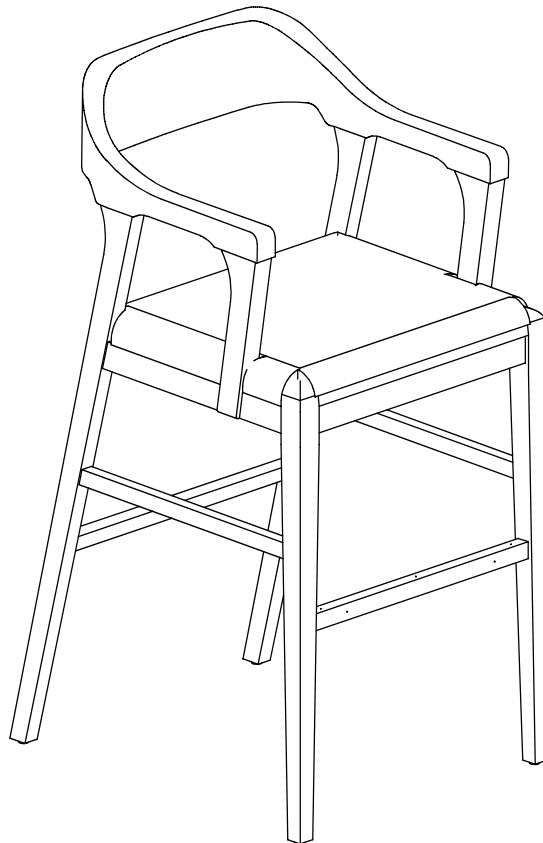

Weight Capacity



Locate the
HARDWARE PACK
which is attached to the
shipping carton with red tape.

Version 2/ Updated as of 06.24



Have questions about
assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com



www.boraamindustries.com






Philips screwdriver
not included.

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.











Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

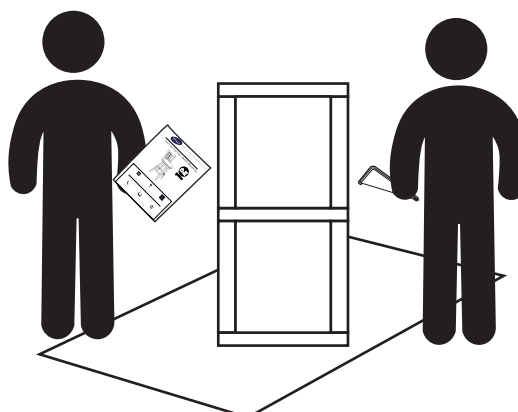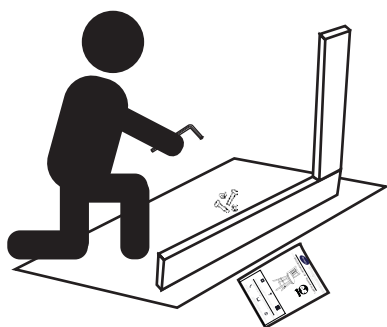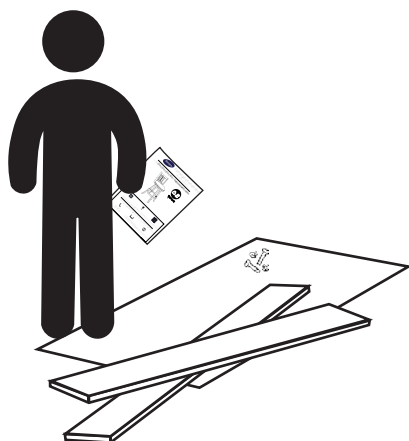

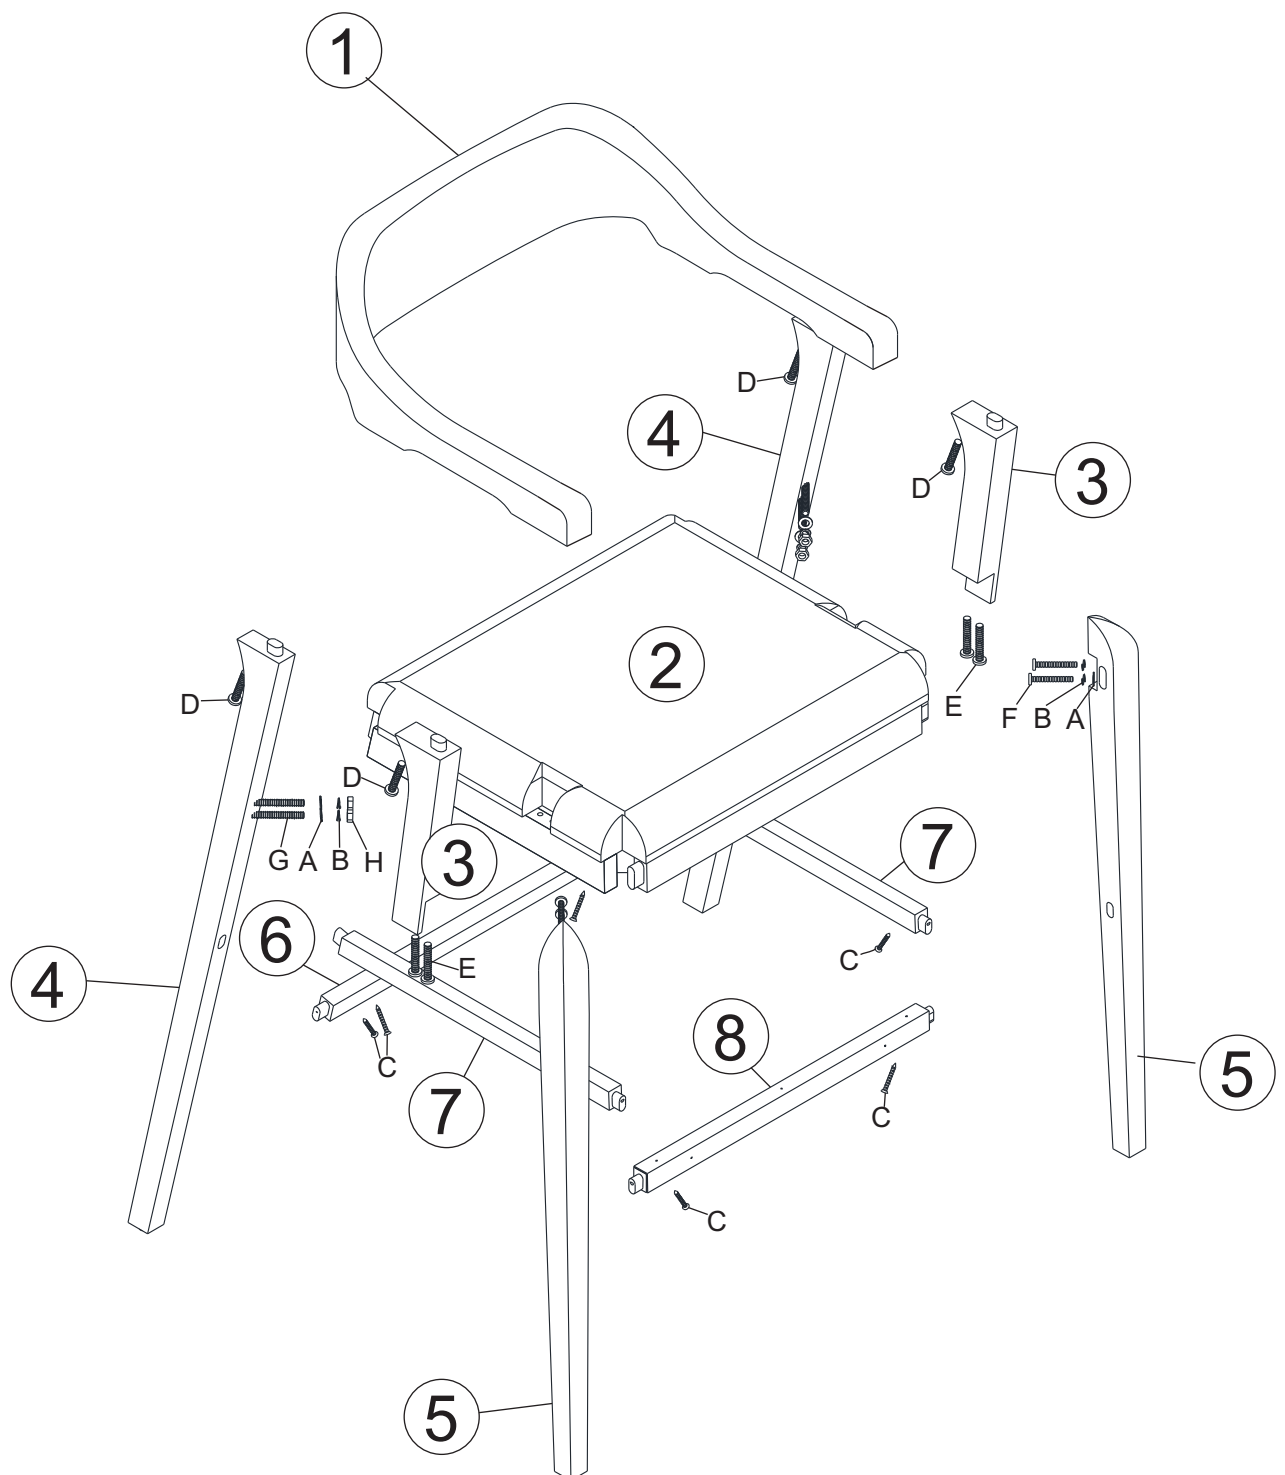










Assembly Overview

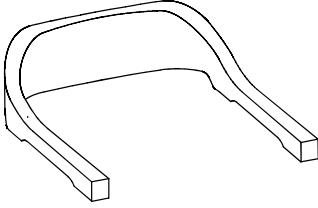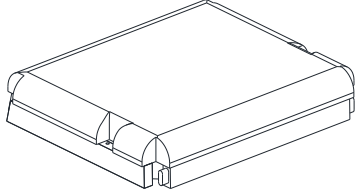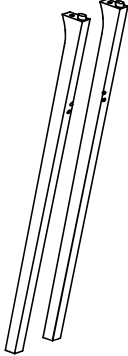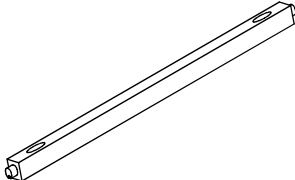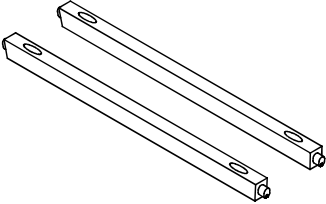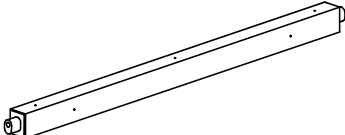


PARTS

① (x1)	② (x1)
<p>Backrest:</p> 	<p>Seat cushion:</p> 
③ (x2)	④ (x2)
<p>Front arm support:</p> 	<p>Back leg:</p> 
⑤ (x2)	⑥ (x1)
<p>Front leg:</p> 	<p>Behind Stretcher : (No Metal Kick-Plate)</p> 
⑦ (x2)	⑧ (x1)
<p>Side Stretcher:</p> 	<p>Front Stretcher: (With Metal Kick-Plate)</p> 

HARDWARE

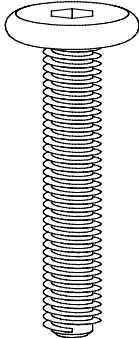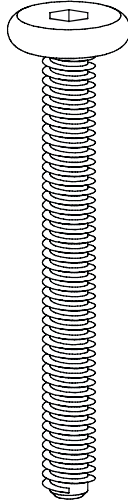Ⓐ (x8)	Ⓑ (x8)	Ⓒ (x8)	Ⓓ (x4)	Ⓔ (x4)	Ⓕ (x4)
					
Flat Washer	Spring Washer	Screw M4*40	Bolt M8*45	Bolt M6*60	Bolt M8*70
Ⓖ (x4)	Ⓗ (x4)	Ⓘ (x4)	Ⓚ (x1)	Ⓛ (x1)	
					
Threaded rod M8*90	Hex nut M8	Protective cap M8	Allen Wrench M4*110	Wrench K13	

01

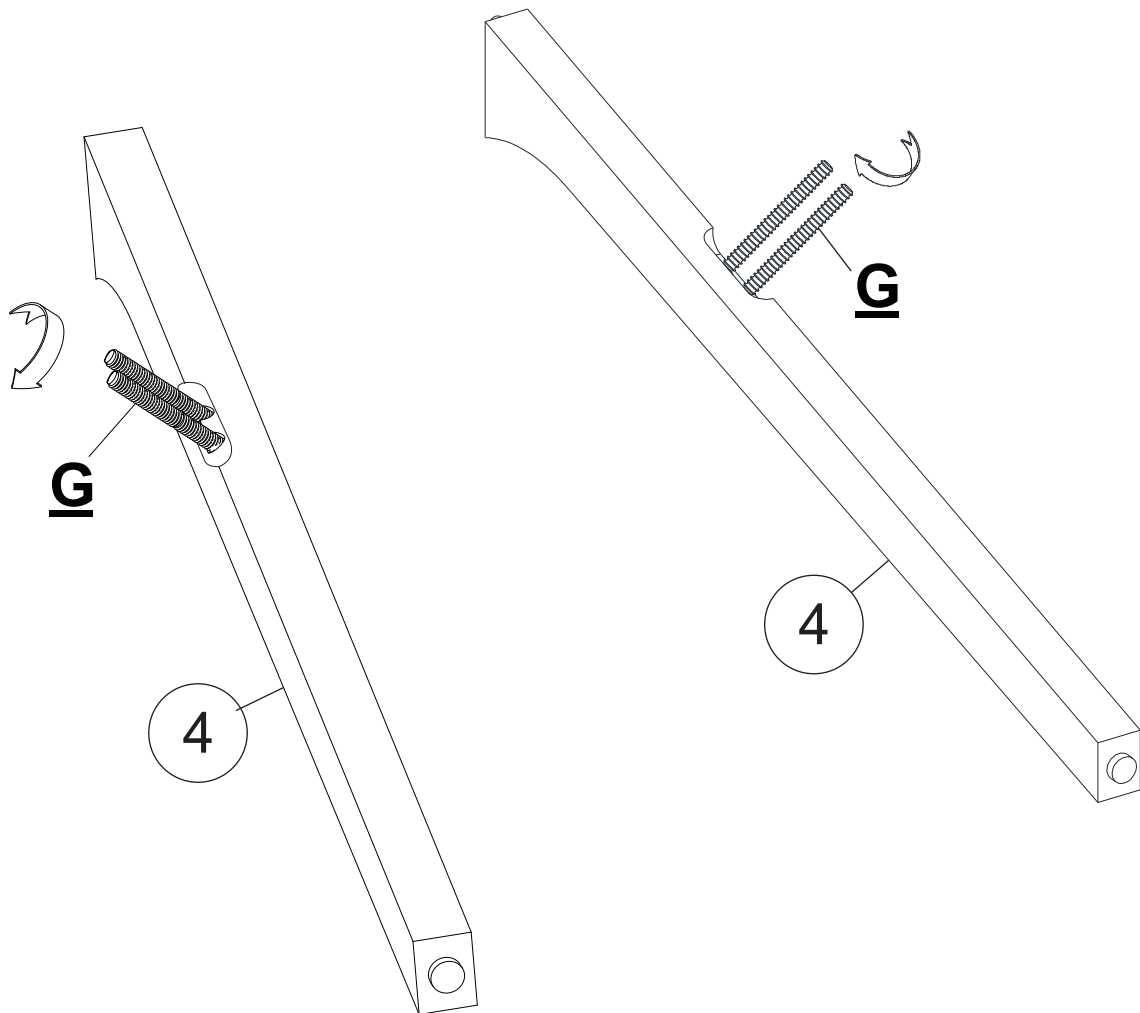


Hardware	Count
G	4

TIGHTEN THREADED ROD COMPLETELY.

02


DO NOT TIGHTEN BOLT COMPLETELY.

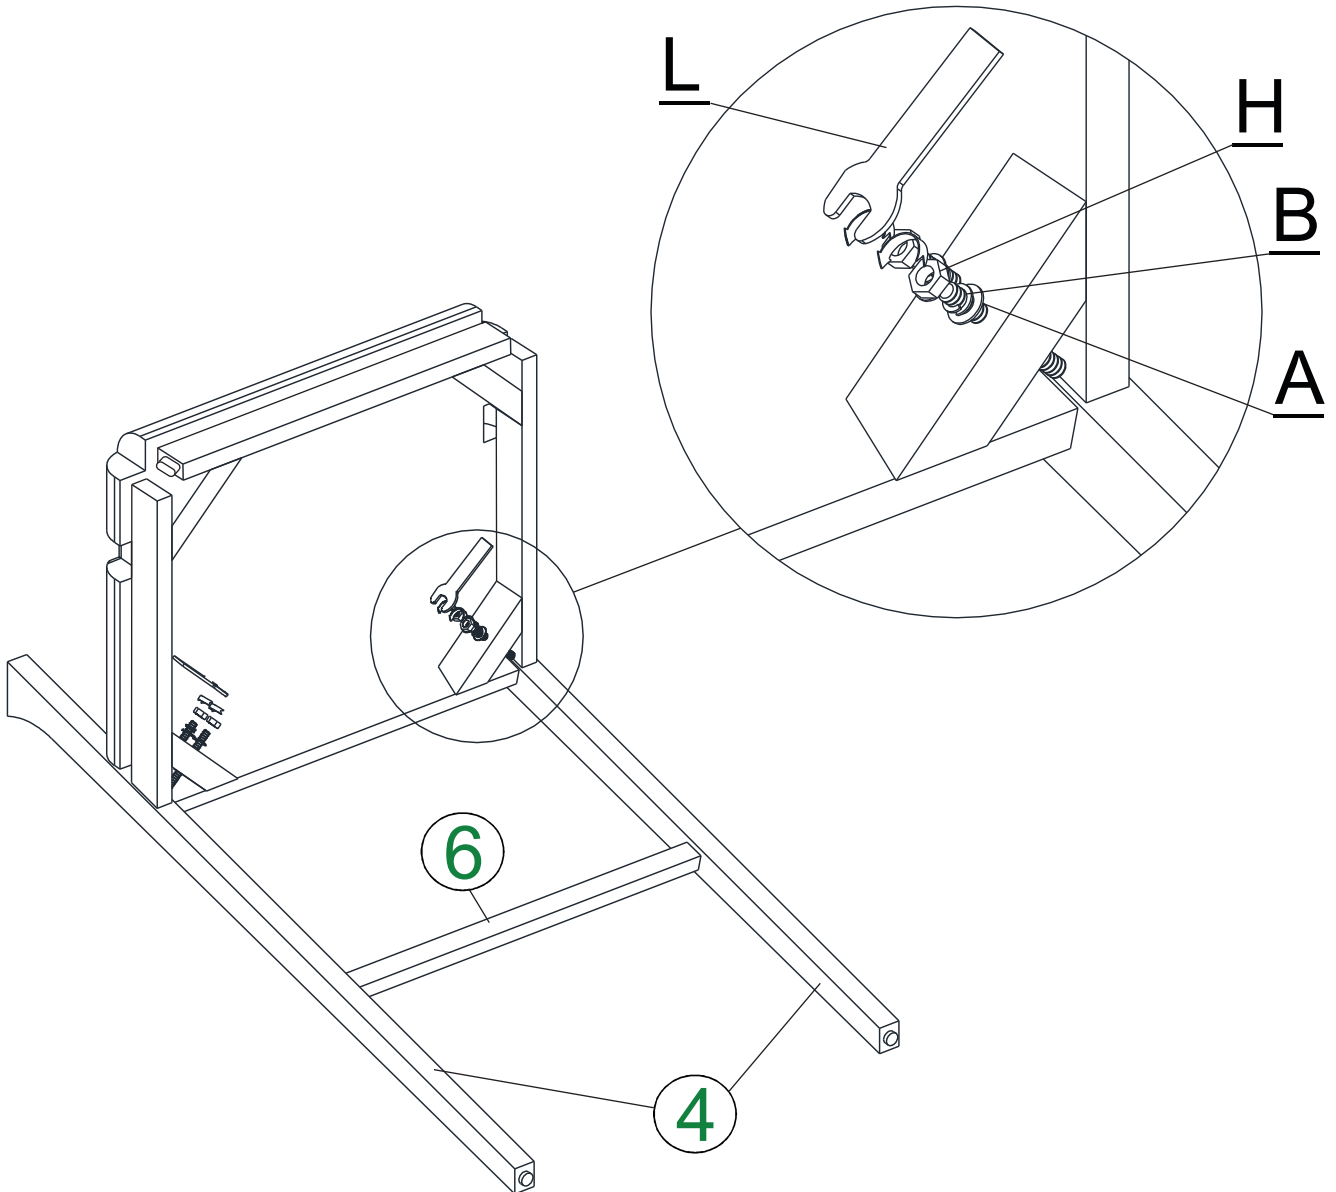

Hardware	Count
A	4
B	4
H	4
L	1


03

DO NOT TIGHTEN BOLT COMPLETELY

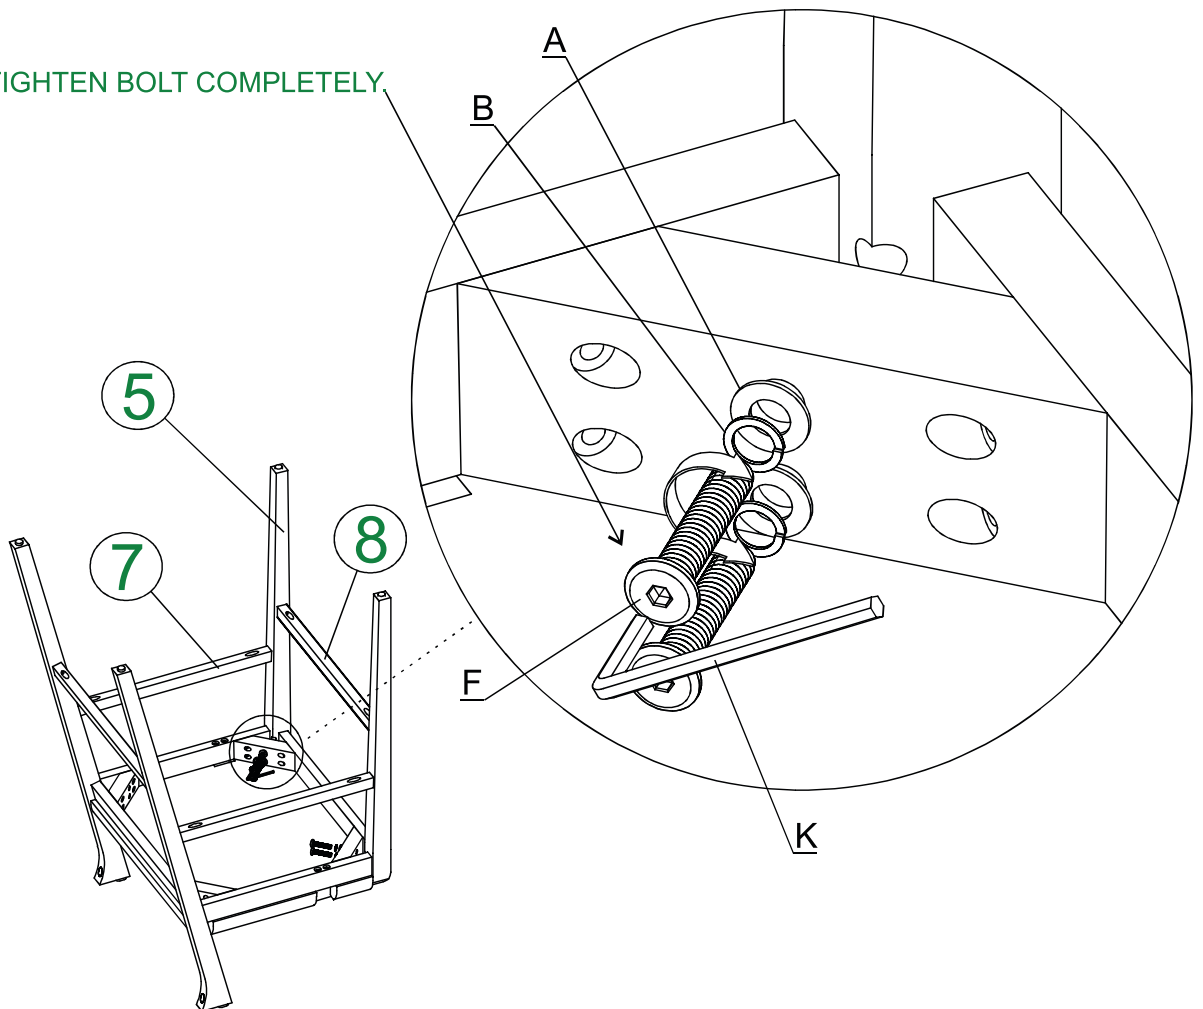

Hardware	Count
A	4
B	4
F	4
K	1

04

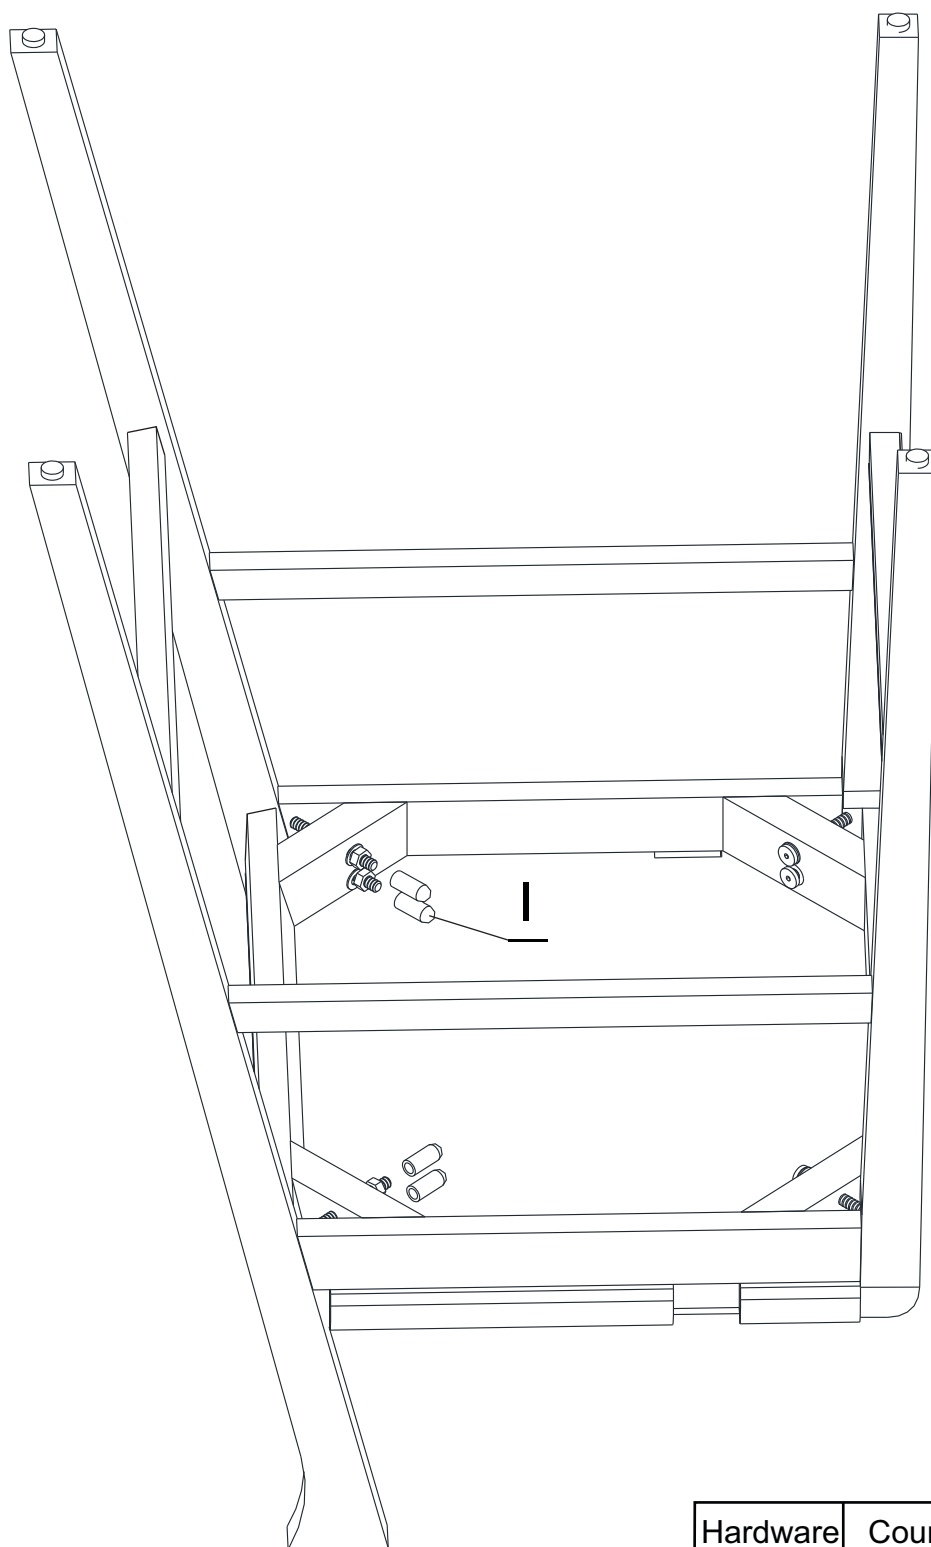



Hardware	Count
I	4

05



Attention!

When installing the stretchers into chair legs, make sure to align them correctly. Failure to do so will result in screws protruding from the side of the chair legs during their installation.

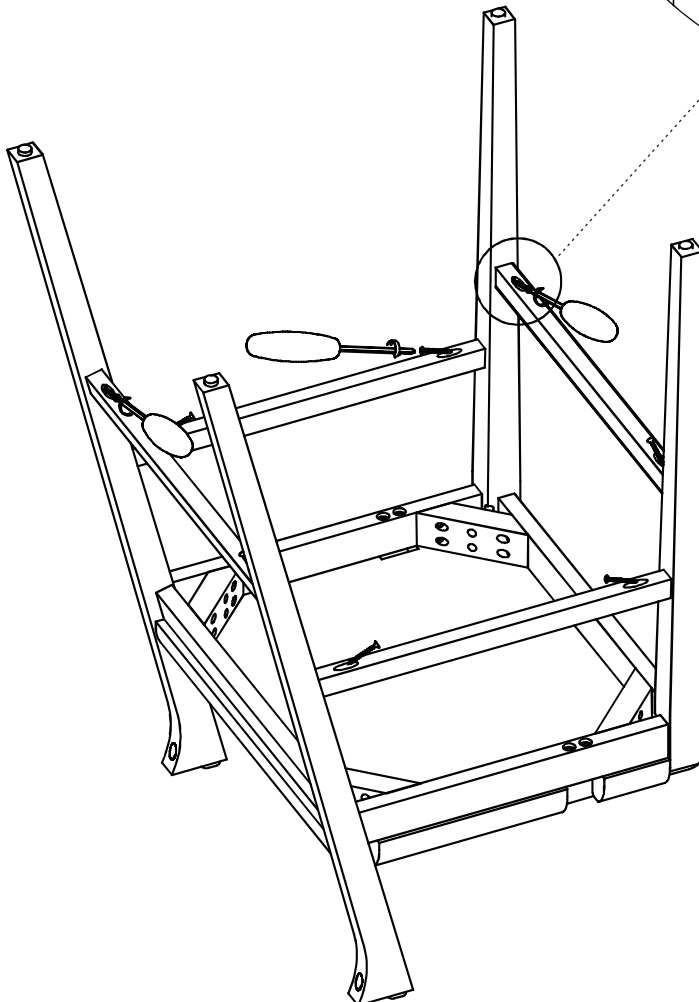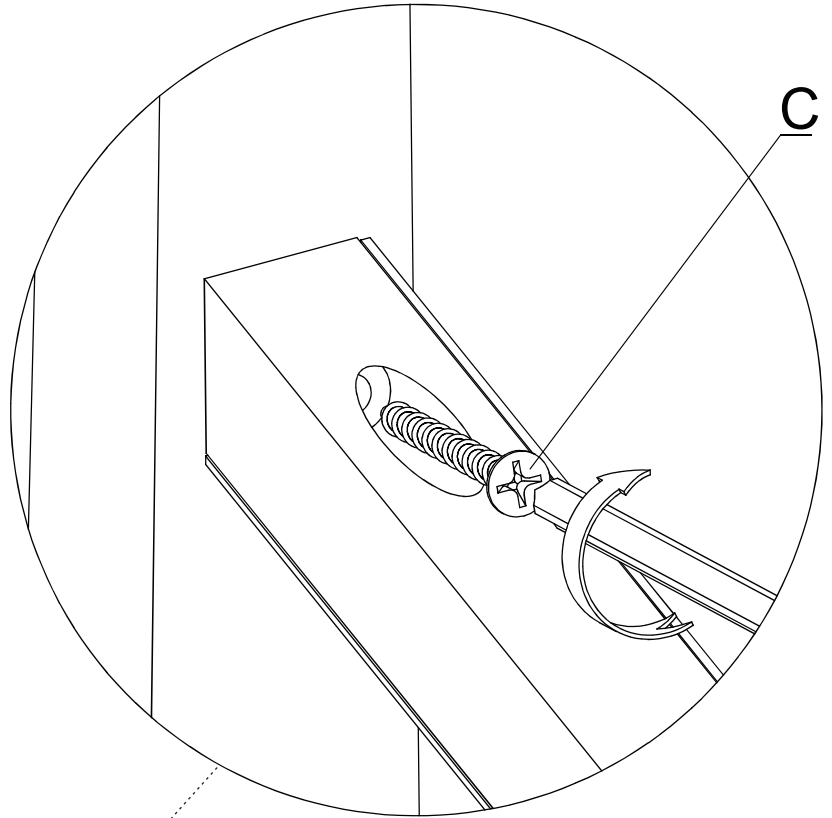


Hardware	Count
C	8

TIGHTEN SCREW COMPLETELY.

NOTE: ASSEMBLE FOLLOW EACH STEP, ADJUST ALIGNMENT 4 LEGS ON FLOOR THEN GO TO NEXT STEP.


06

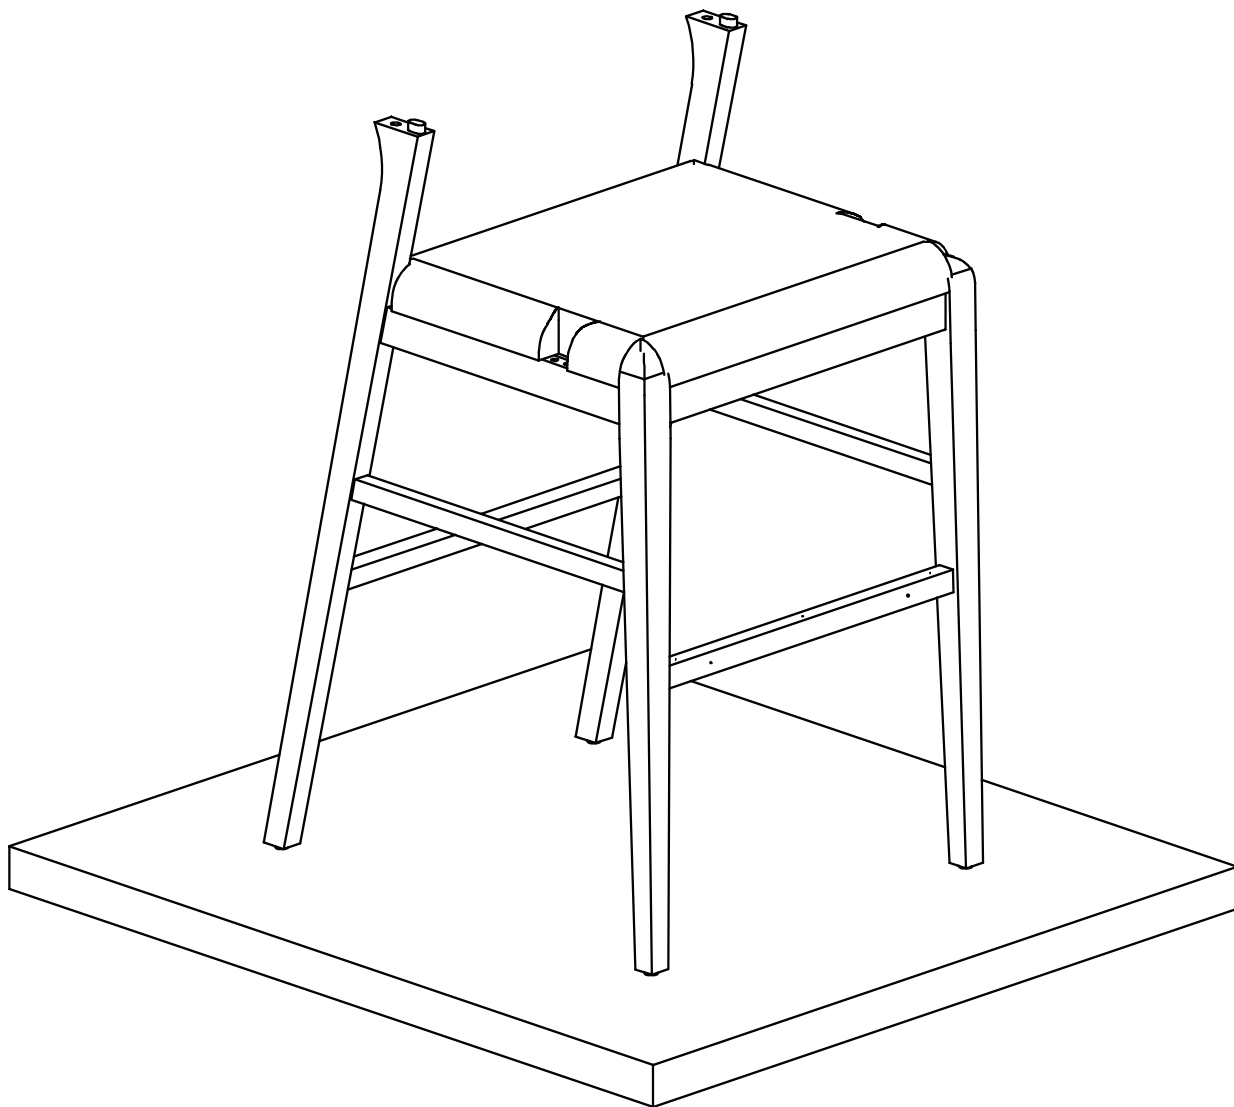

NOTE: ASSEMBLE FOLLOW EACH STEP, ADJUST ALIGNMENT 4 LEGS ON FLOOR THEN GO TO NEXT STEP.

847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com


07

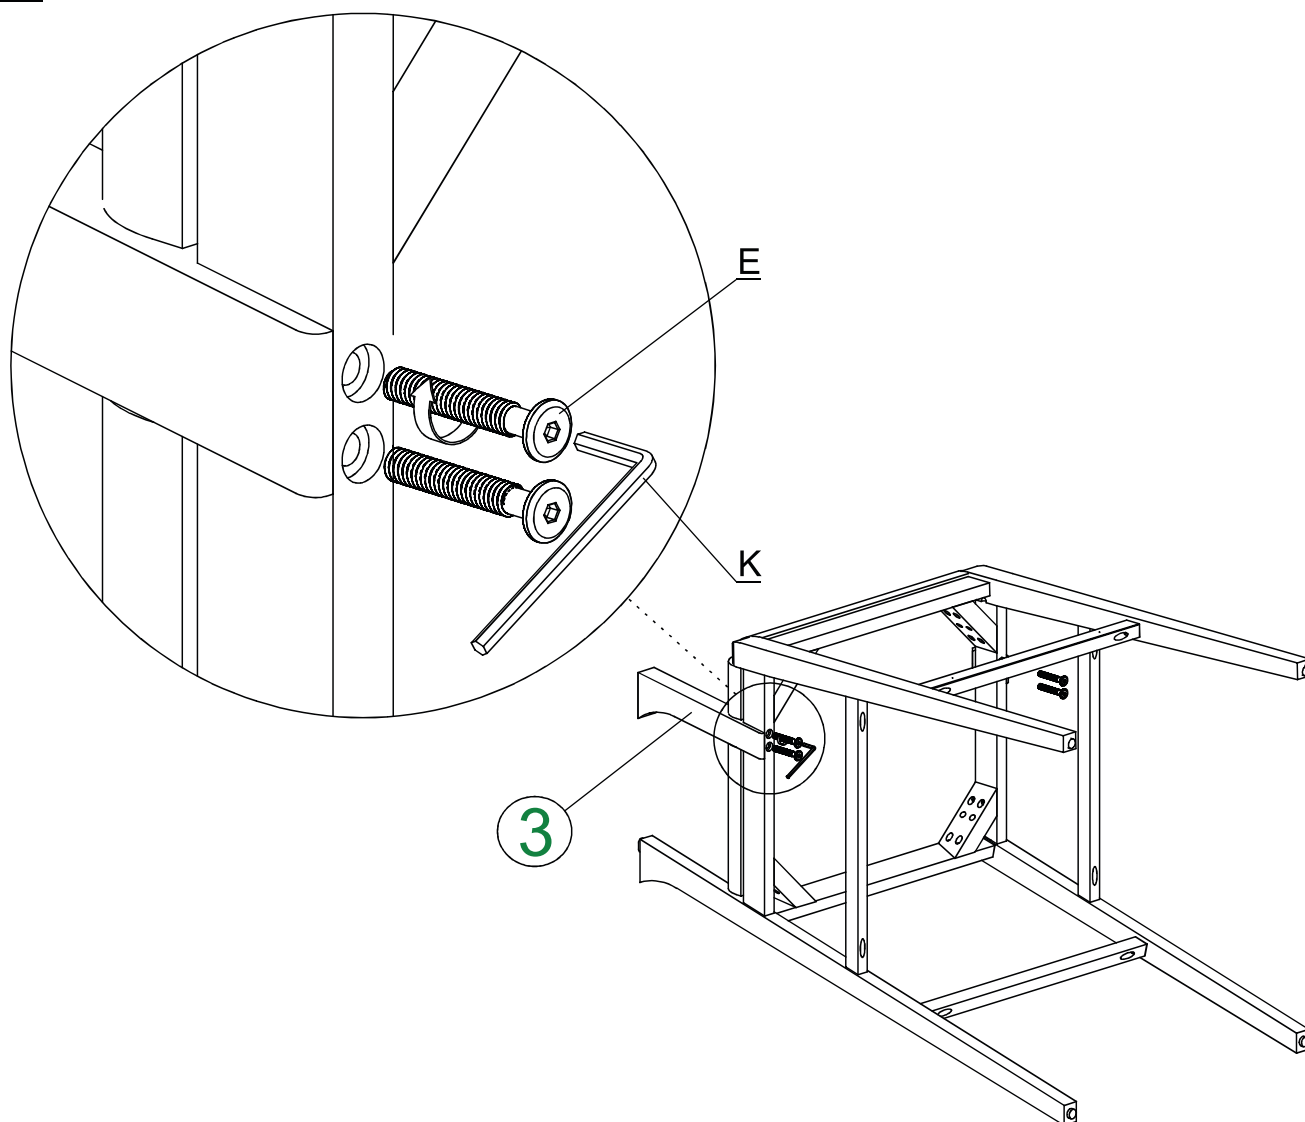

Hardware	Count
E	4
K	1


DO NOT TIGHTEN BOLT COMPLETELY.

08

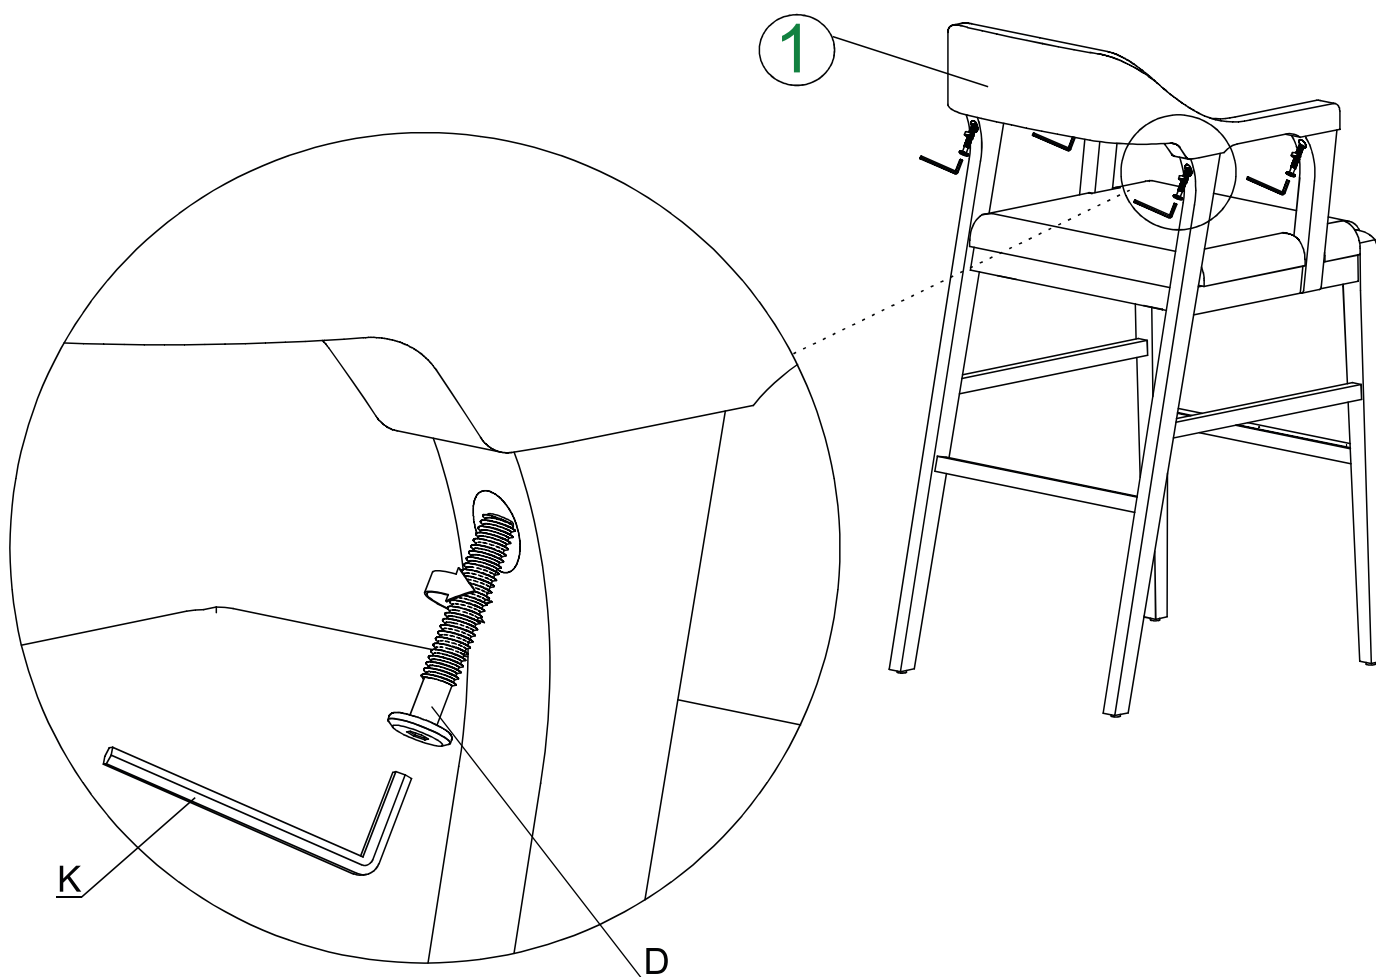

Hardware	Count
D	4
K	1

TIGHTEN BOLT COMPLETELY.

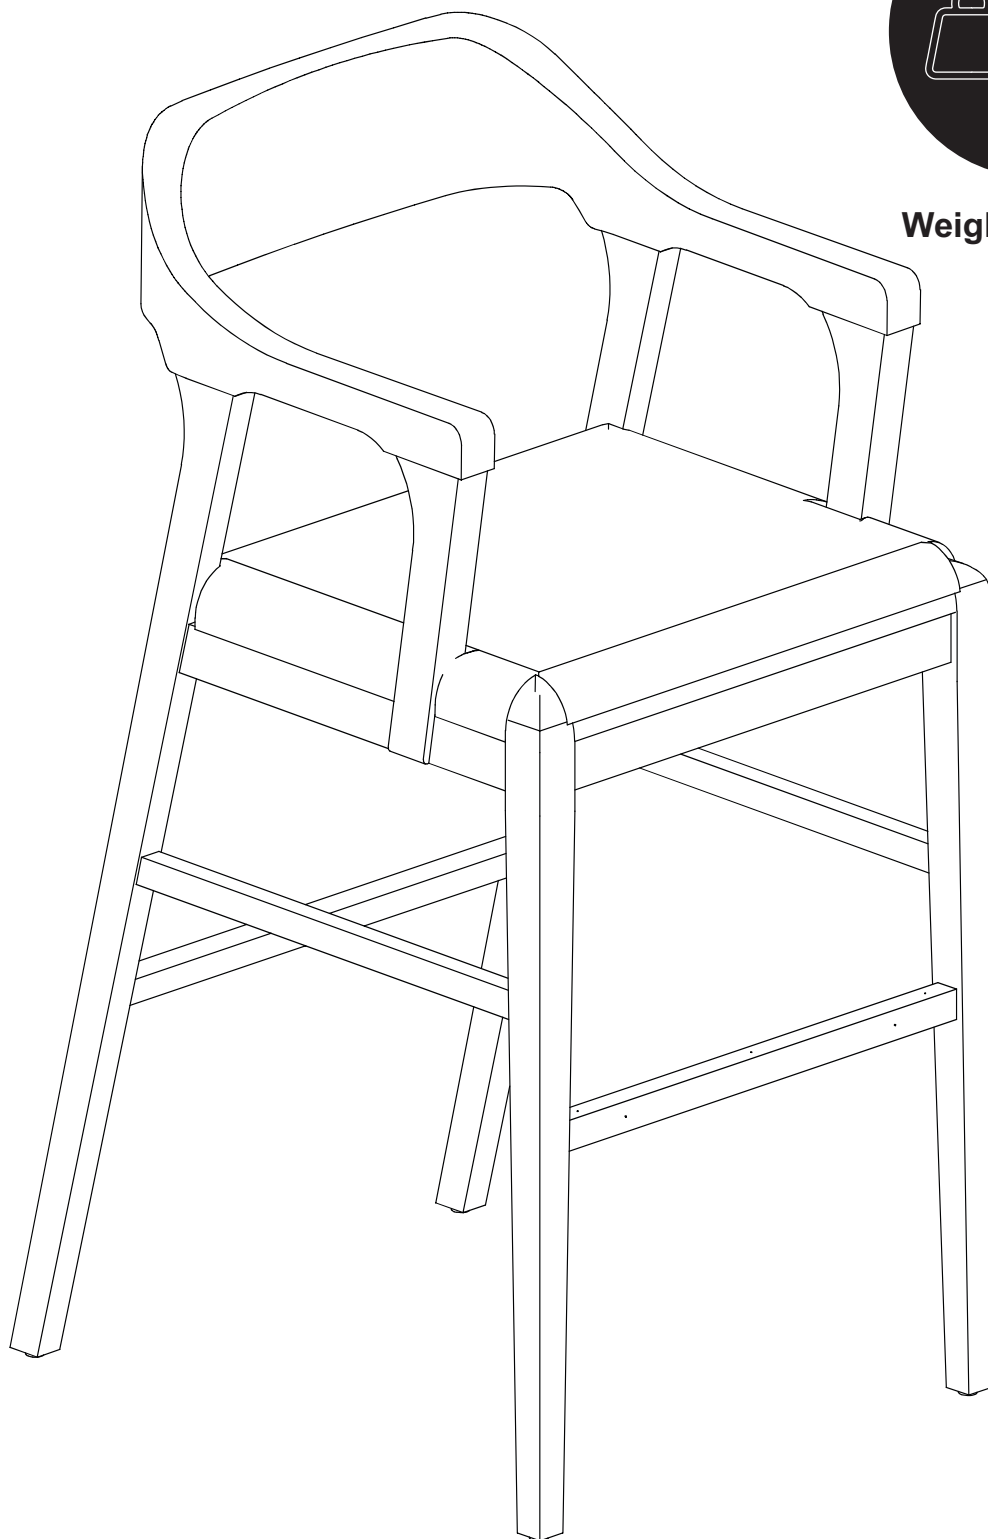

Weight Capacity

BE SURE TO CHECK ALL BOLTS ARE SECURELY
TIGHTENED PRIOR USING THIS STOOL.

847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com