




# Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 91024,91029 | THEODORA T-BACK STOOL  
WITH WOOD SEAT FRAME AND CUSHION

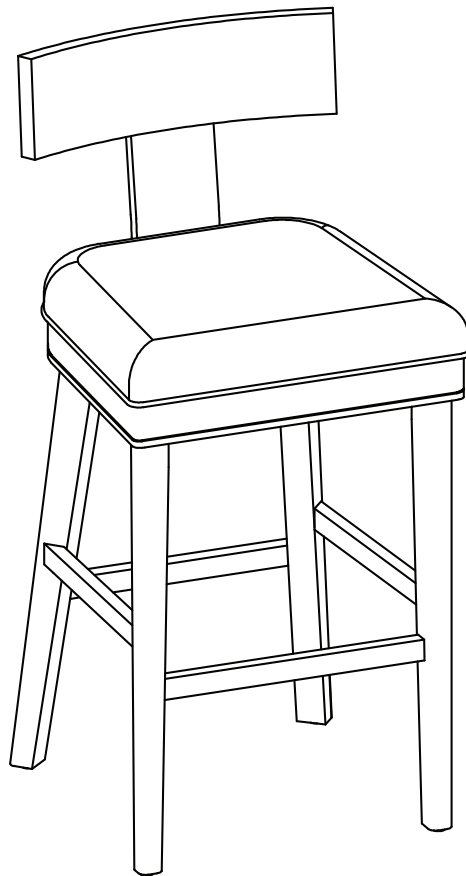

Weight Capacity



Locate the  
**HARDWARE PACK**  
which is attached to  
the shipping carton  
with red tape.

01/2025



Have questions about  
assembling your item?



Items or parts damaged?



Missing a part?

**We're here to help! (Monday-Friday from 9am-5pm CST)**



847-949-6300  
877-267-2261



customerservice@  
boraamindustries.com



www.boraamindustries.com







Philips screwdriver  
not included.

# Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.





Locate the  
**HARDWARE PACK**  
which is attached to the  
shipping carton with red  
tape.

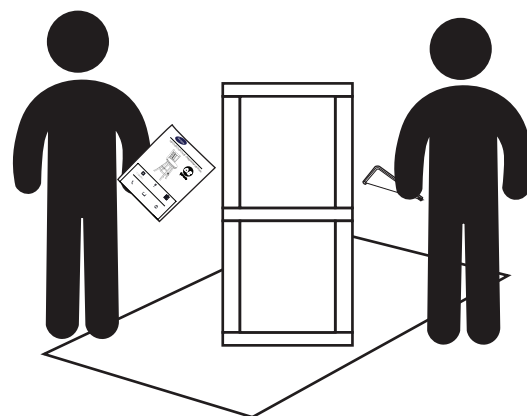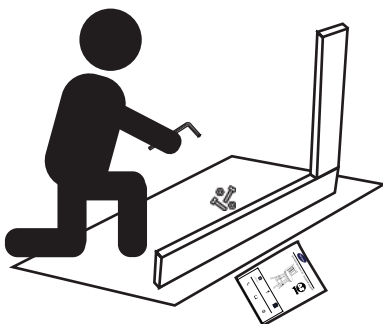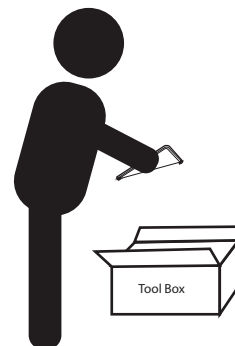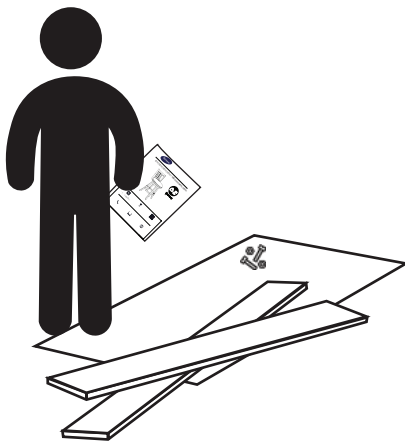



# Assembly Overview

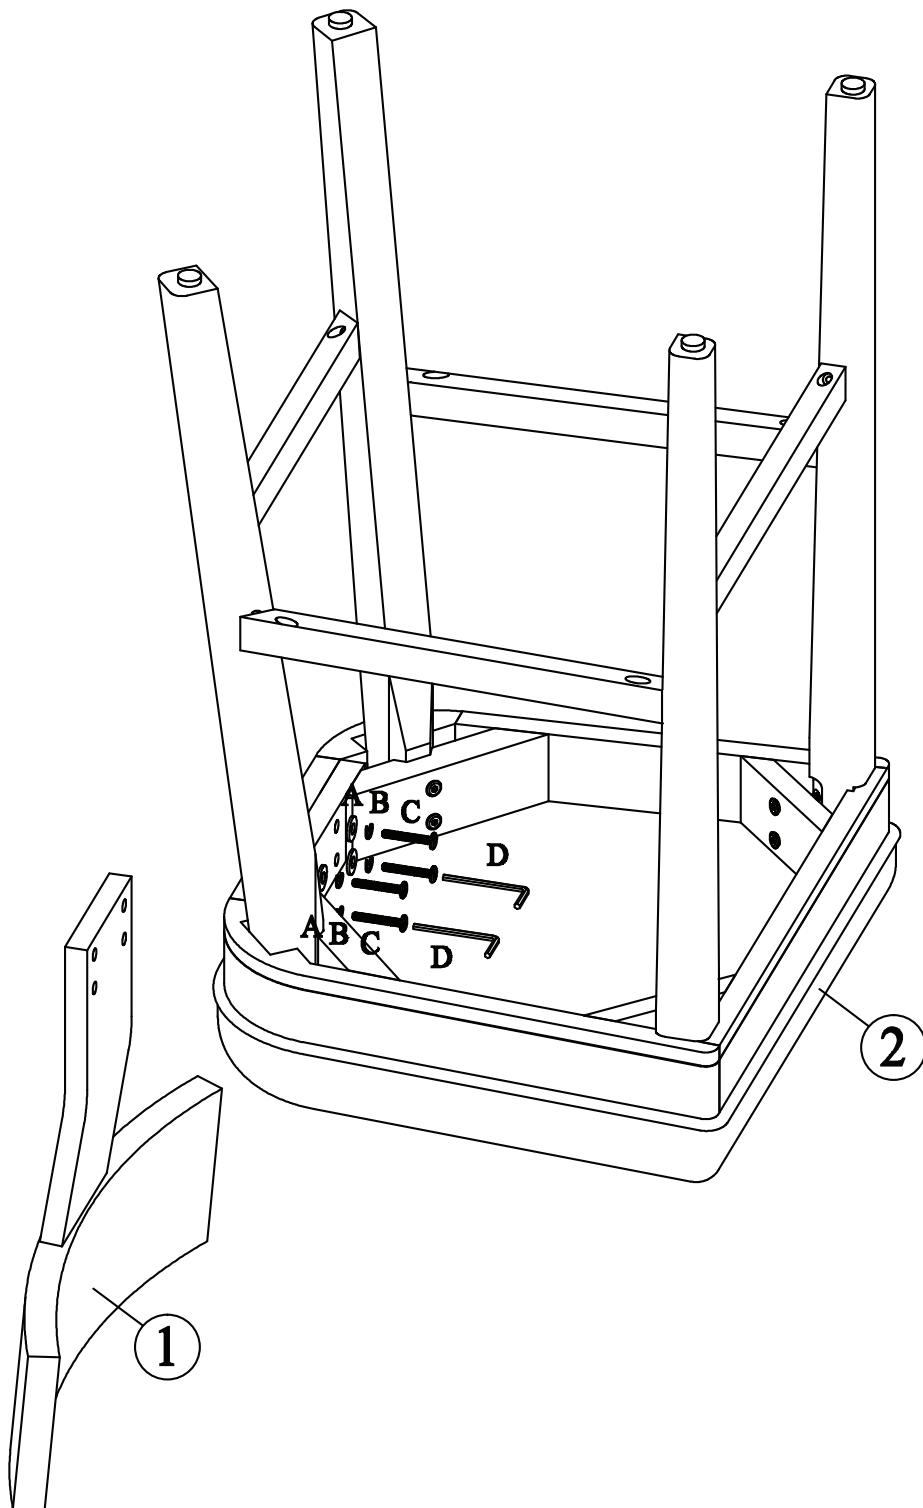


# PARTS
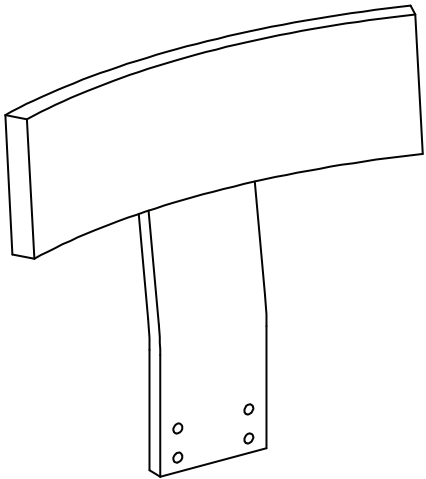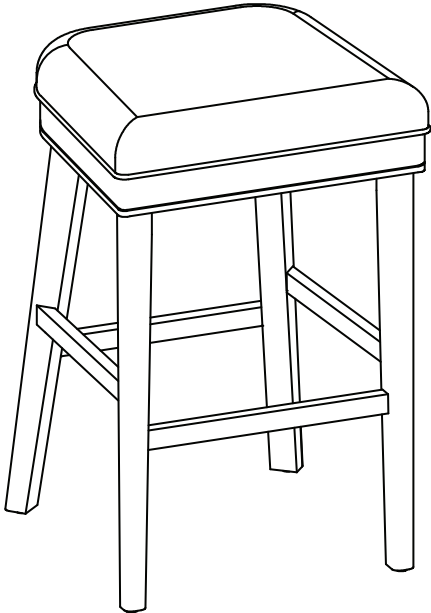
| ① (x1)                                                                                               | ② (x1)                                                                                                 |
|------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| <p>Chair Back:</p>  | <p>Seat Frame:</p>  |


# HARDWARE
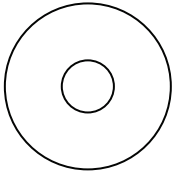
| Ⓐ (x4)                                                                              | Ⓑ (x4)                                                                              | Ⓒ (x4)                                                                              | Ⓓ (x1)                                                                                |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |  |  |
| Flat Washer                                                                         | Spring Washer                                                                       | Bolt M6x35                                                                          | Allen Wrench                                                                          |

# 01

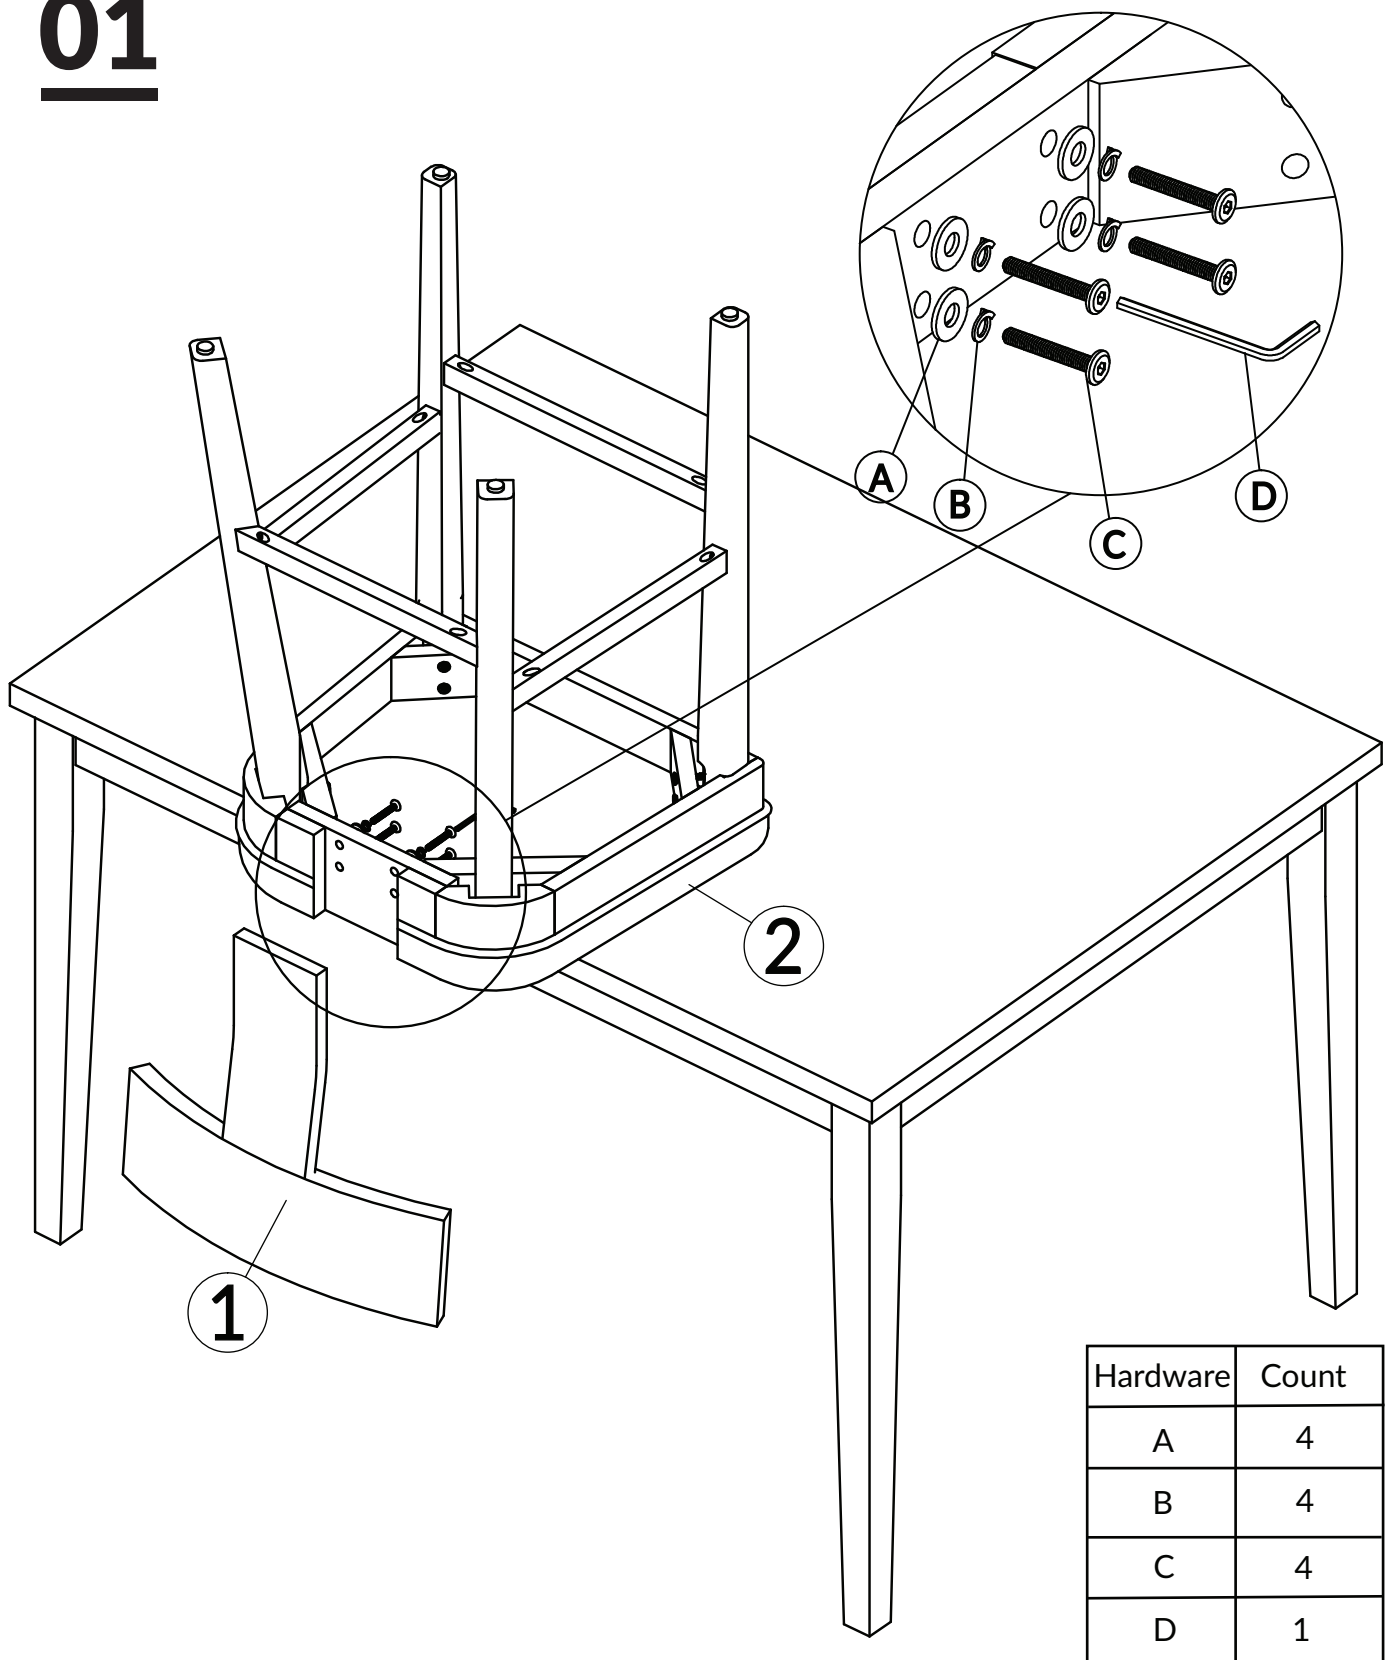

TIGHTEN BOLT COMPLETELY.

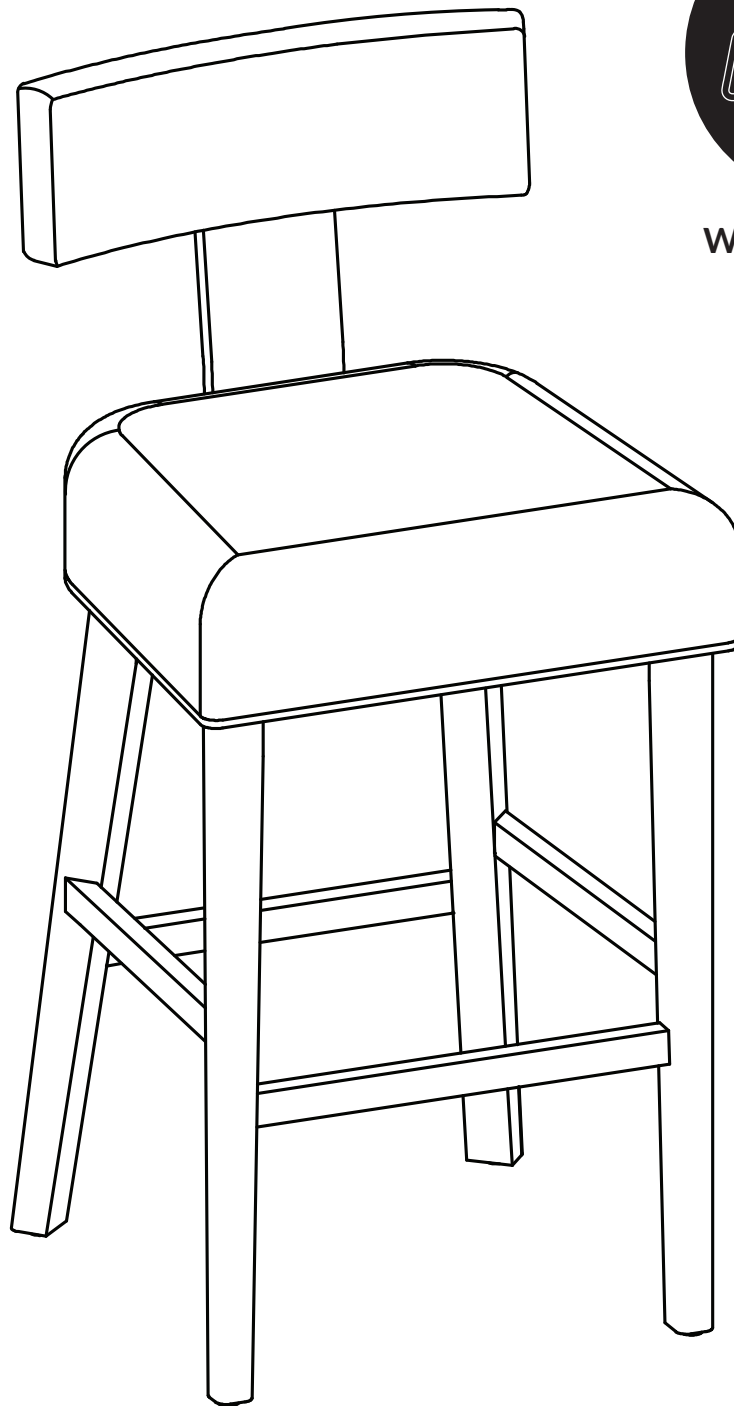

**Weight Capacity**

**BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.**