




Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU:91324,91329
BALEN SWIVEL STOOL

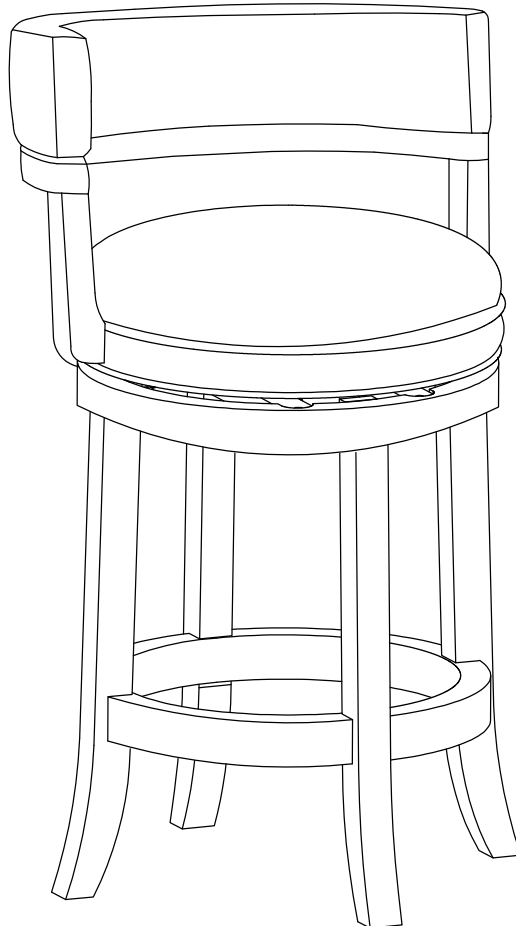

Weight Capacity



Locate the
HARDWARE PACK
which is attached to
the shipping carton
with red tape.

02/2024



Have questions about
assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com






www.boraamindustries.com

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.





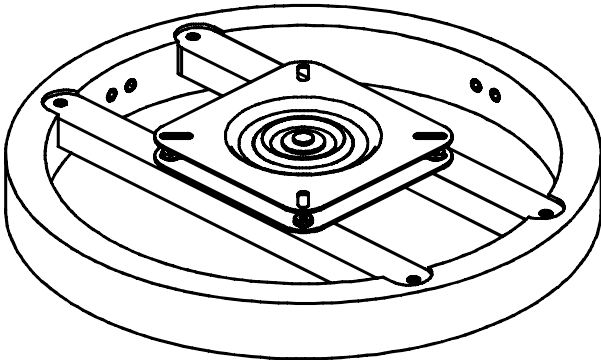
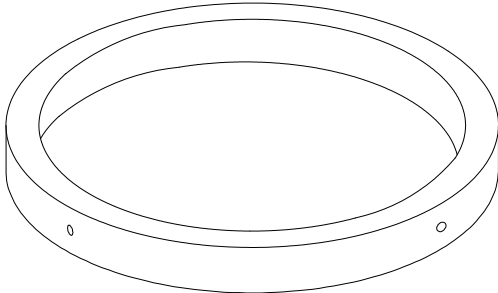
Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

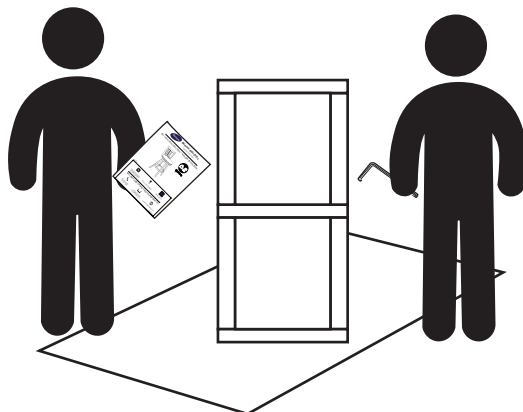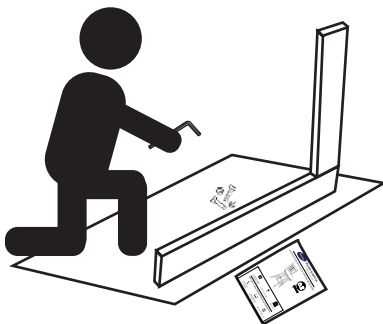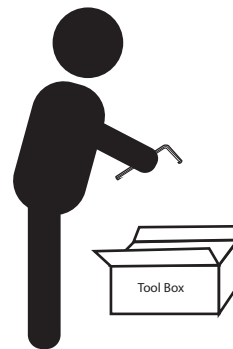







Assembly Overview

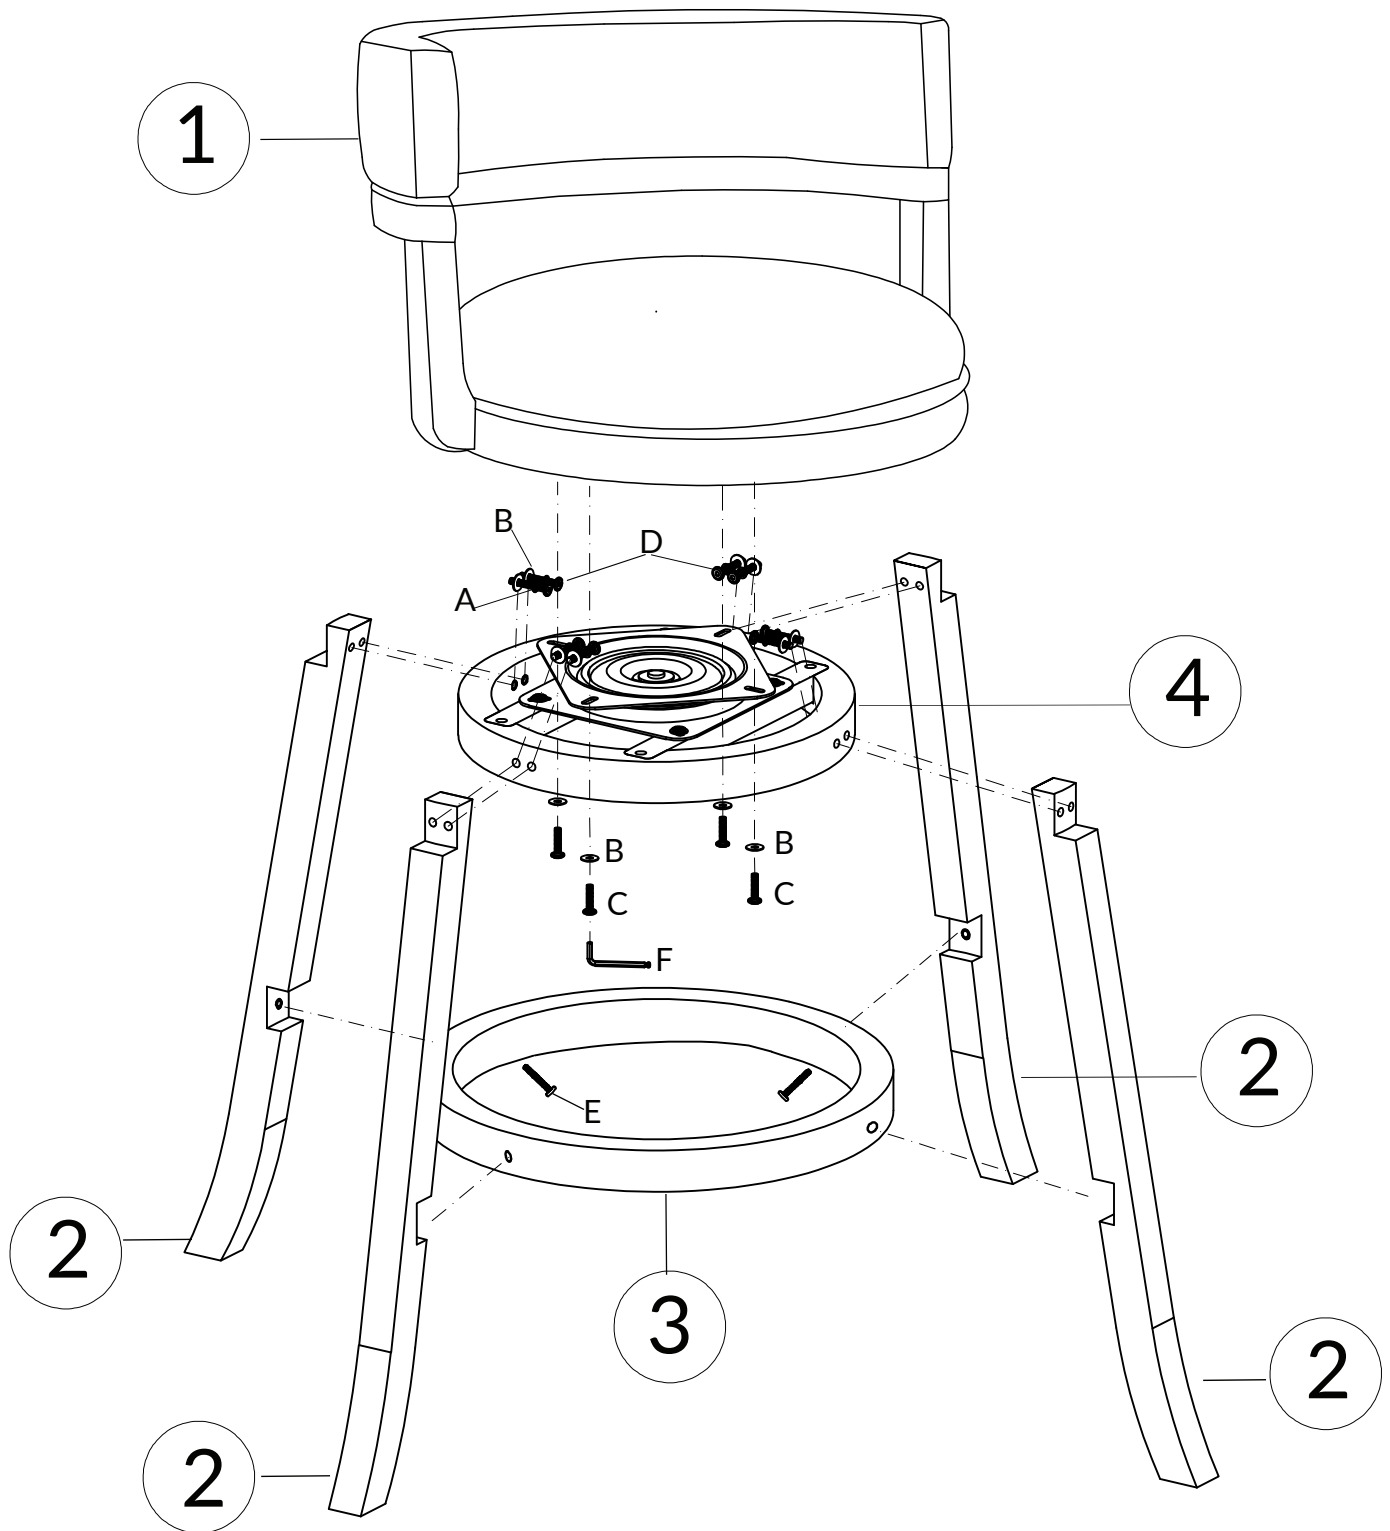

PARTS

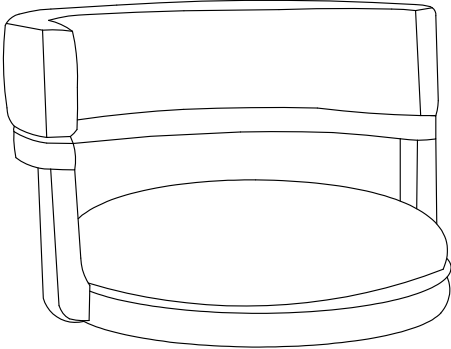
<p>①(x1)</p>	<p>②(x4)</p>
<p>Backrest :</p> 	<p>Legs :</p> 
<p>④(x1)</p>	<p>③(x1)</p>
<p>Apron With Swivel Plate :</p> 	<p>Footrest :</p> 

HARDWARE


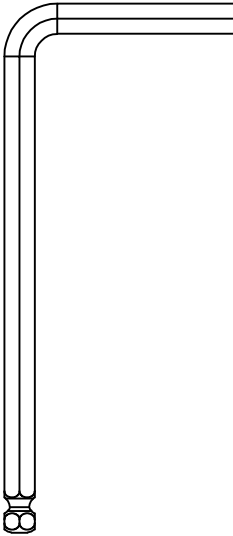
①A(x12)	①B(x12)	①C(x4)	①D(x8)	①E(x4)	①F(x1)
					
<p>Spring Washer M6*10</p>	<p>Flat Washer M6*16</p>	<p>Bolt M6*25</p>	<p>Bolt M6*35</p>	<p>Bolt M6*40</p>	<p>Allen Wrench M4*110</p>

847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com

01

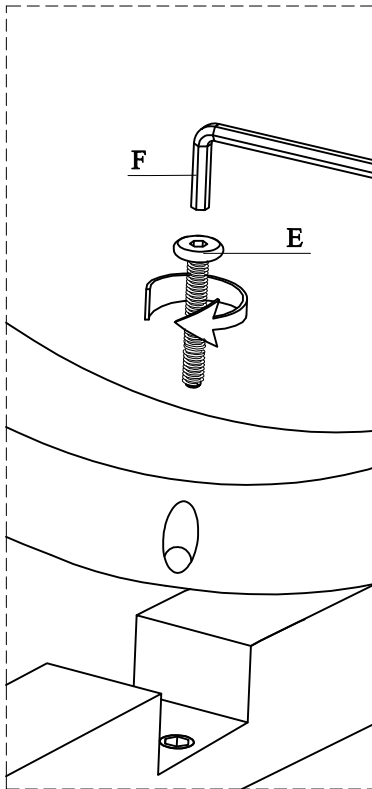

4X

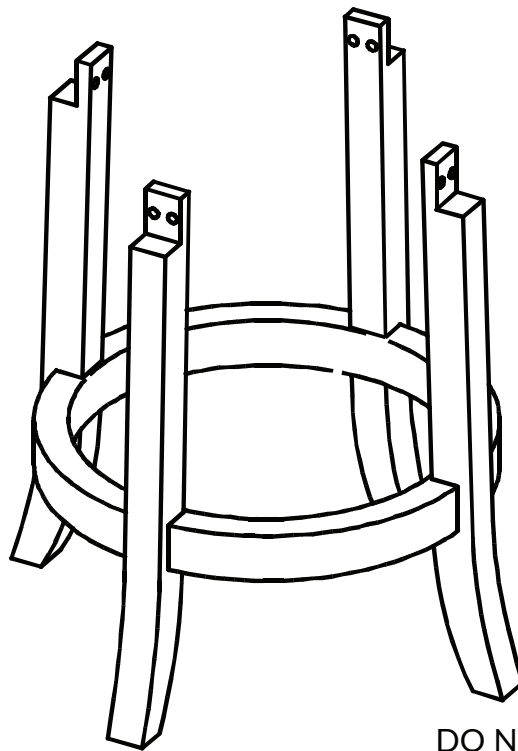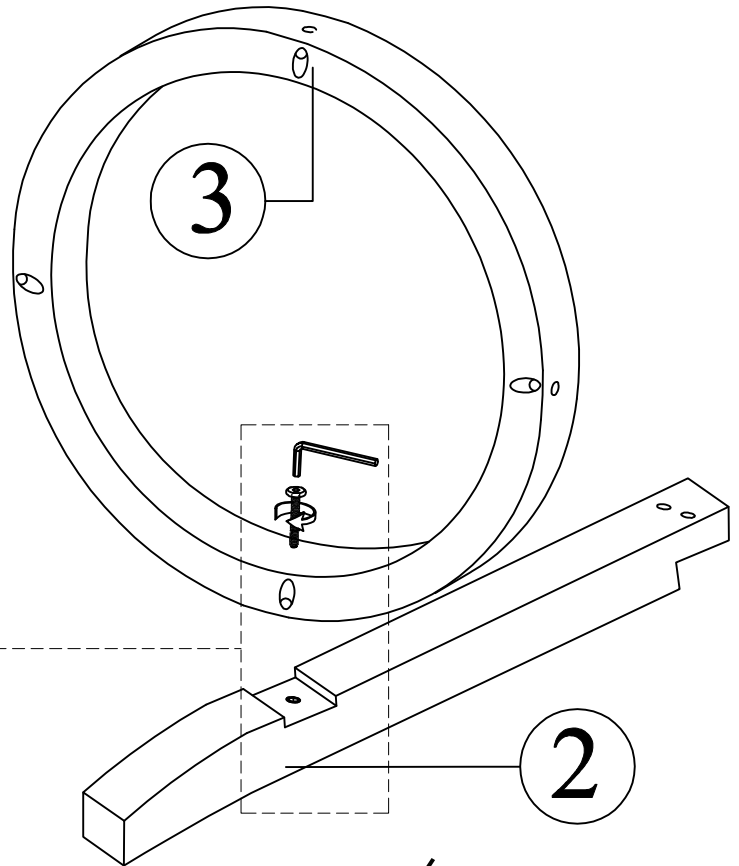


Hardware	Count
E	4
F	1

DO NOT TIGHTEN BOLT COMPLETELY.


Please make sure that the protective metal kick plate from Footrest (Part #3) is facing upwards.
Remove the white Tape from the protective metal kick plate before using.

02

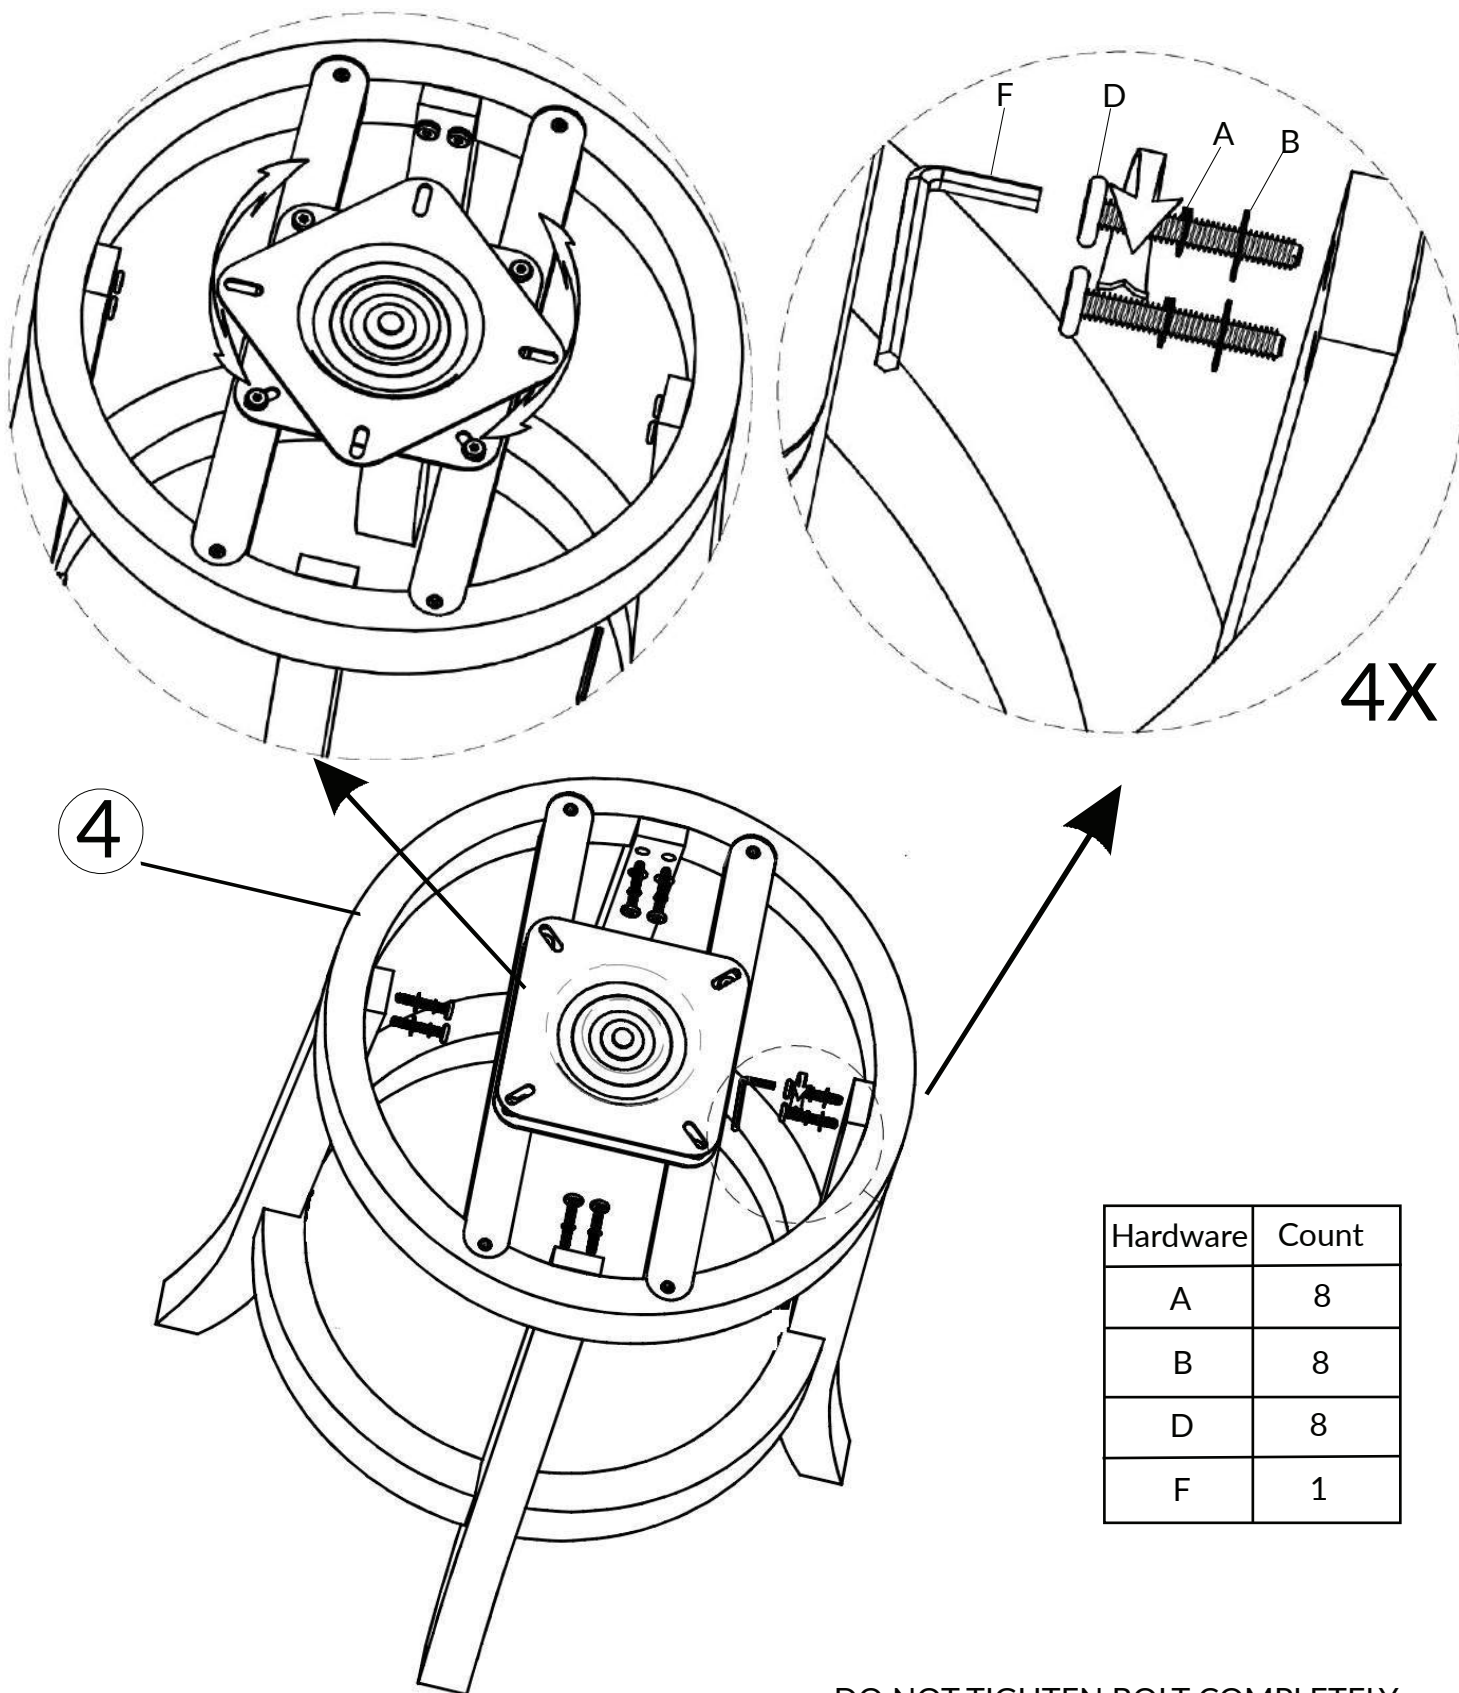

DO NOT TIGHTEN BOLT COMPLETELY.

03


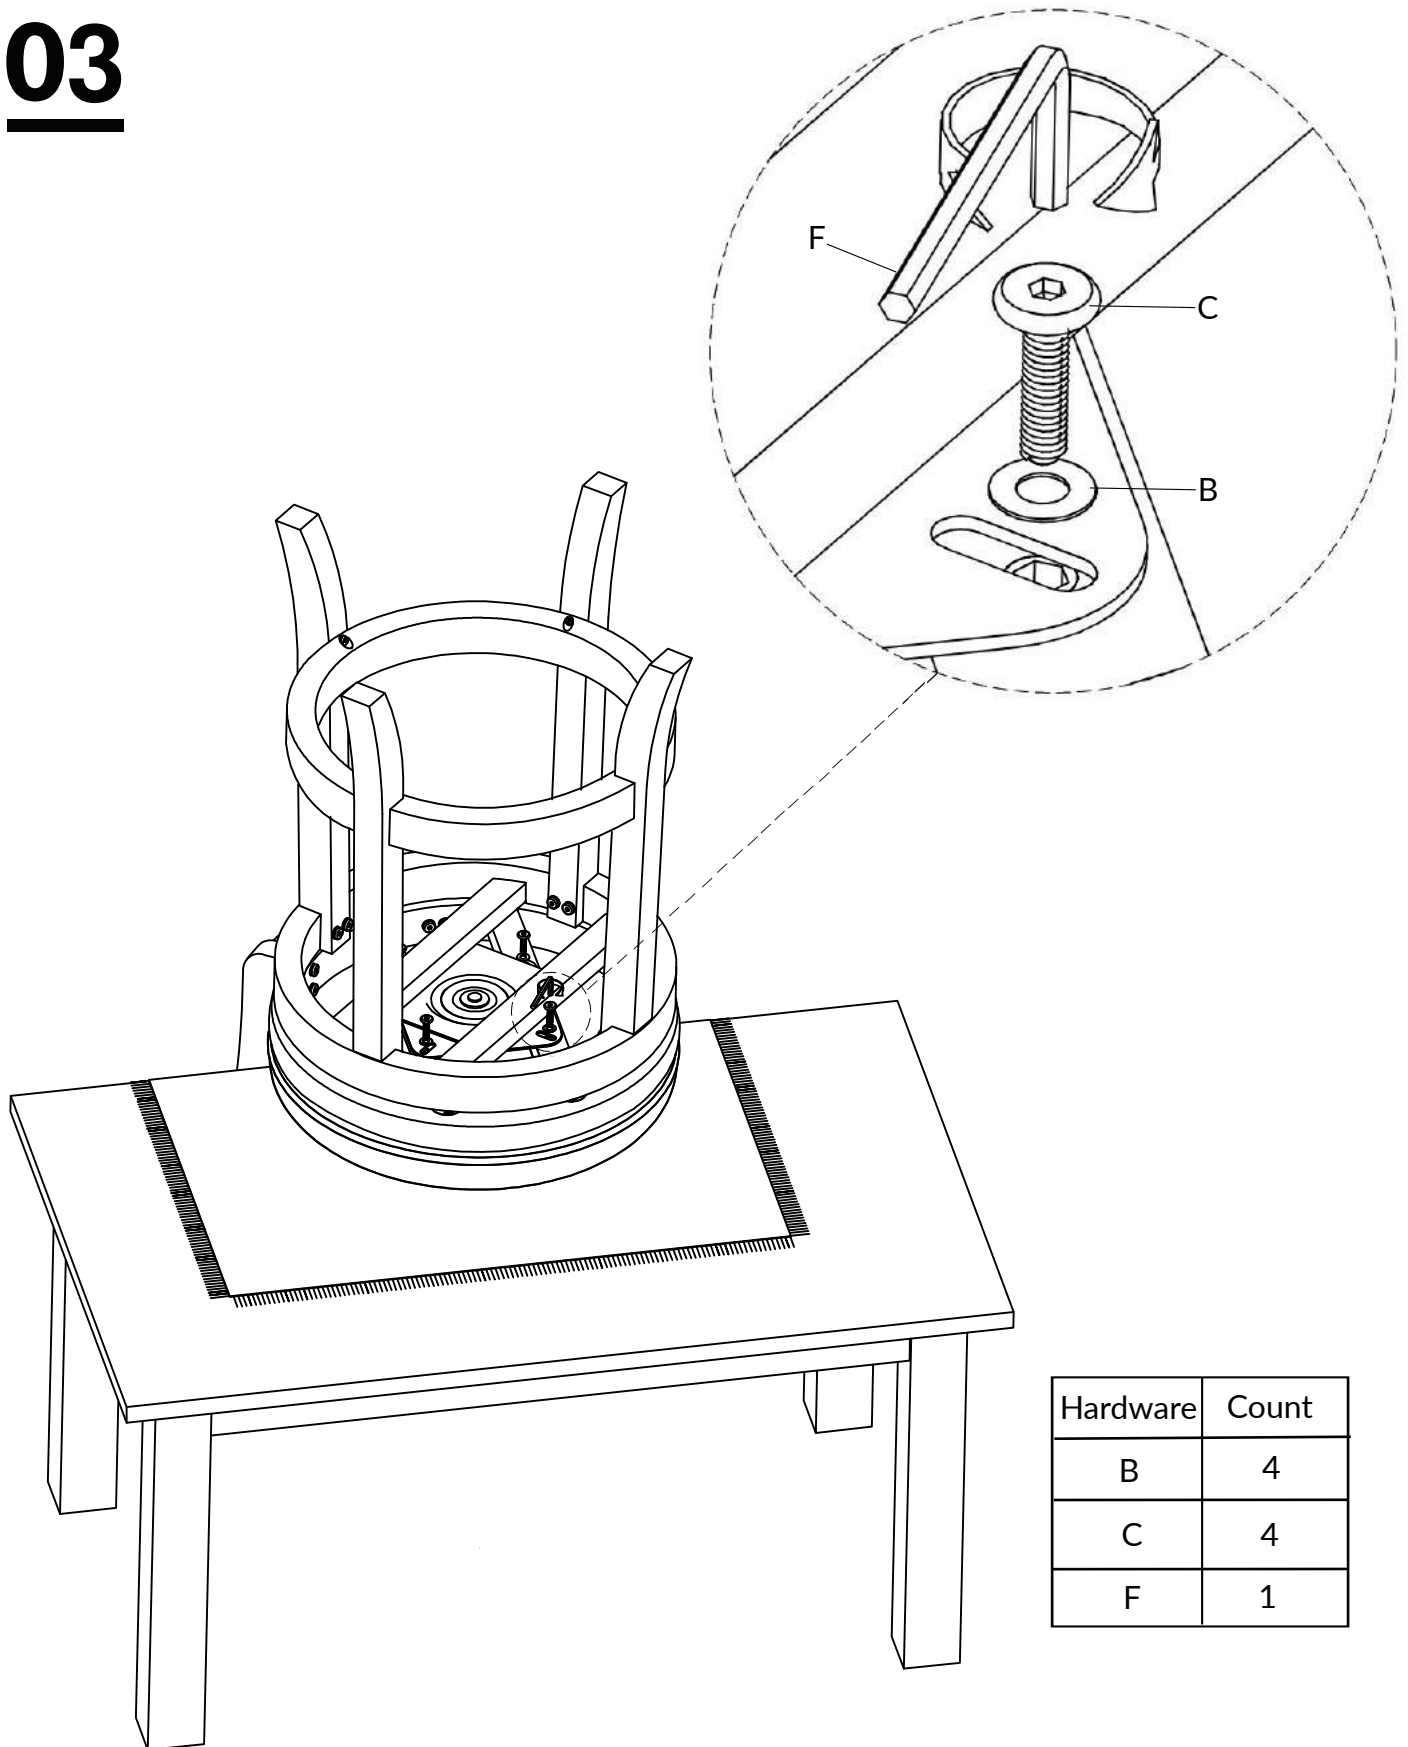


Hardware	Count
B	4
C	4
F	1

TIGHTEN BOLT COMPLETELY.



Weight Capacity

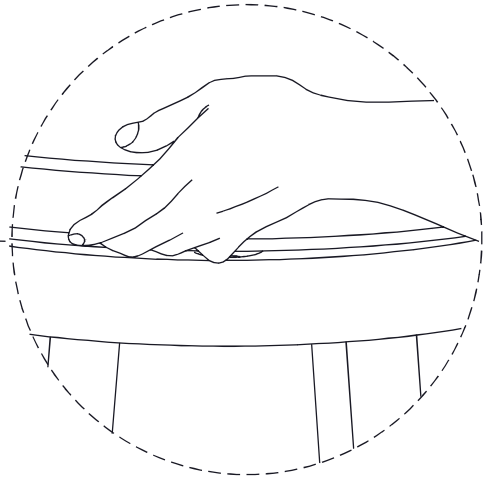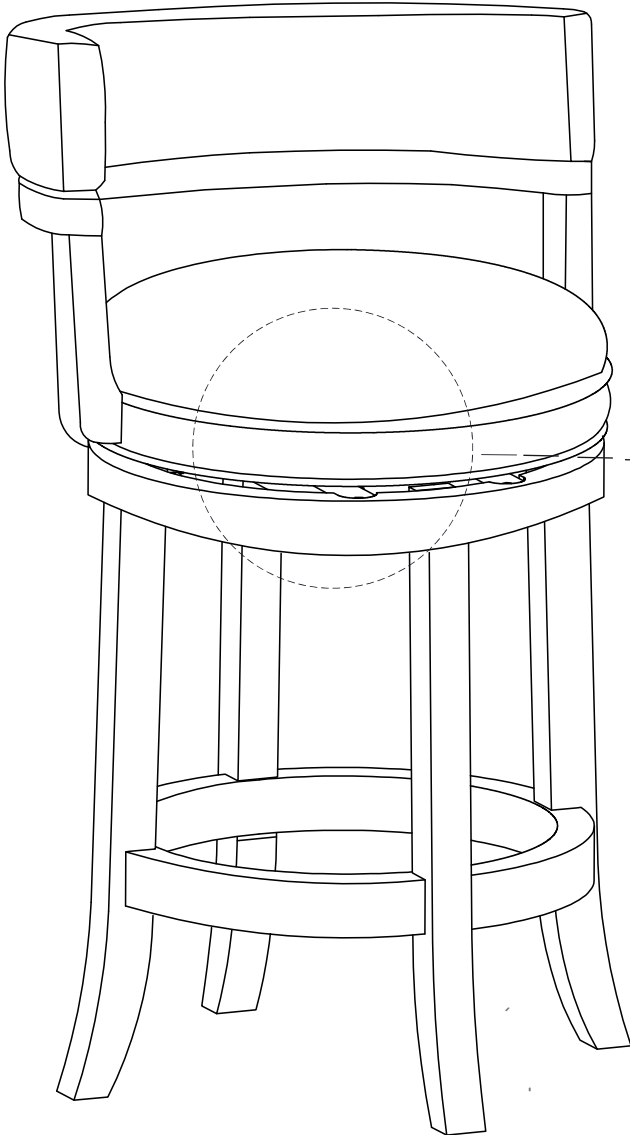

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.