


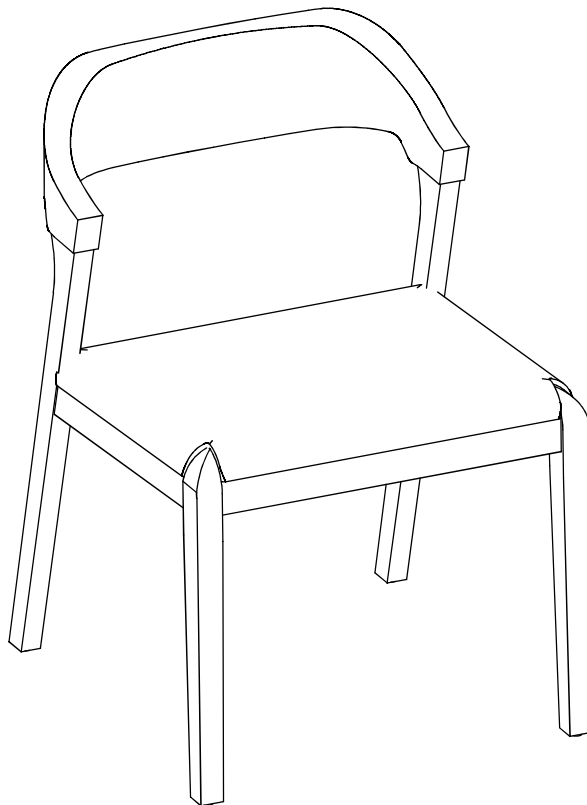

# Boraam Industries

ASSEMBLY INSTRUCTIONS

**SKU: 77316,77319 | RASMUS DINING CHAIR**



**Weight Capacity**



Locate the  
**HARDWARE PACK**  
which is attached to the  
shipping carton with red tape.

01/2024



Have questions about  
assembling your item?



Items or parts damaged?



Missing a part?

**We're here to help! (Monday-Friday from 9am-5pm CST)**



847-949-6300  
877-267-2261



customerservice@  
boraamindustries.com






www.boraamindustries.com

# Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.







Locate the  
**HARDWARE PACK**  
which is attached to the  
shipping carton with red  
tape.

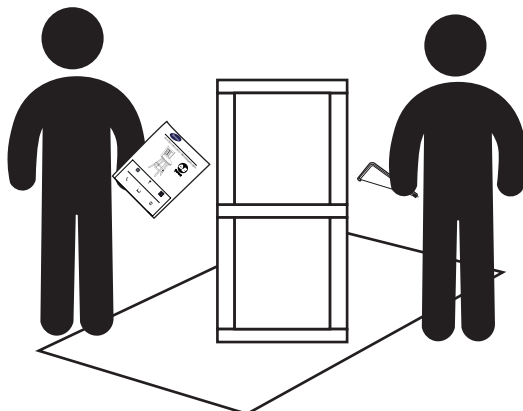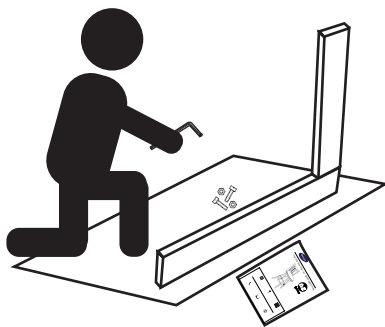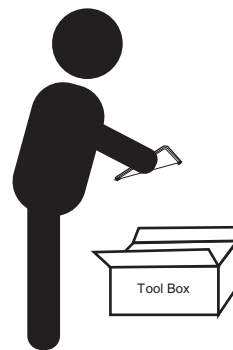



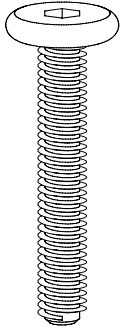



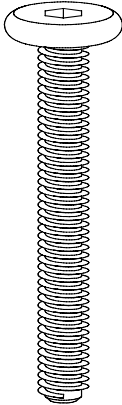


# Assembly Overview

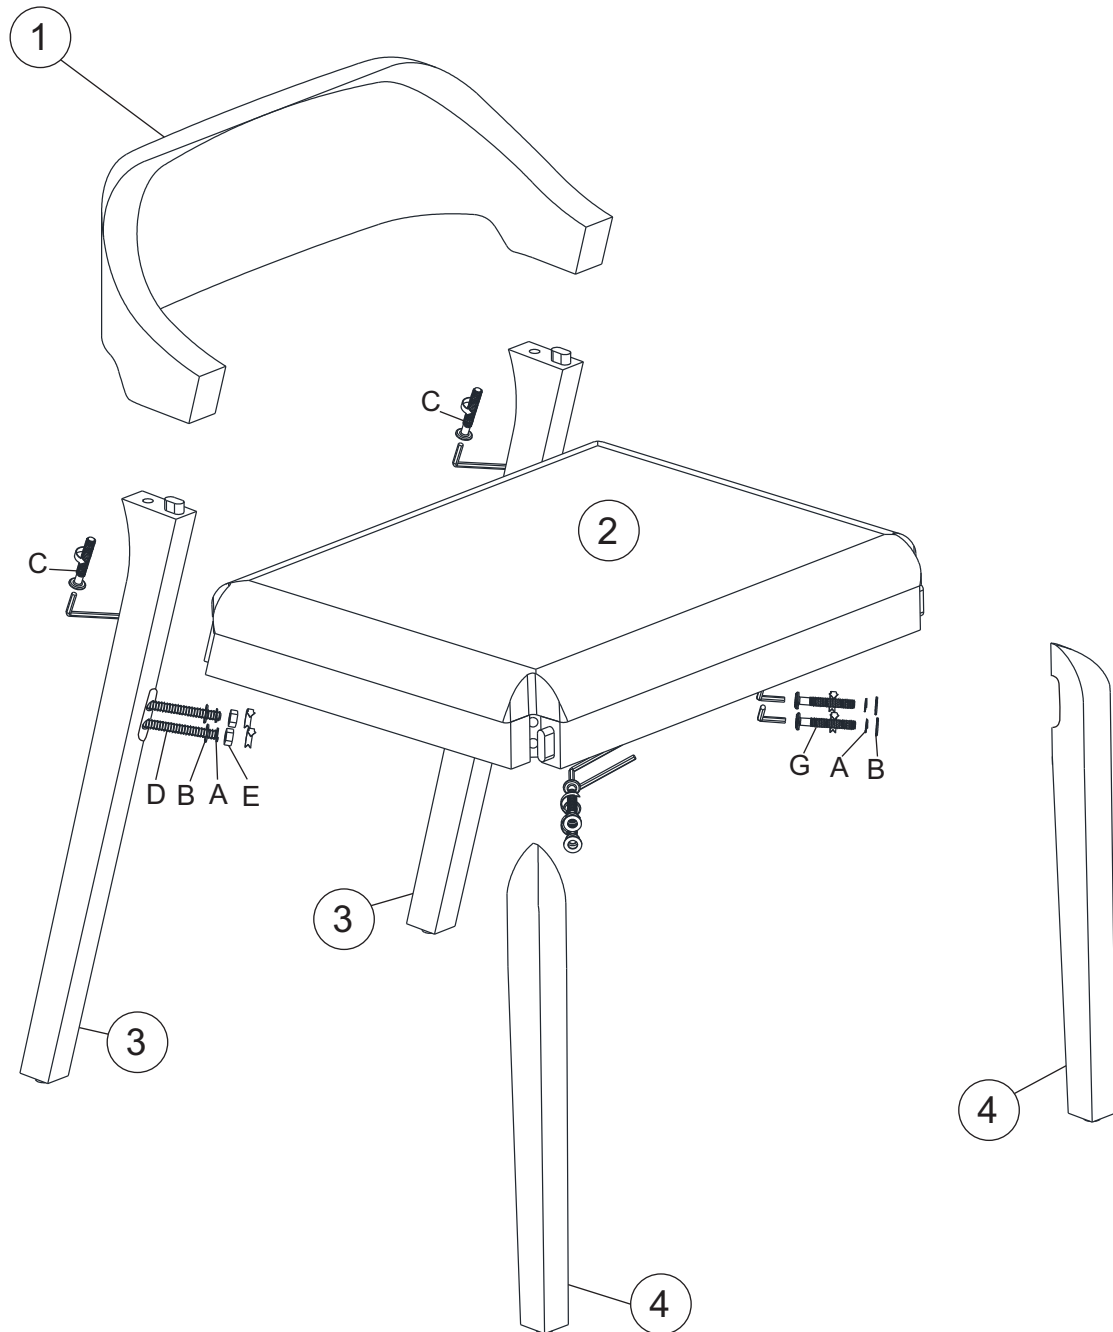


# PARTS

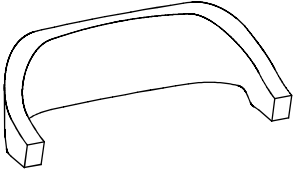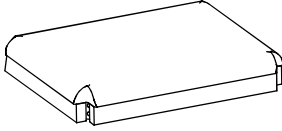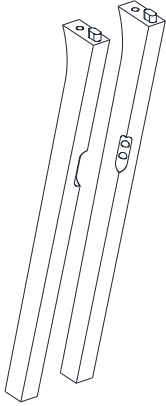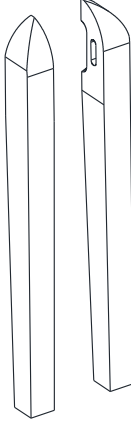① (x1)	② (x1)
<b>Backrest:</b> 	<b>Seat cushion:</b> 
③ (x2)	④ (x2)
<b>Back leg:</b> 	<b>Front leg:</b> 

# HARDWARE

Ⓐ (x8)	Ⓑ (x8)	Ⓒ (x2)	Ⓓ (x4)	Ⓔ (x4)	Ⓕ (x4)	Ⓖ (x4)	Ⓗ (x1)	Ⓘ (x1)
								
Spring Washer M8x10	Flat Washer M8x16	Bolt M8x50	Threaded rod M8x90	Hex nut M8	Protective cap M8	Bolt M8x70	Allen Wrench	Wrench K13


**01**

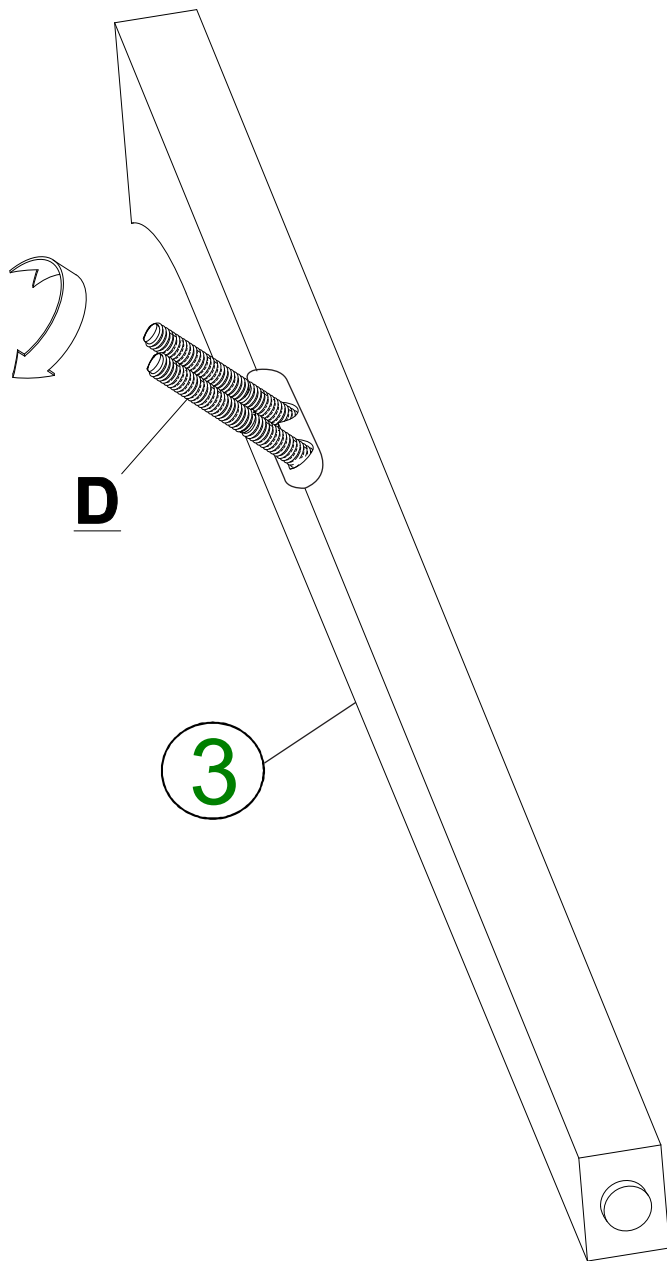

Hardware	Count
D	4

TIGHTEN THREADED ROD COMPLETELY.


# 02

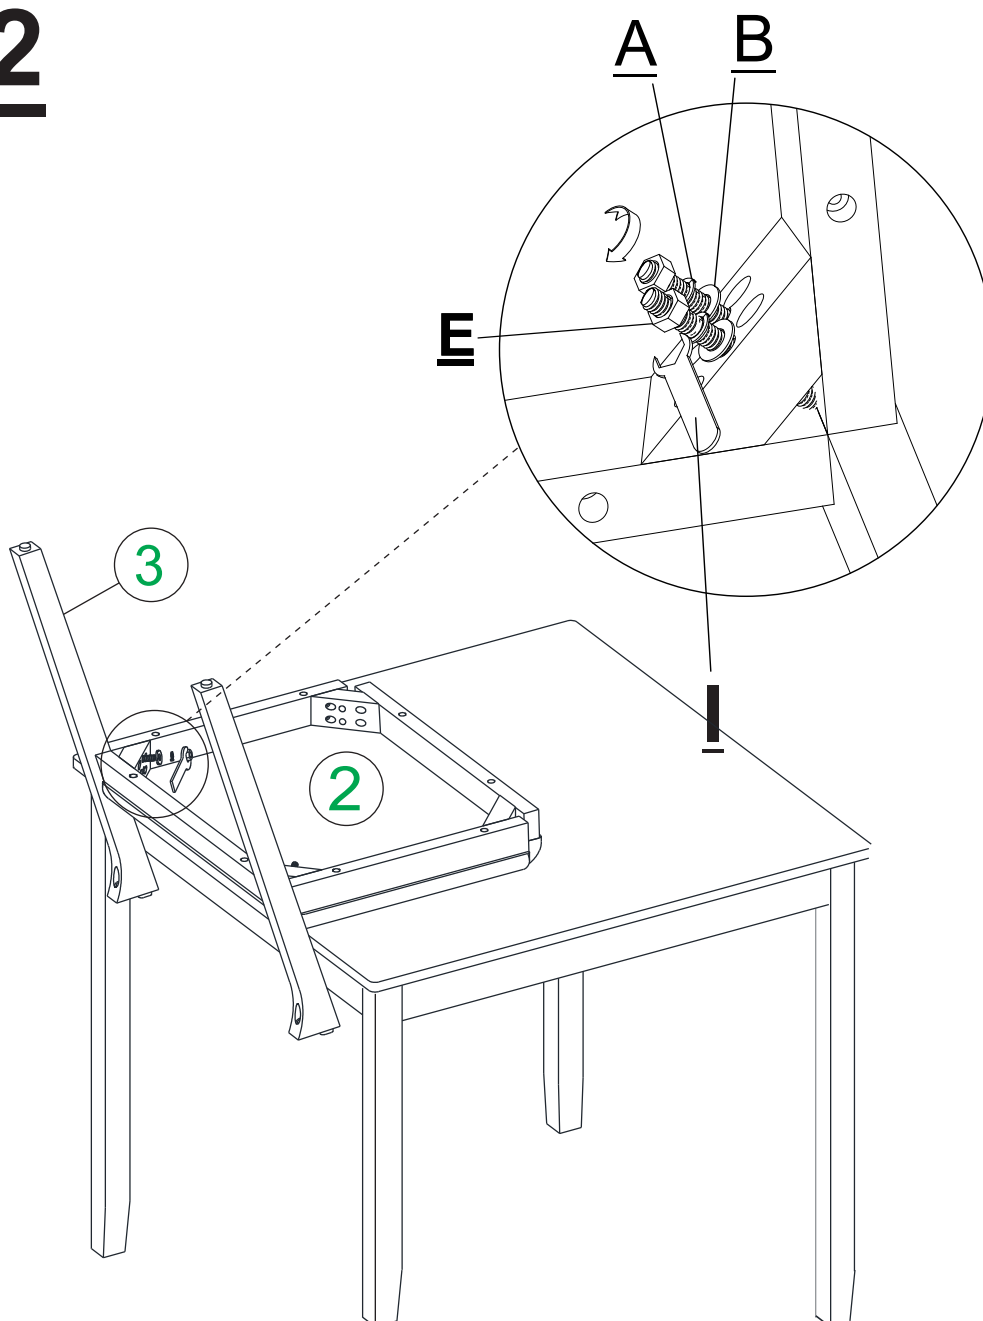

Hardware	Count
A	4
B	4
E	4
I	1


TIGHTEN HEX NUT COMPLETELY.

# 03

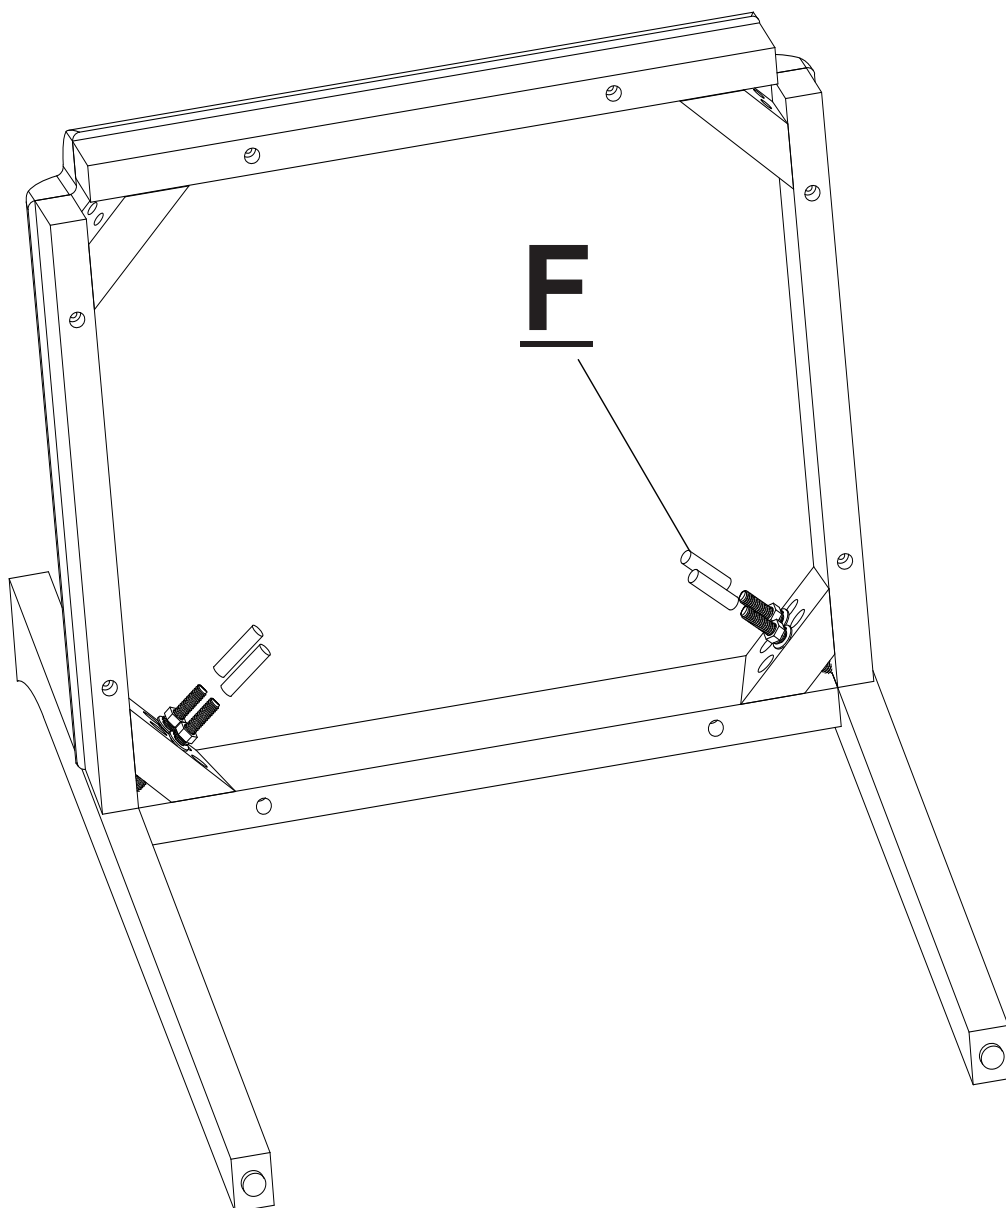

Hardware	Count
F	4


# 04

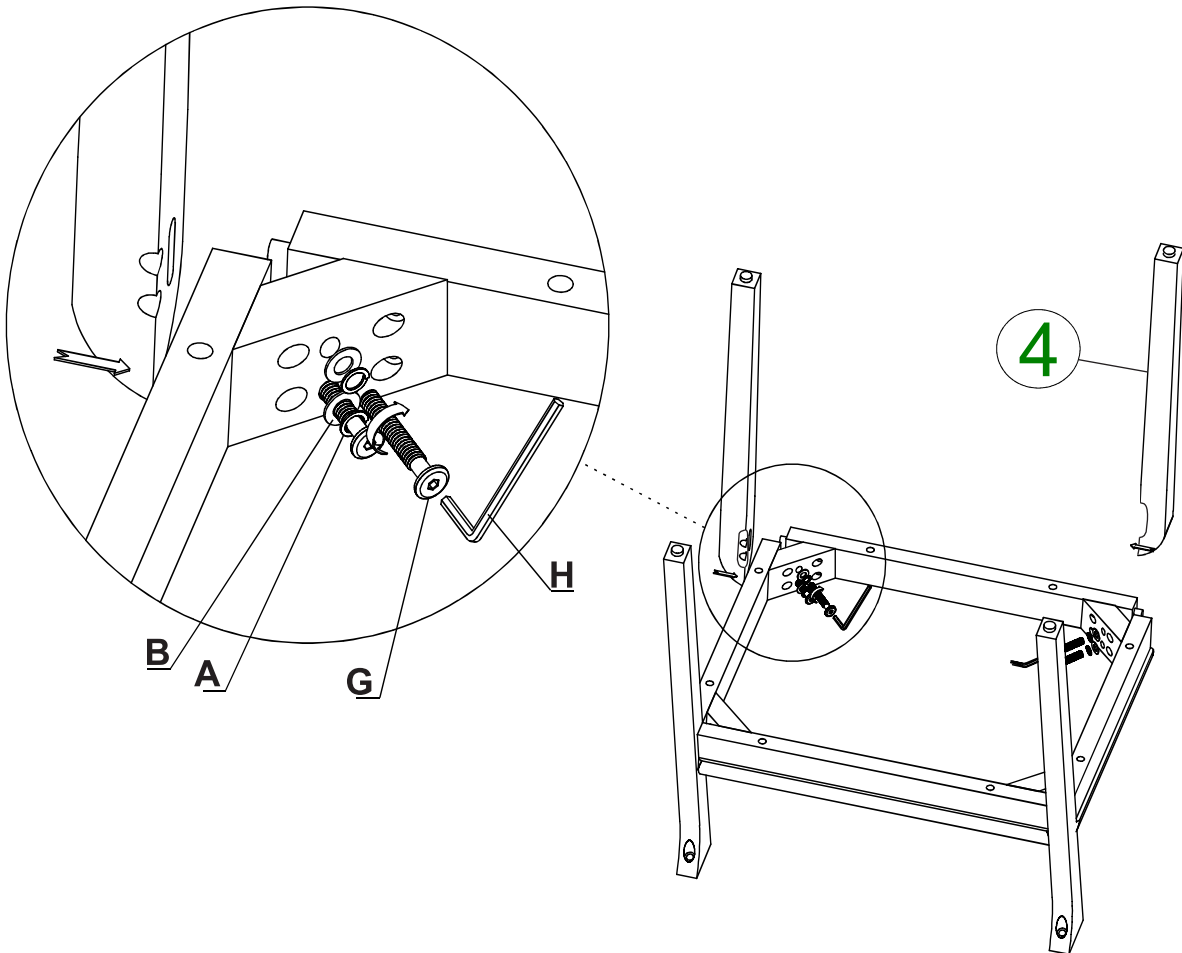

Hardware	Count
A	4
B	4
G	4
H	1


DO NOT TIGHTEN BOLT COMPLETELY.

**05**

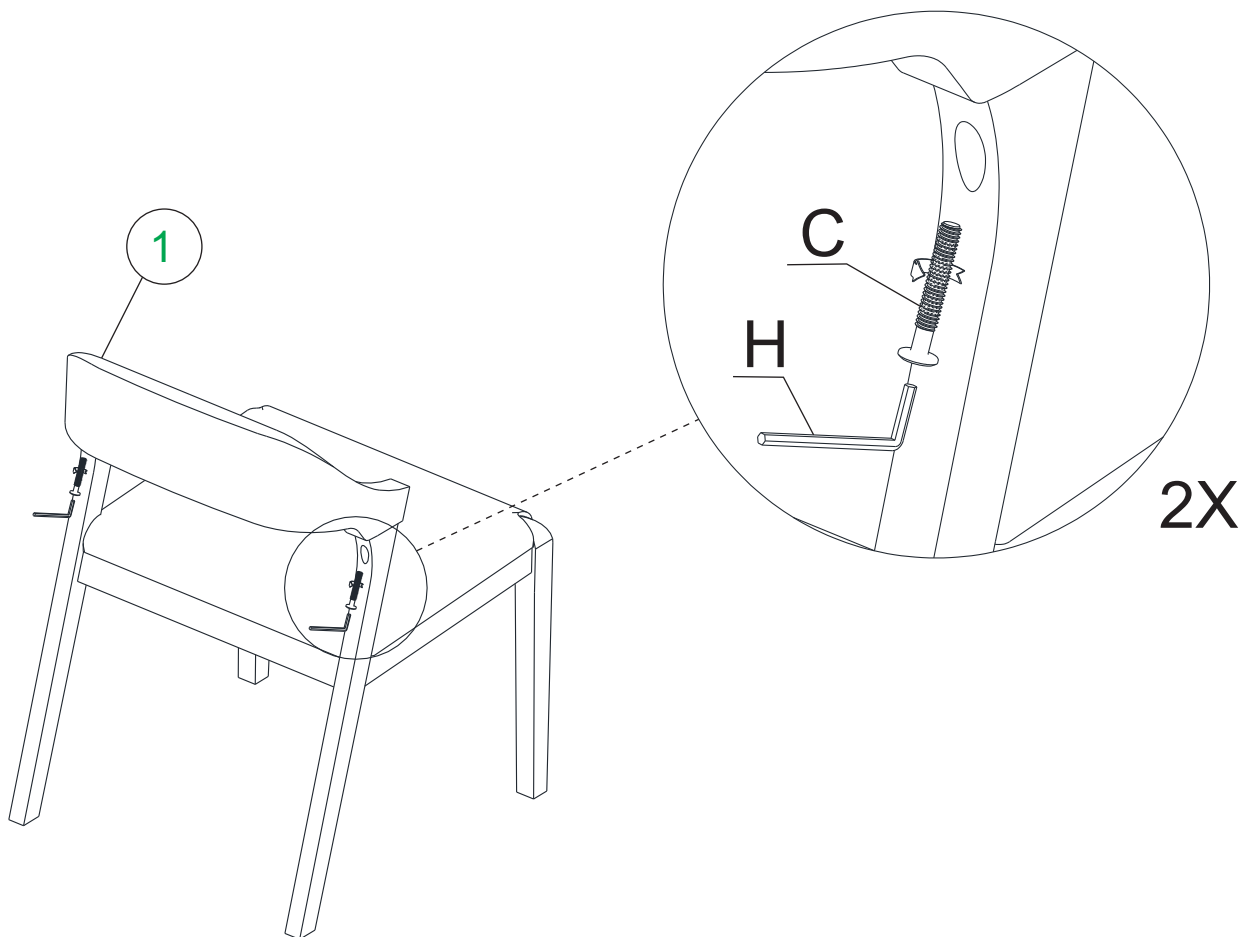

Hardware	Count
C	2
H	1

TIGHTEN BOLT COMPLETELY.

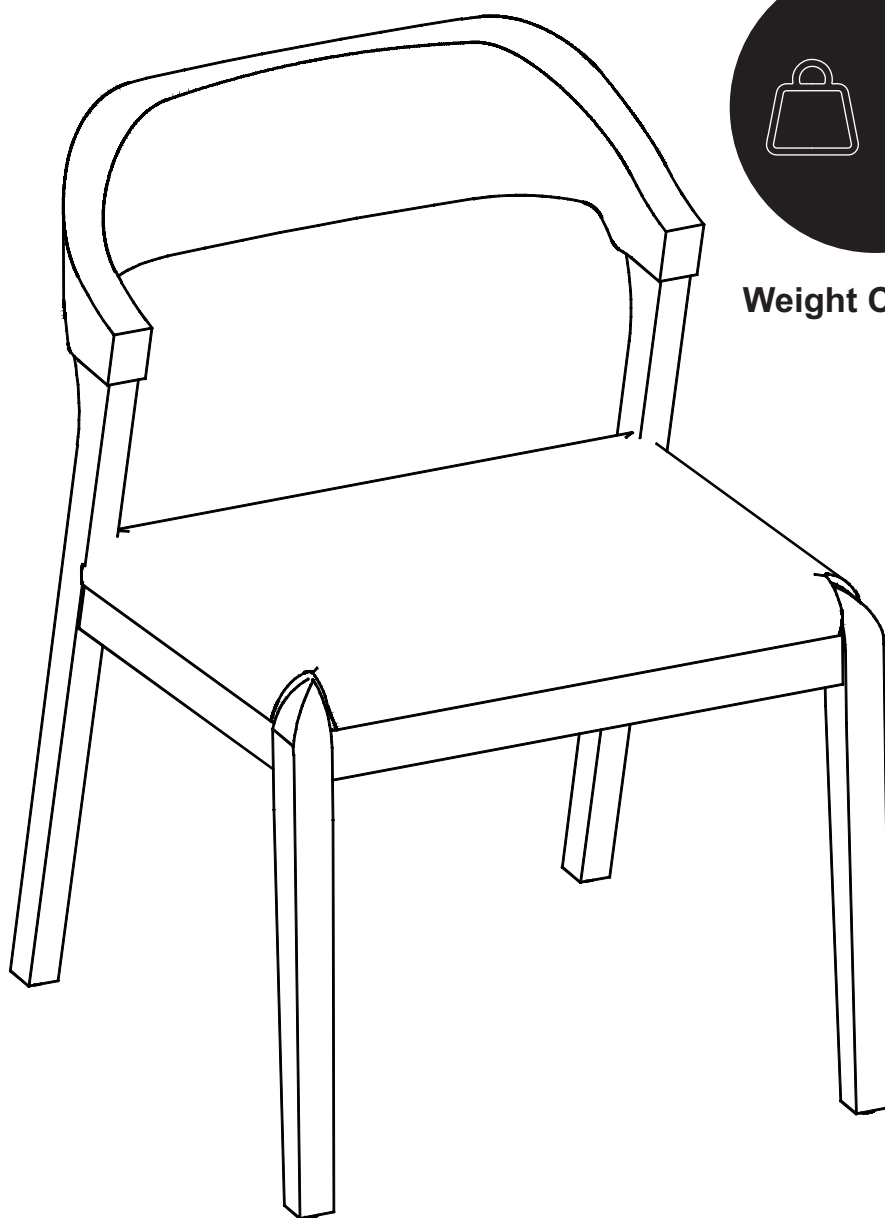

**Weight Capacity**

**BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.**