


Boraam

Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 60024, 60324, 60724, 60029, 60329, 60729

SOLVANG STOOL

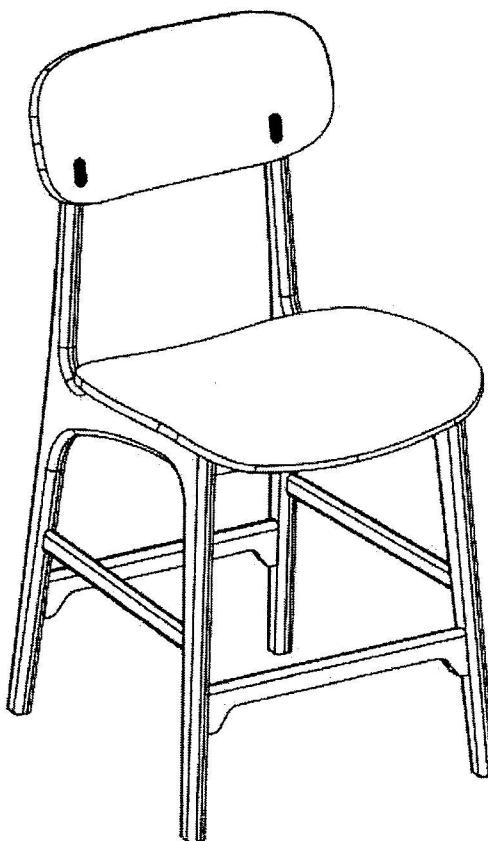

Weight Capacity



Locate the
HARDWARE PACK
which is attached to
the shipping carton
with red tape.


10/2024



Have questions about
assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com



www.boraamindustries.com





Page 1 of 12

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.



Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

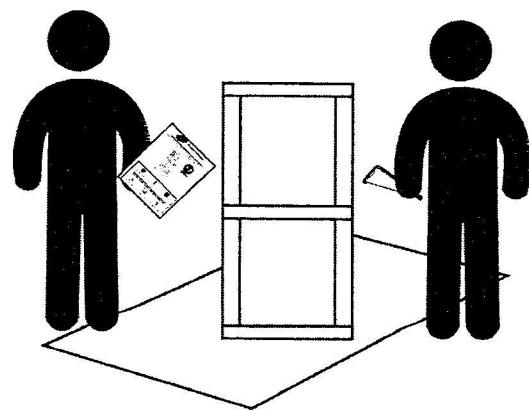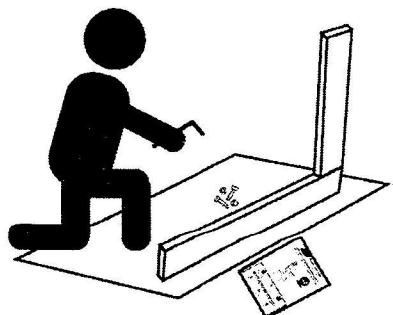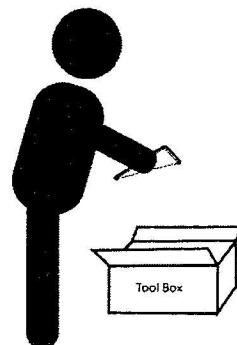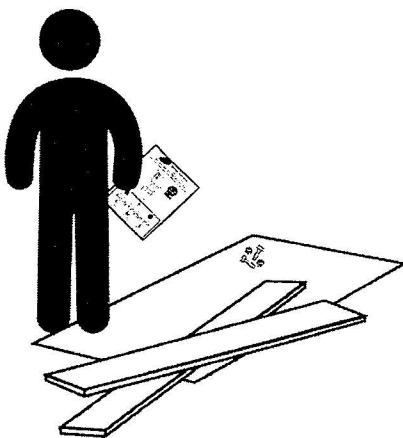


Assembly Overview

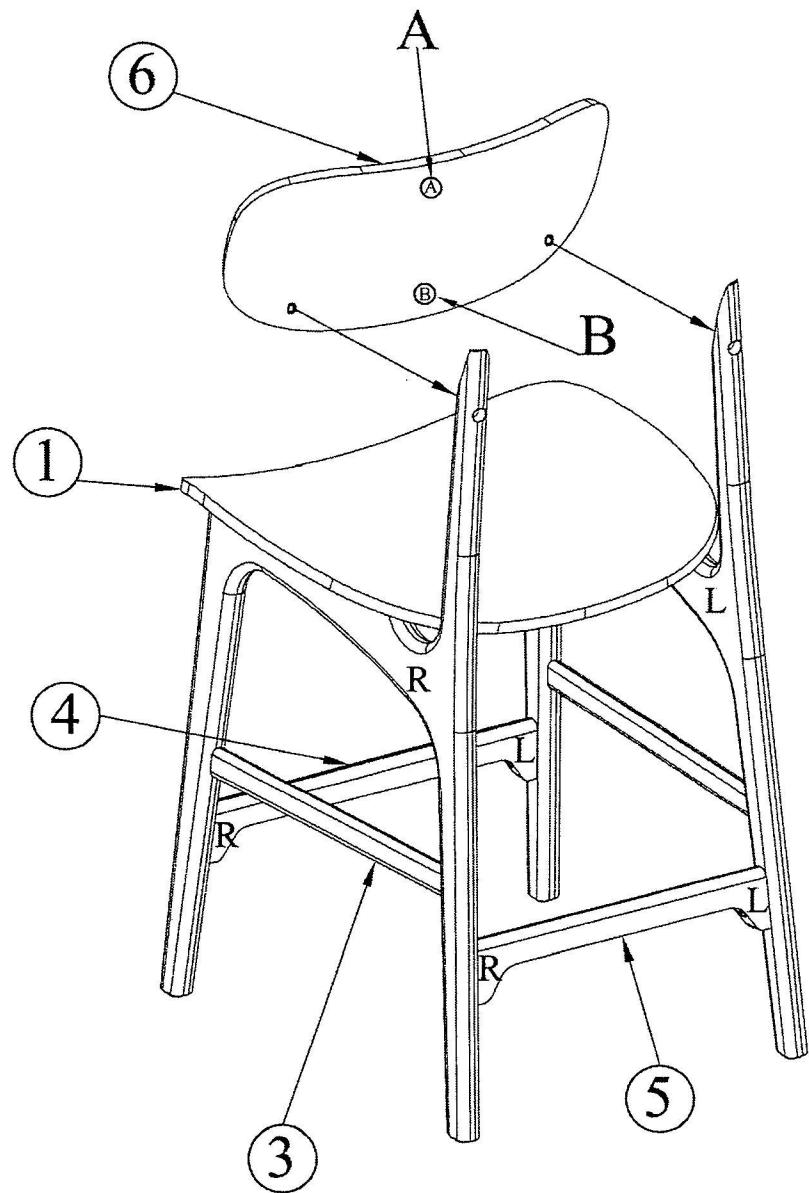


PARTS


① (x1)

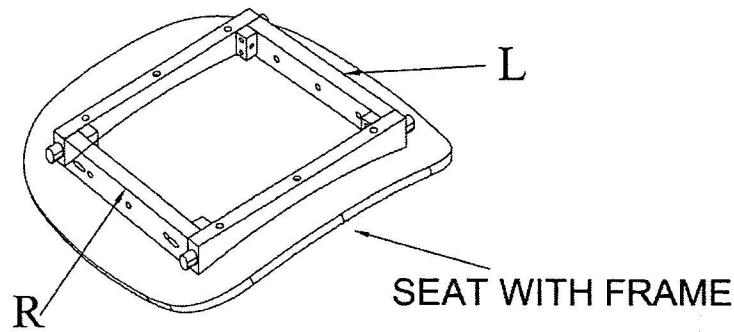

② (x1)

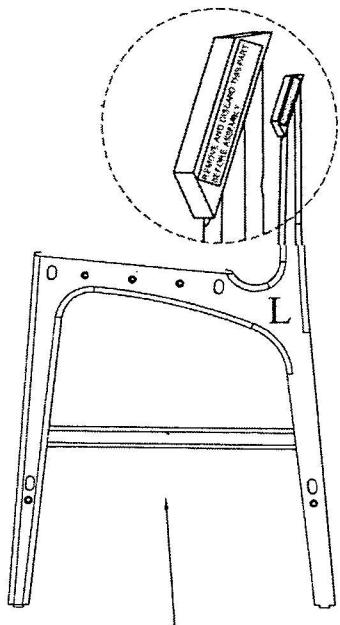


③ (x1)

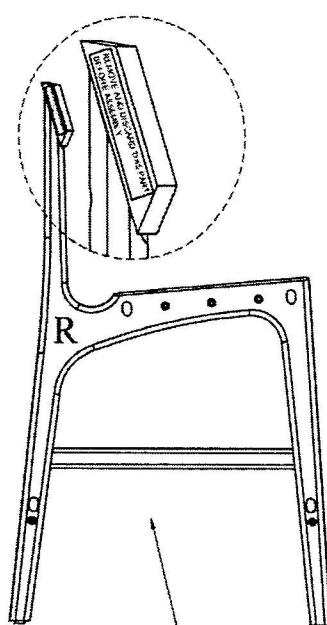


④ (x1)







⑤ (x1)




⑥ (x1)

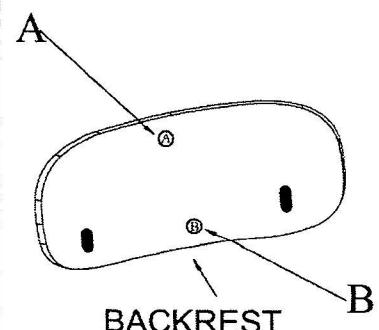


HARDWARE

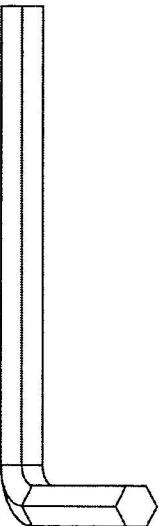(A)(x6)	(B)(x6)	(C)(x2)	(D)(x10)	(E)(x2)	(F)(x1)
					
SPRING WASHER M8*12	FLAT WASHER M8*16	BOLT M6*25	BOLT M8*45	WOOD BUTTON	ALLEN WRENCH

01

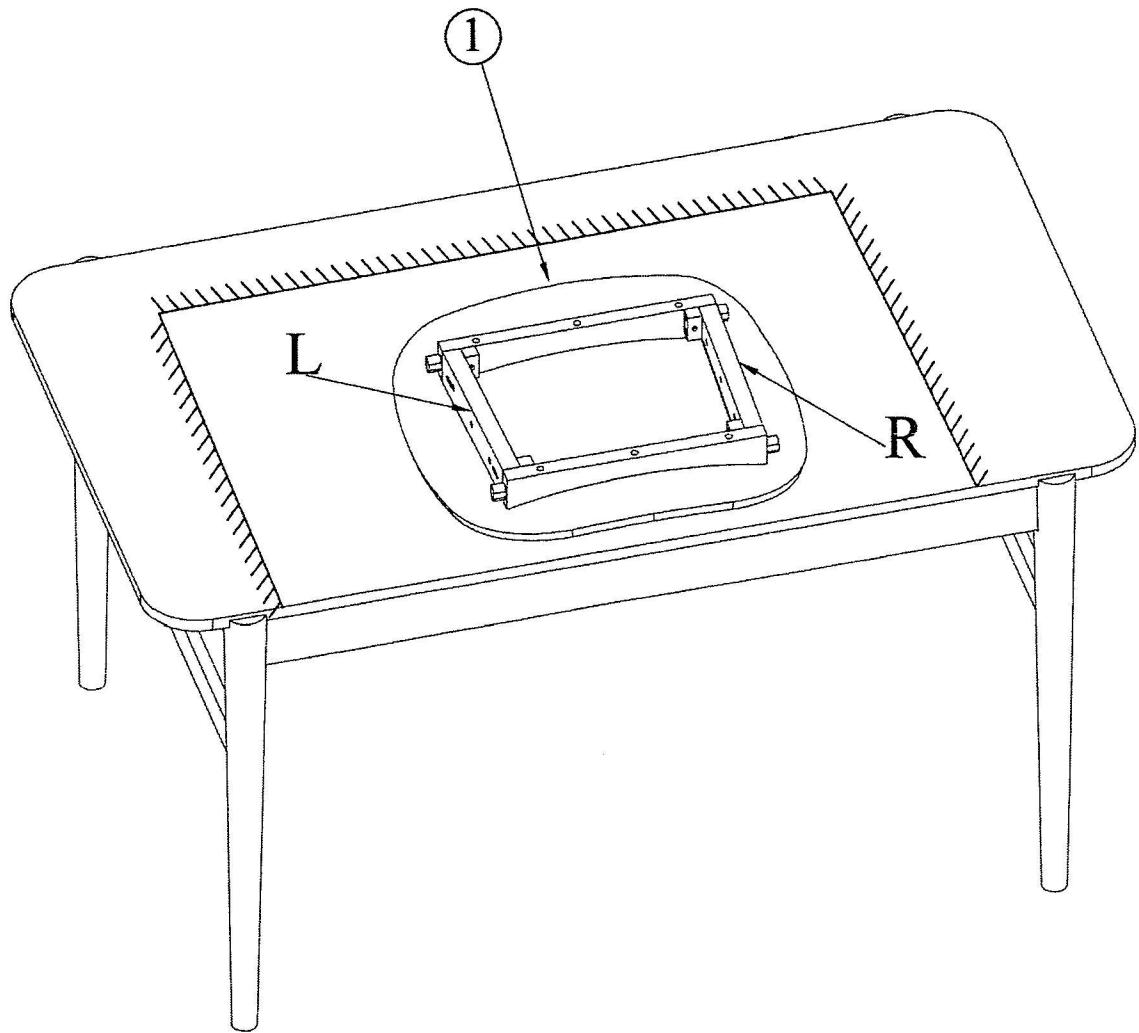

02

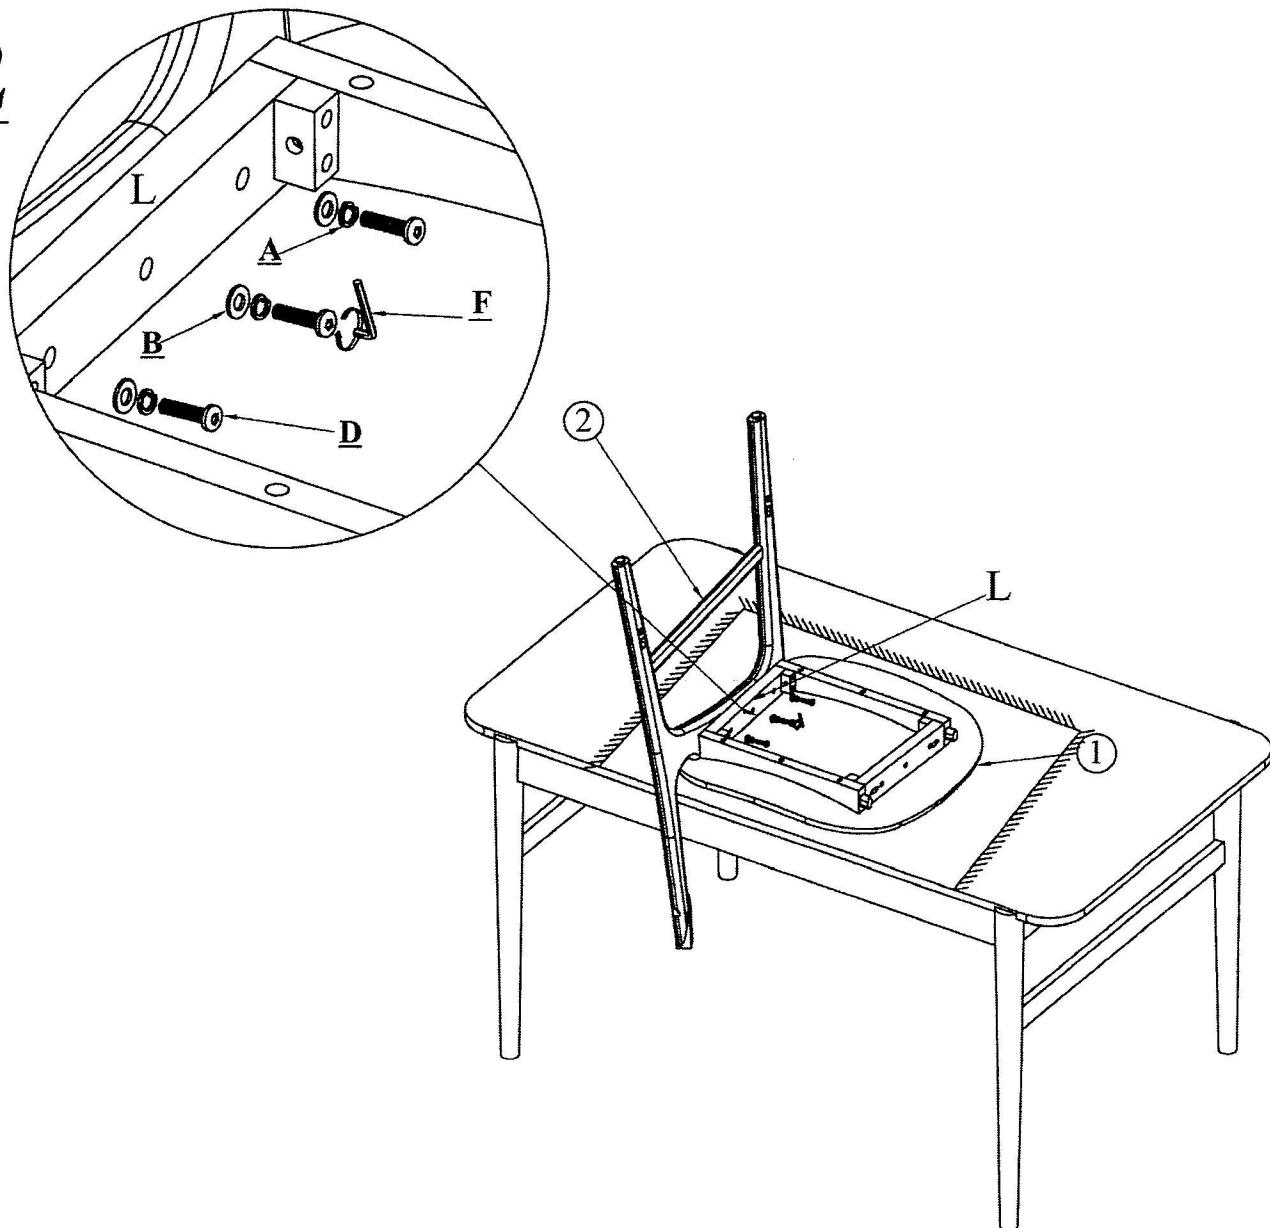


Hardware	Count
A	3
B	3
D	3
F	1



**LEAVE BOLTS LOOSE.
DO NOT TIGHTEN COMPLETELY AT THIS TIME.**



03

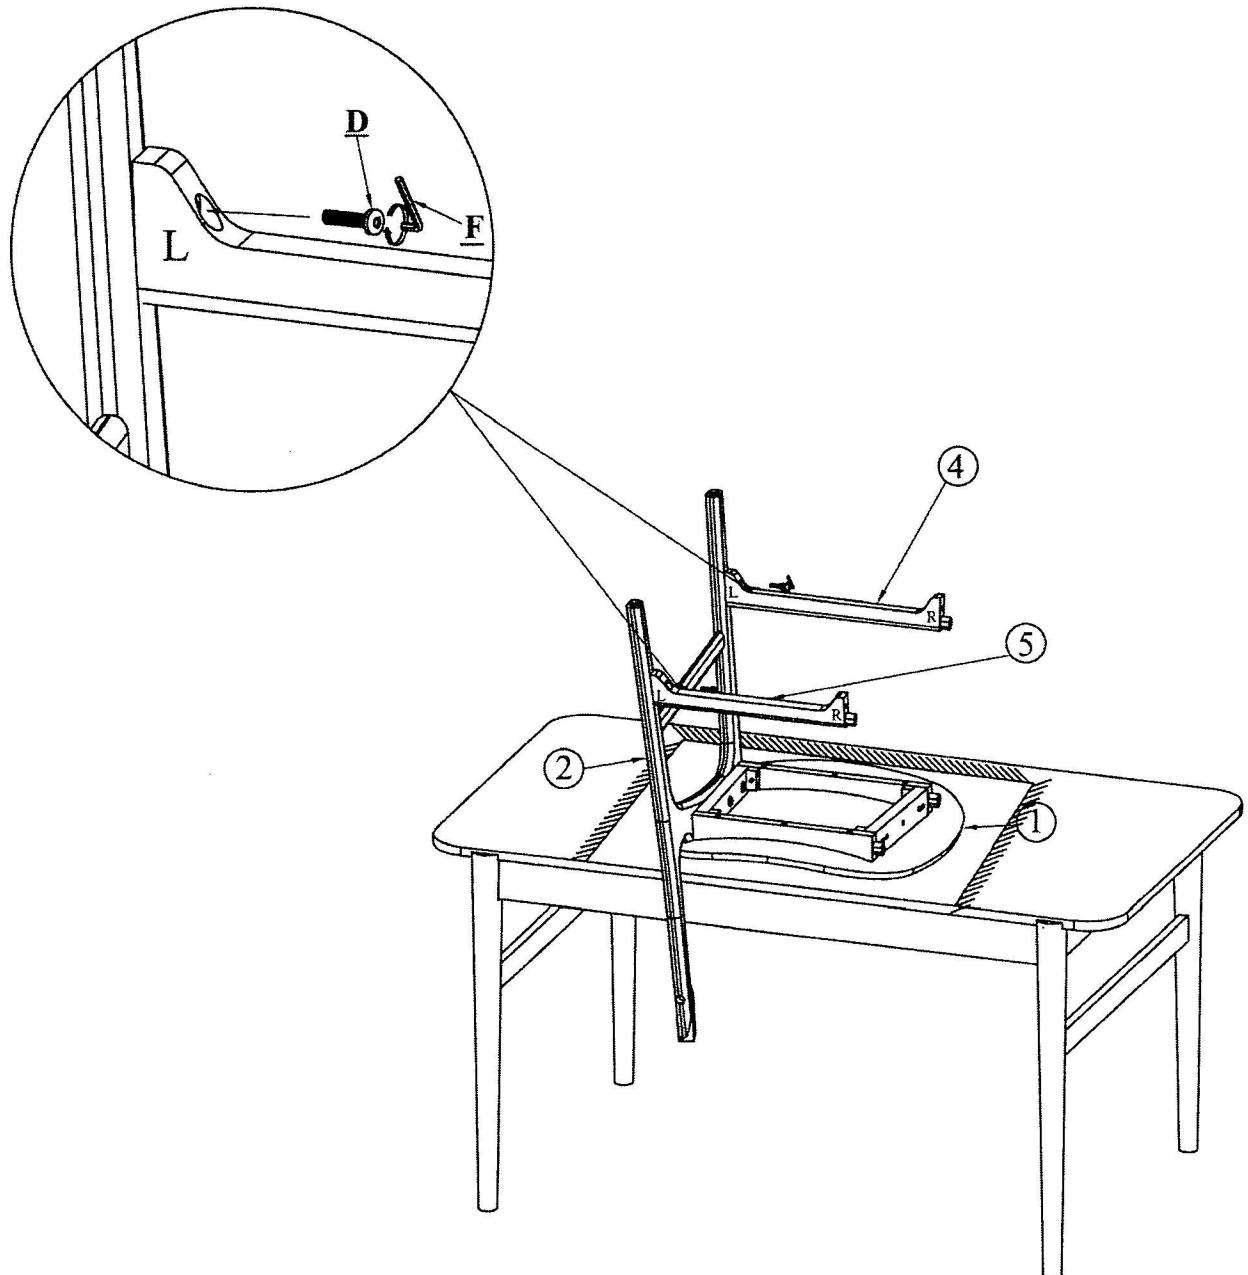

Hardware	Count
D	2
F	1

**⚠ LEAVE BOLTS LOOSE.
DO NOT TIGHTEN COMPLETELY AT THIS TIME.**

04

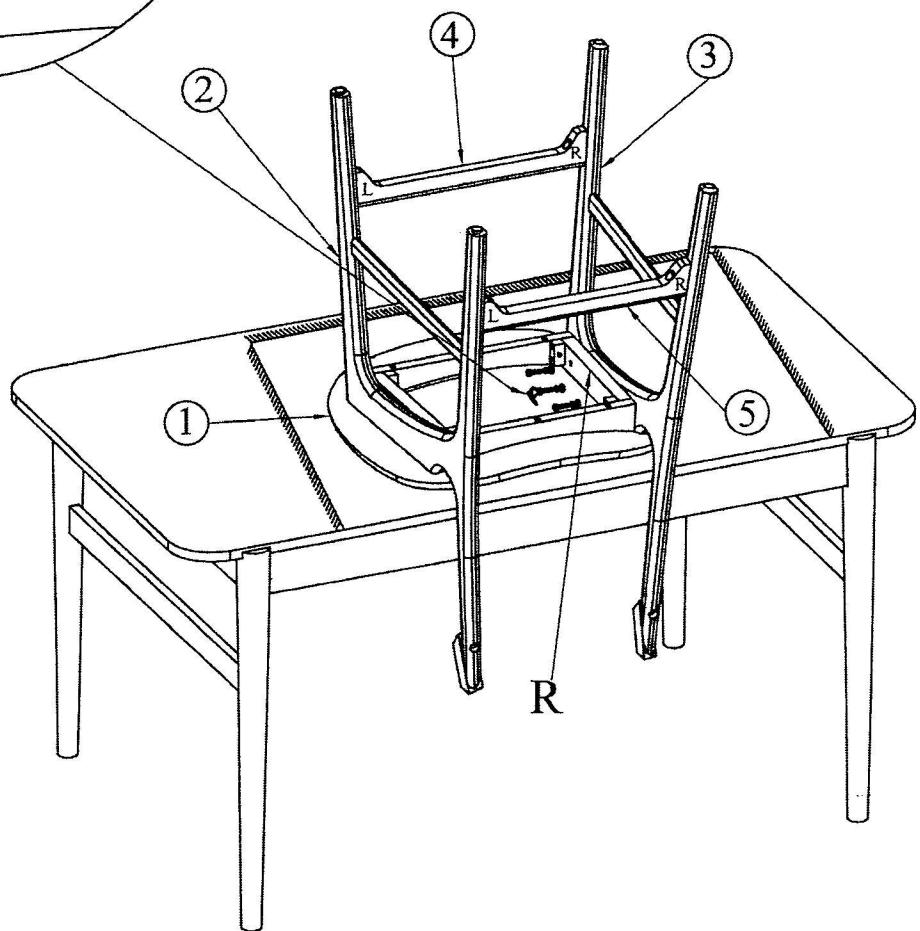
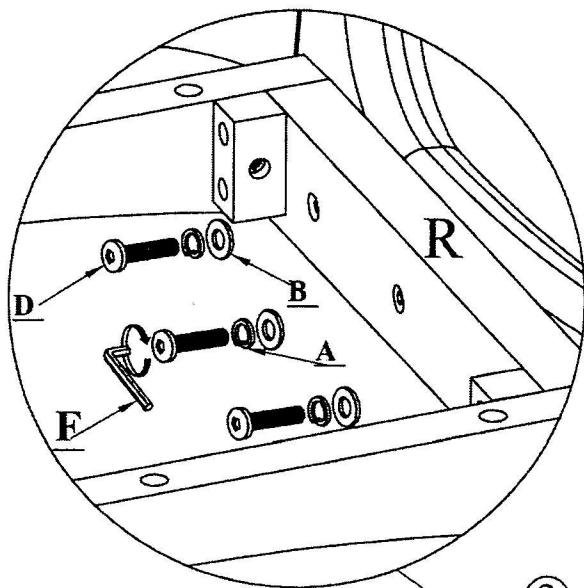


Hardware	Count
A	3
B	3
D	3
F	1



**LEAVE BOLTS LOOSE.
DO NOT TIGHTEN COMPLETELY AT THIS TIME.**


05

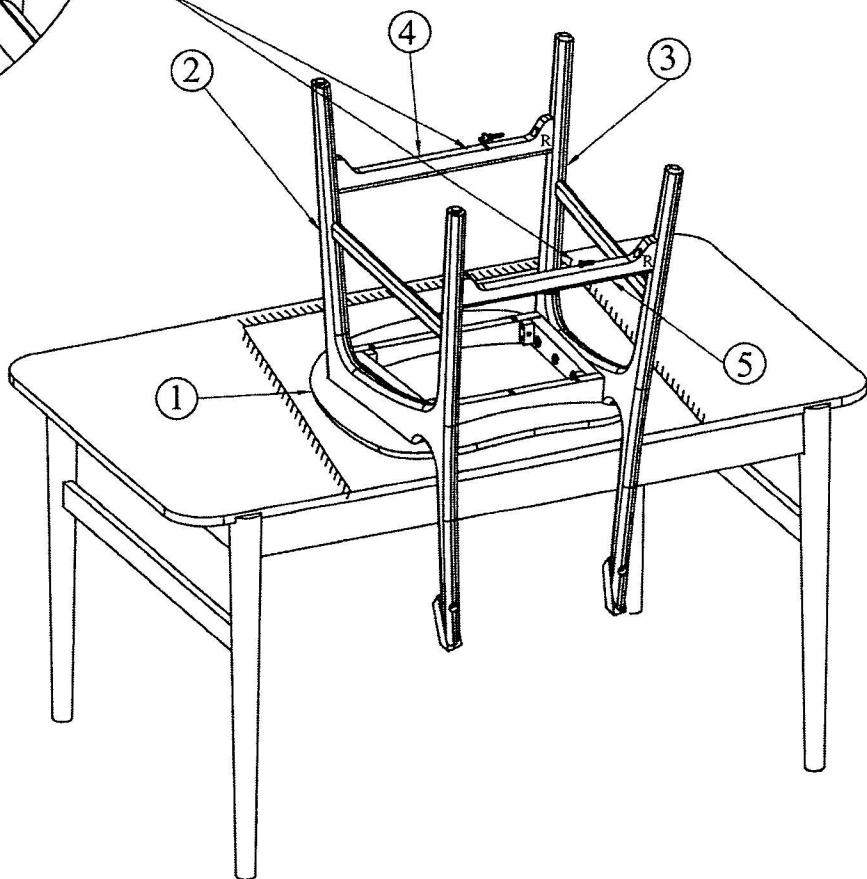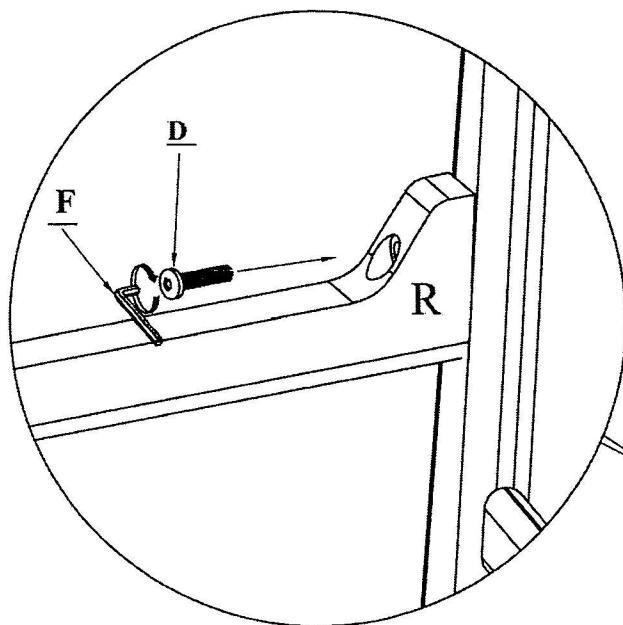

Hardware	Count
D	2
F	1




**LEAVE BOLTS LOOSE.
DO NOT TIGHTEN COMPLETELY AT THIS TIME.**

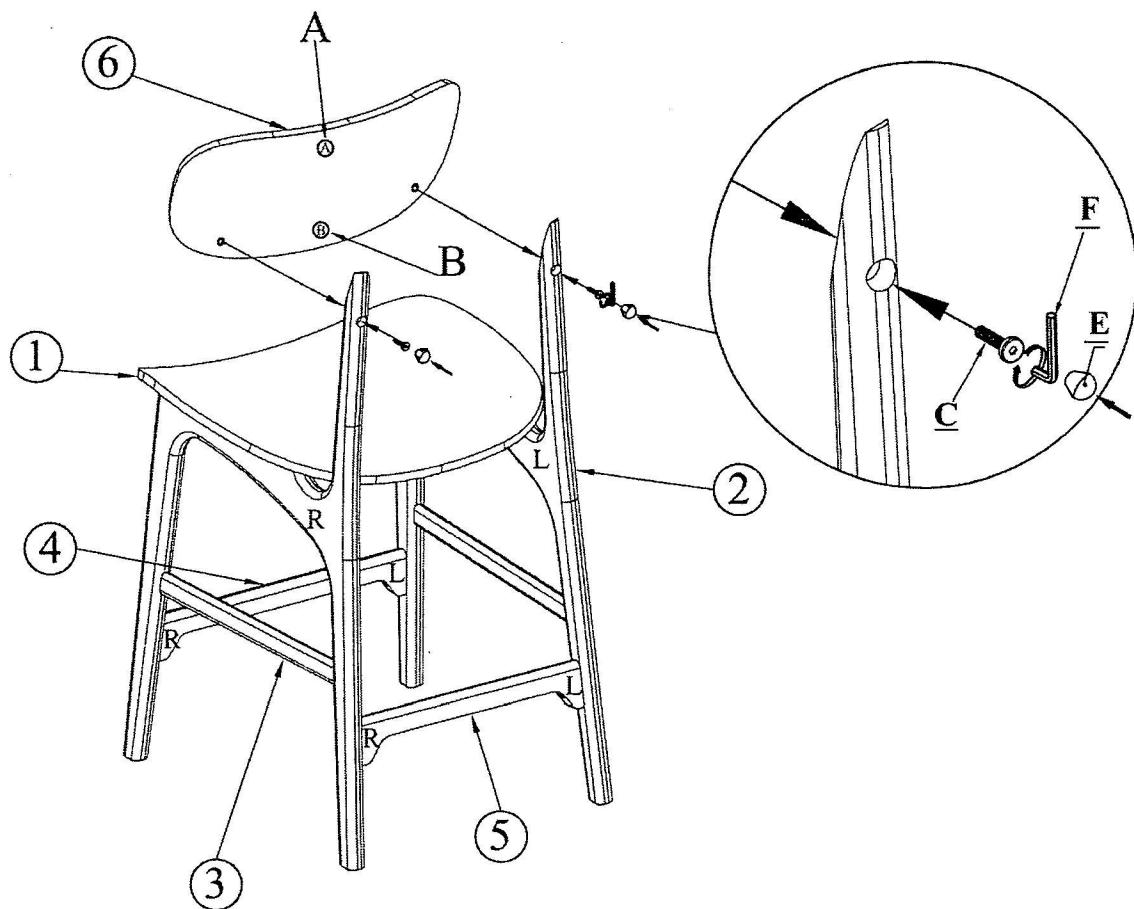


Hardware	Count
C	2
E	2
F	1

TIGHTEN BOLTS COMPLETELY.

07

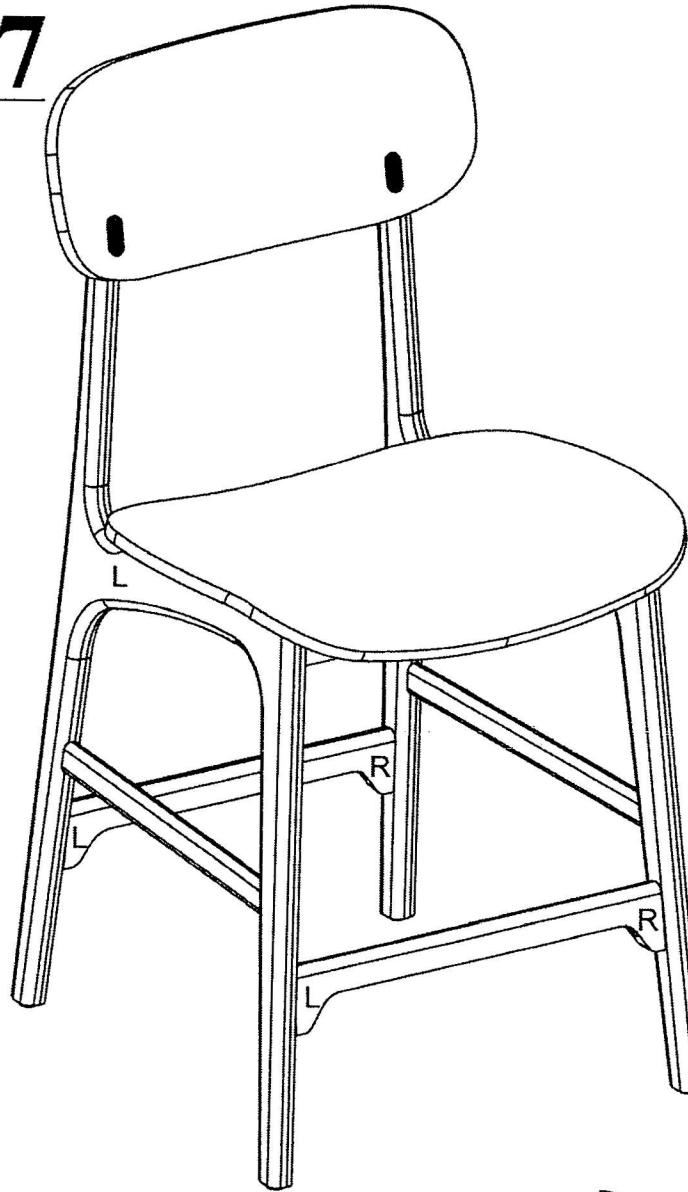

Weight Capacity

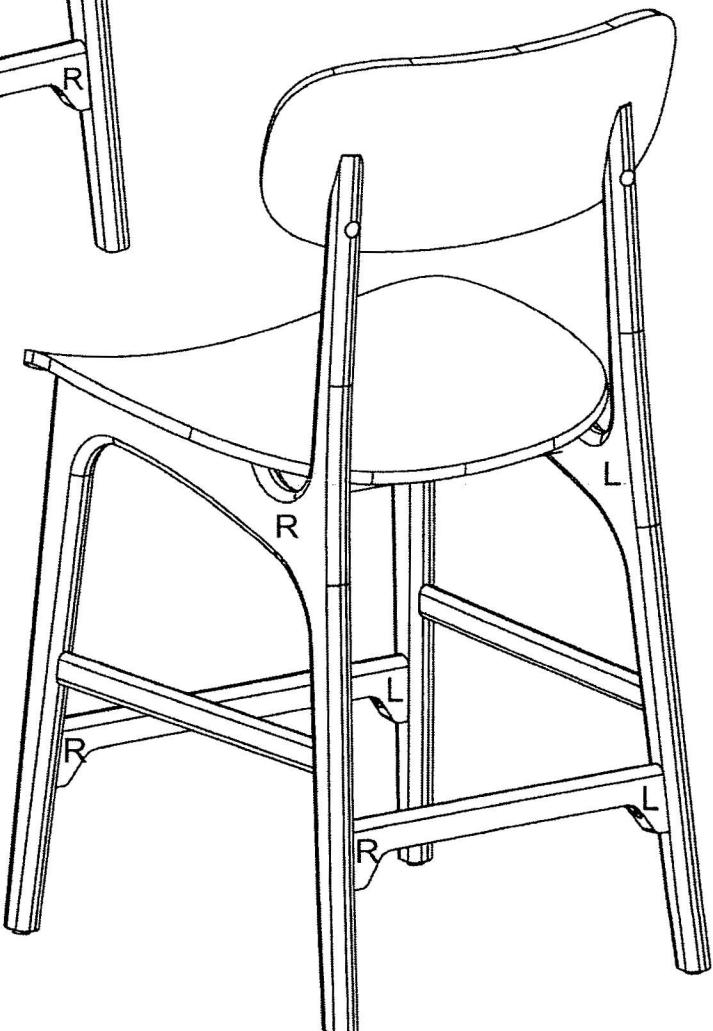

**TIGHTEN ALL BOLTS COMPLETELY FROM PREVIOUS STEPS.
ENSURE THAT ALL PARTS ARE TIGHT AND SECURE BEFORE USE.**