


Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU:10143,10144,10145 | PARLOR UPHOLSTERED BAR STOOL

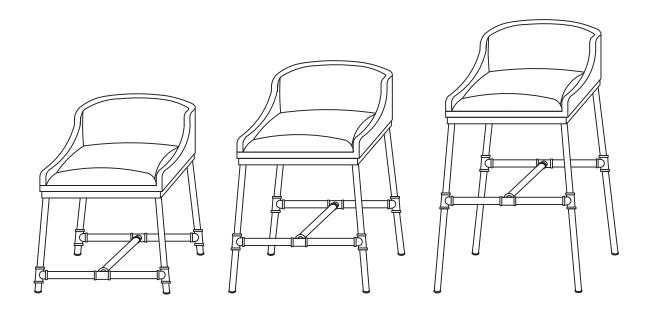



Have questions about assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300 877-267-2261



customerservice@ boraaamindustries.com





www.boraamindustries.com

Page 1 of 5




- Do not remove any stickers from parts until final assembly is complete!
- •Unpack and inspect all parts for missing items or damage prior to assembly.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.

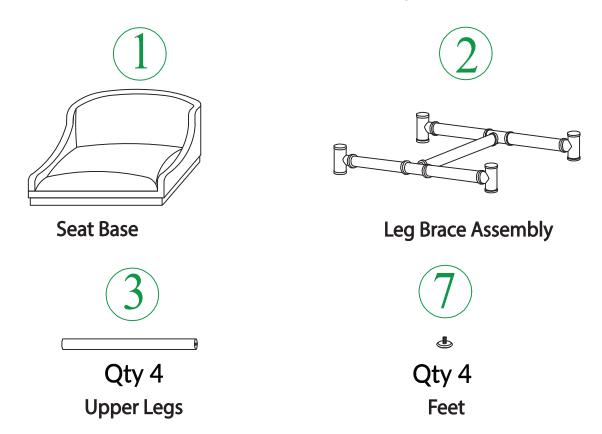

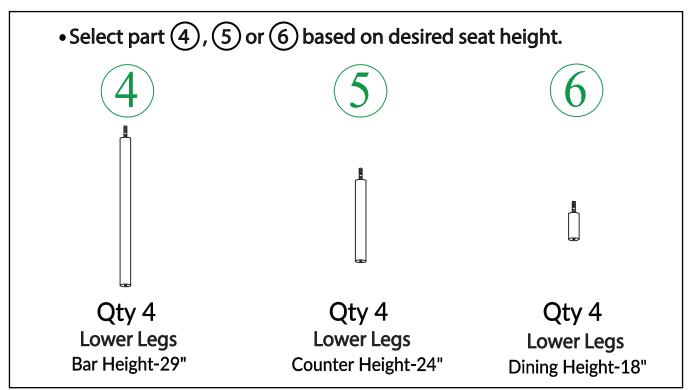


847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com

Step 1 - Locate upper legs 3 and seat base 1.

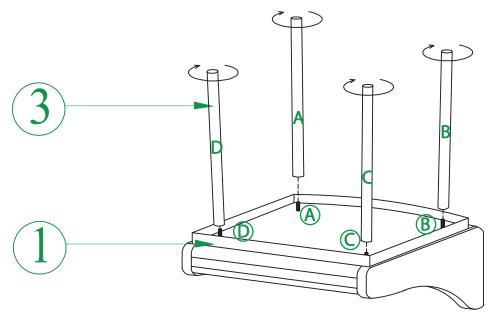

- Match letters on legs to letters on seat base to ensure correct installation location of legs.
- Loosely install legs by screwing into seat.

Step 2 - Locate leg brace assembly 2.

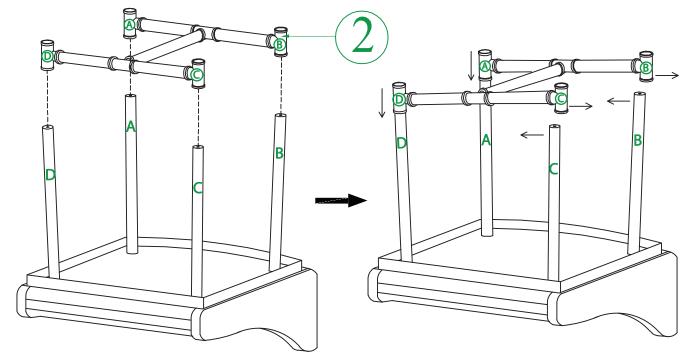


- Note letters on corners of leg brace assembly.
- Insert legs into leg brace assembly, taking care to match letters on legs to correspond letters on leg brace.
- Do not tighten legs completely.

847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com





Before proceeding with assembly, choose lower legs (4), (5) or (6) based on desired seat height.

- Step 3a Insert lower legs into leg brace assembly 2.
 - Loosely screw lower legs into upper legs.
 Do not tighten completely.

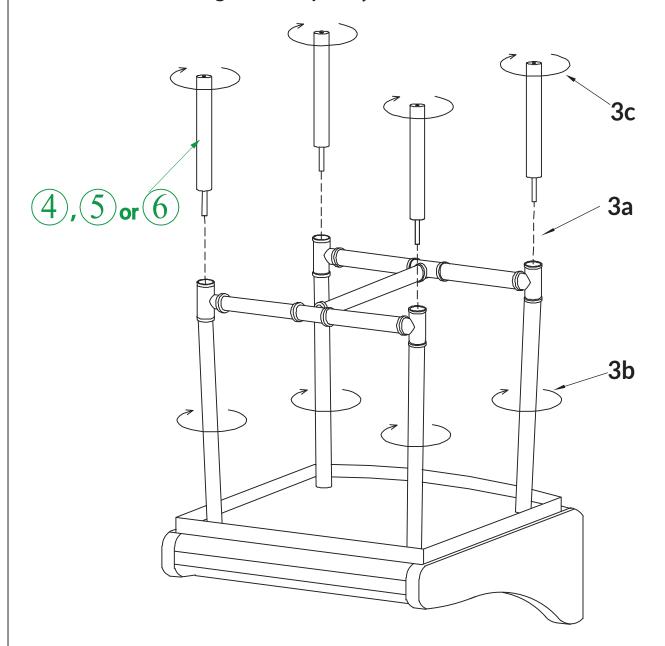

- 3b Fully secure upper legs against seat base by alternately tightening each leg a few turns at a time. Repeat tightening until all upper legs are fully tightened.
- 3c Fully tighten lower legs into leg brace and upper legs.

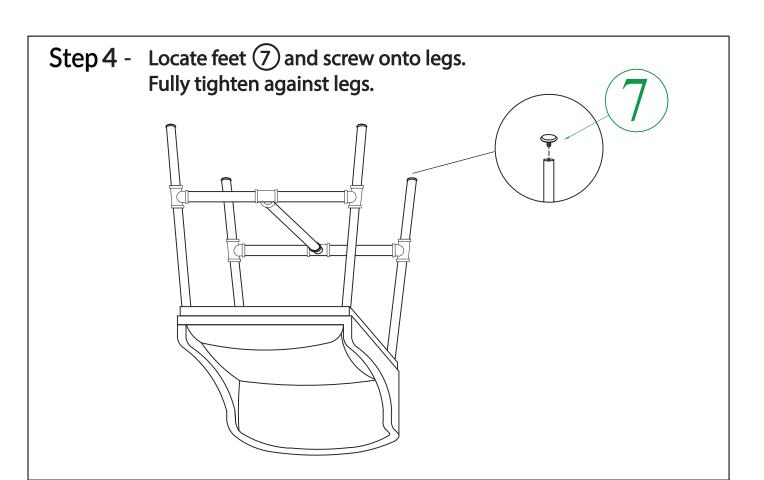

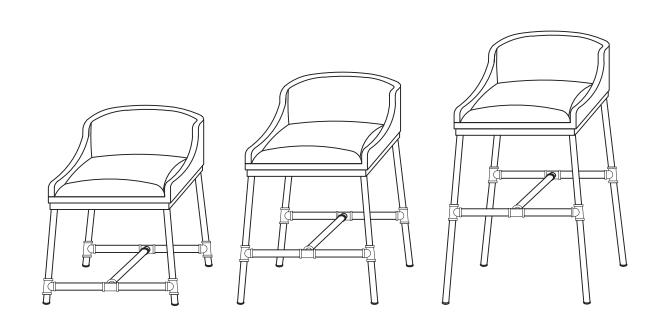

CHECK AND TIGHTEN ALL PARTS PRIOR TO USE.
PERIODICALLY INSPECT AND RE-TIGHTEN ALL PARTS AS NECESSARY.

847-949-6300 | 877-267-2261 | customerservice@boraamindustries.com