




Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 22031,21031 | BLOOMINGTON DINING CHAIR

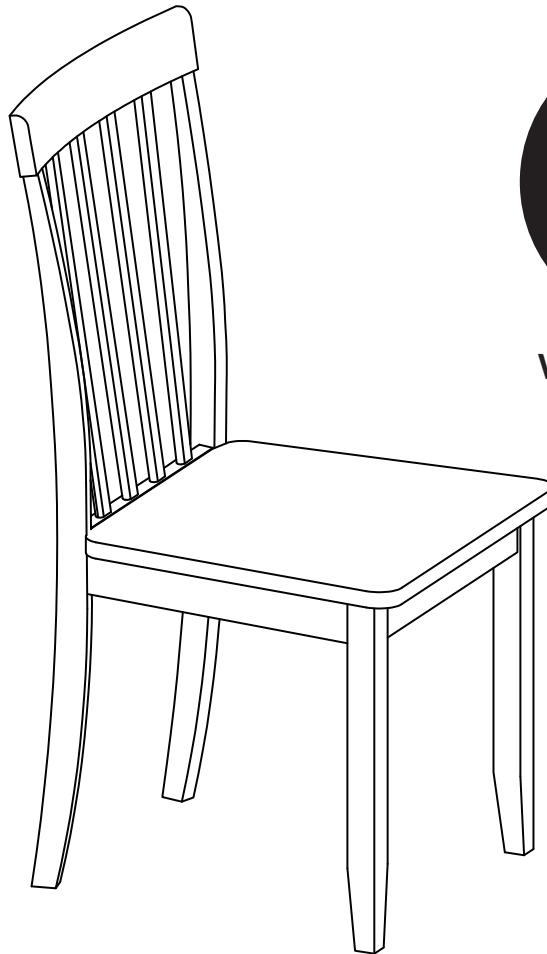

Weight Capacity



Locate the
HARDWARE PACK
which is attached to
the shipping carton
with red tape.

07/2024



Have questions about
assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com







www.boraamindustries.com

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.






Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

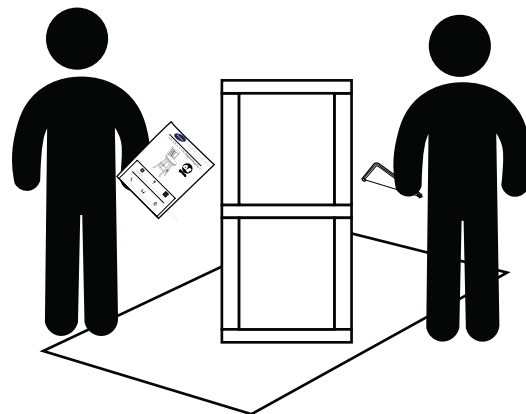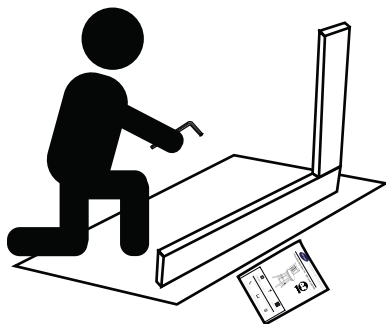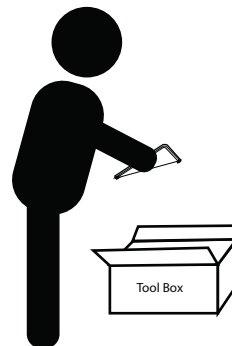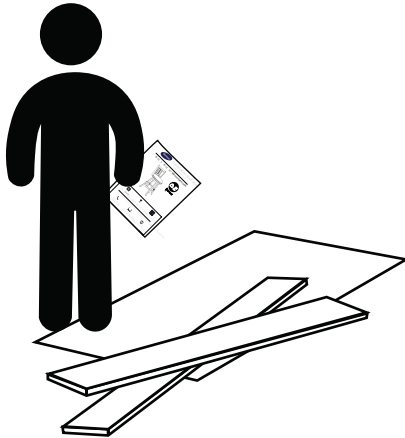


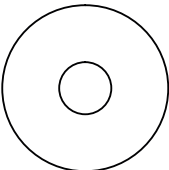




Assembly Overview

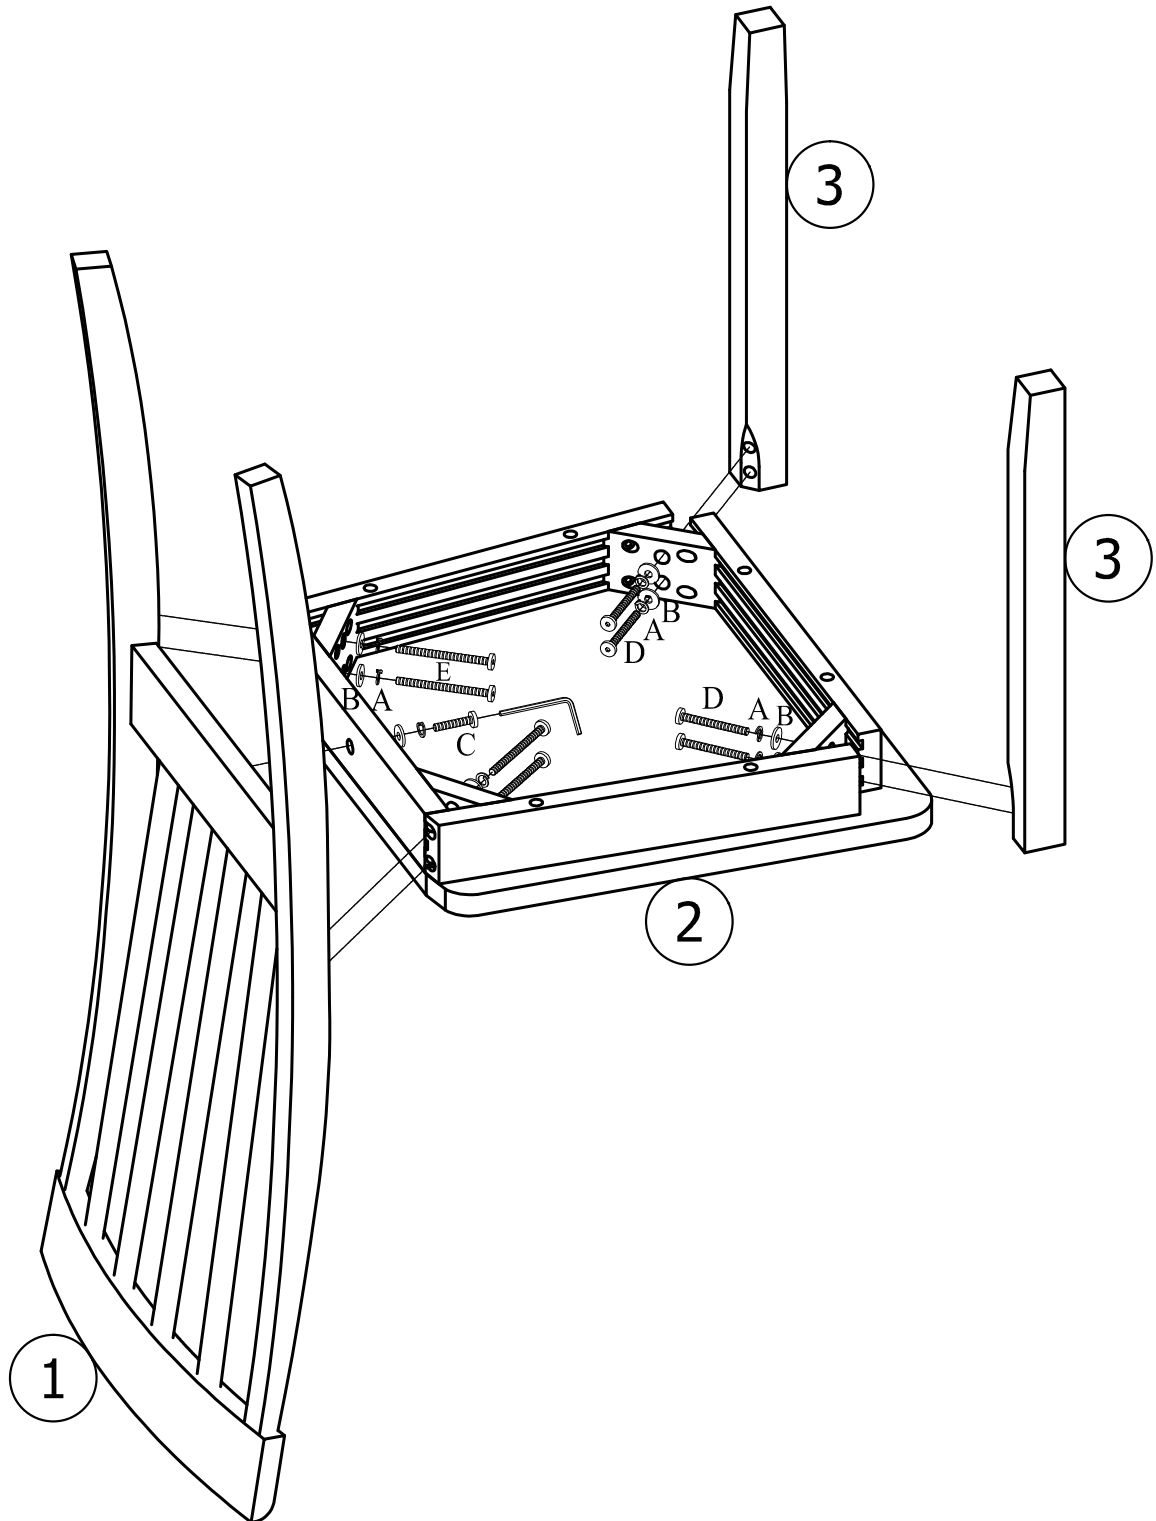


PARTS
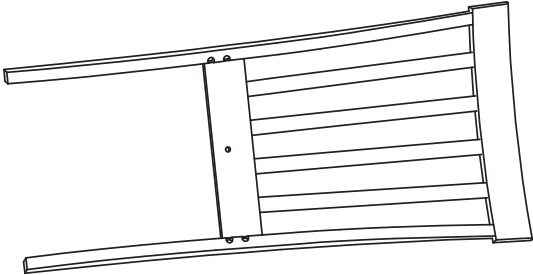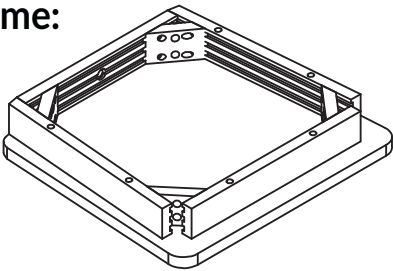
| | |
|---|--|
| <div>① (x1)</div> <div>Chair Back:</div>  | |
| <div>② (x1)</div> <div>Seat Frame:</div>  | <div>③ (x2)</div> <div>Leg:</div>  |

HARDWARE

| Ⓐ (x9) | Ⓑ (x9) | Ⓒ (x1) | Ⓓ (x4) | Ⓔ (x4) | Ⓕ (x1) |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| Spring Washer | Flat Washer | Bolt M6x35 | Bolt M6x60 | Bolt M6x80 | Allen Wrench |


01

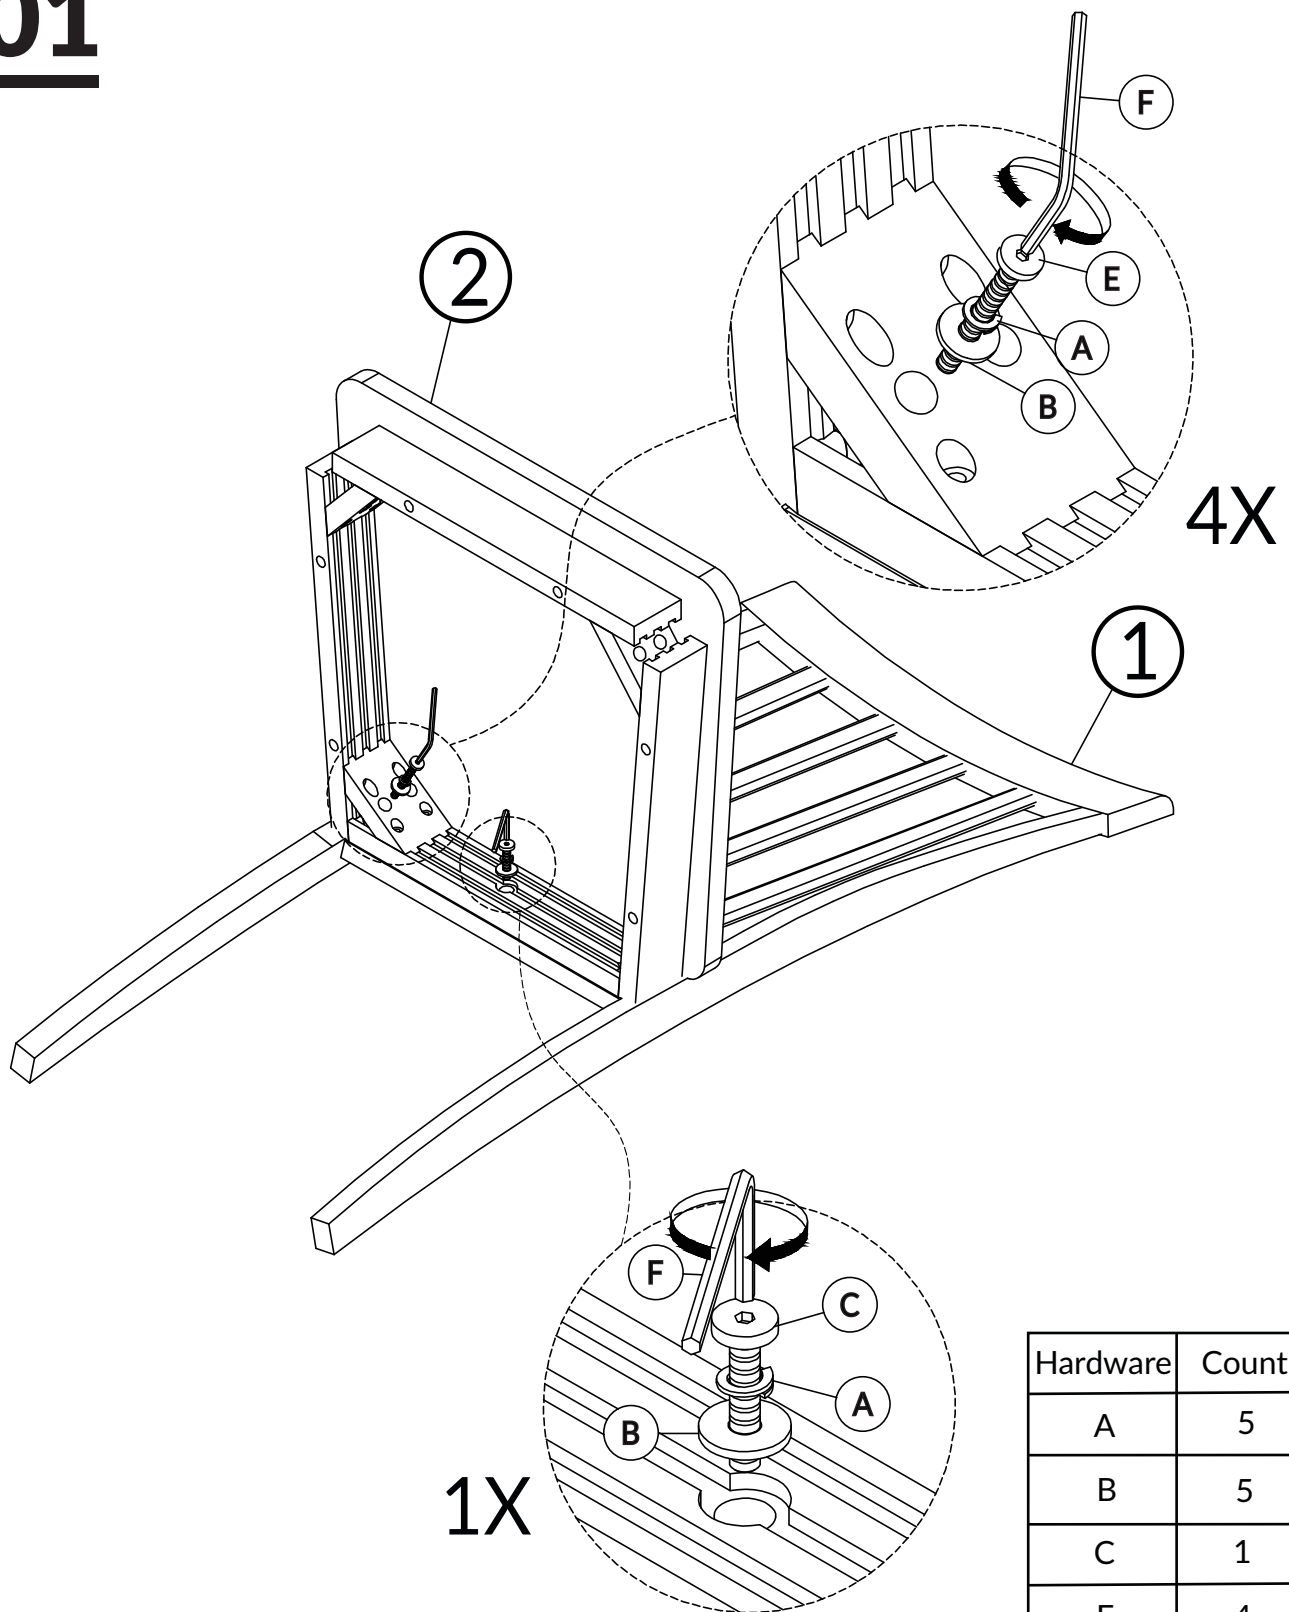

| Hardware | Count |
|----------|-------|
| A | 5 |
| B | 5 |
| C | 1 |
| E | 4 |
| F | 1 |


TIGHTEN BOLT COMPLETELY.

02

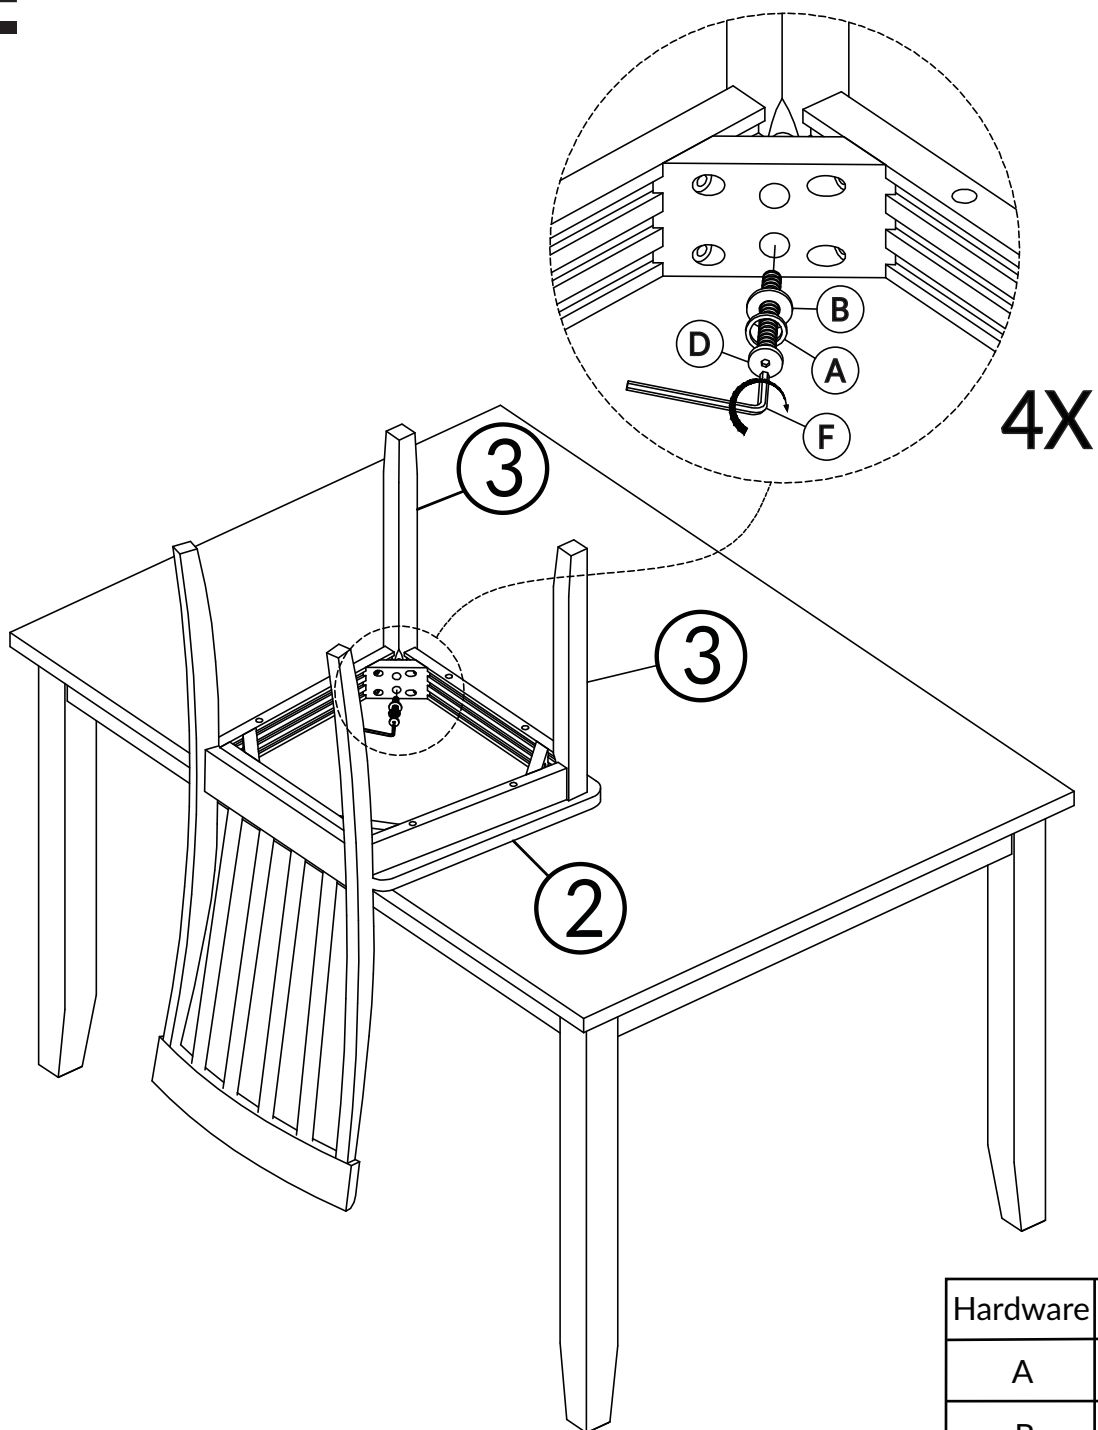

| Hardware | Count |
|----------|-------|
| A | 4 |
| B | 4 |
| D | 4 |
| F | 1 |

TIGHTEN BOLT COMPLETELY.

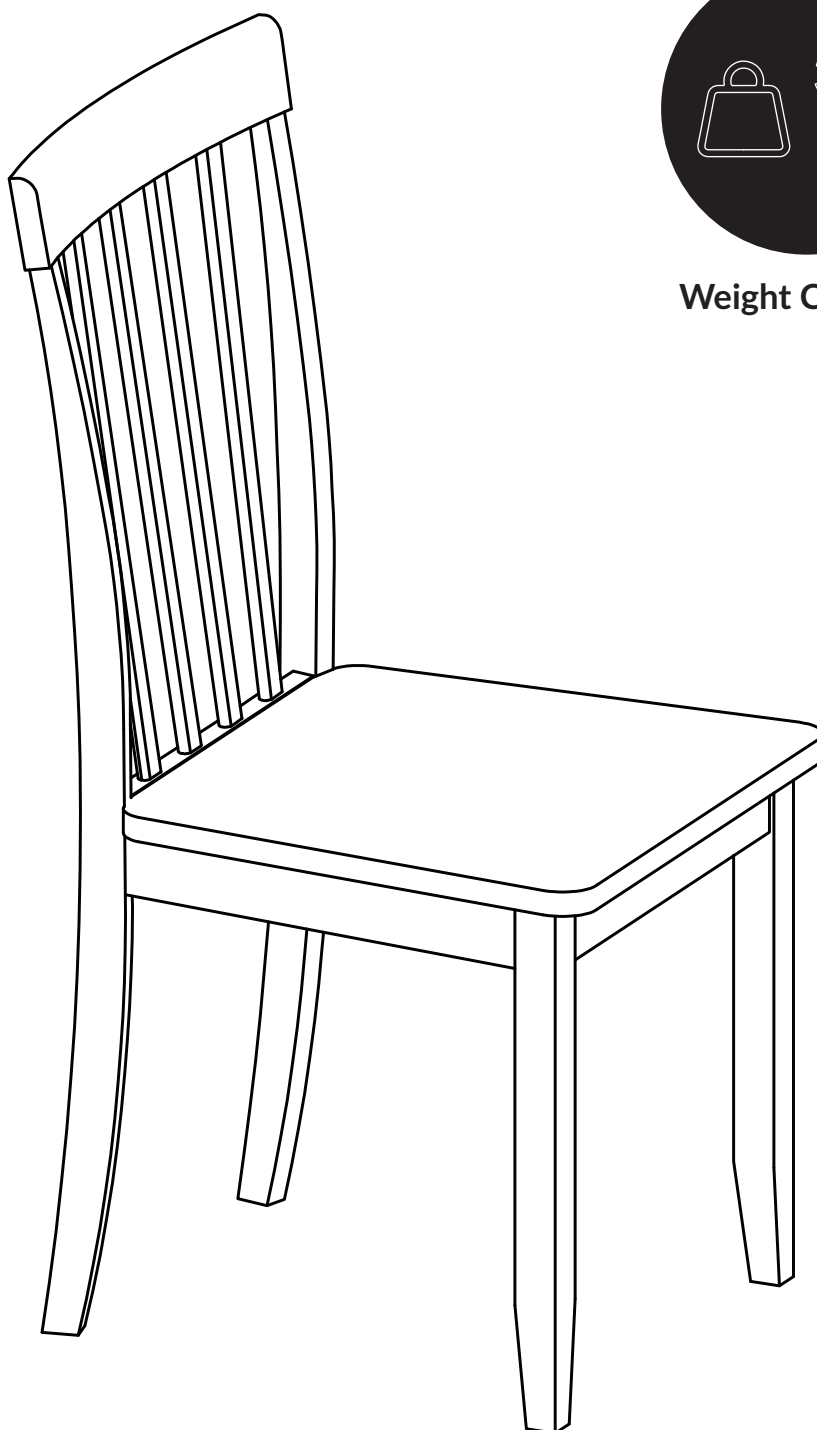

Weight Capacity

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.