




Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 71036 | BOULDER TABLE

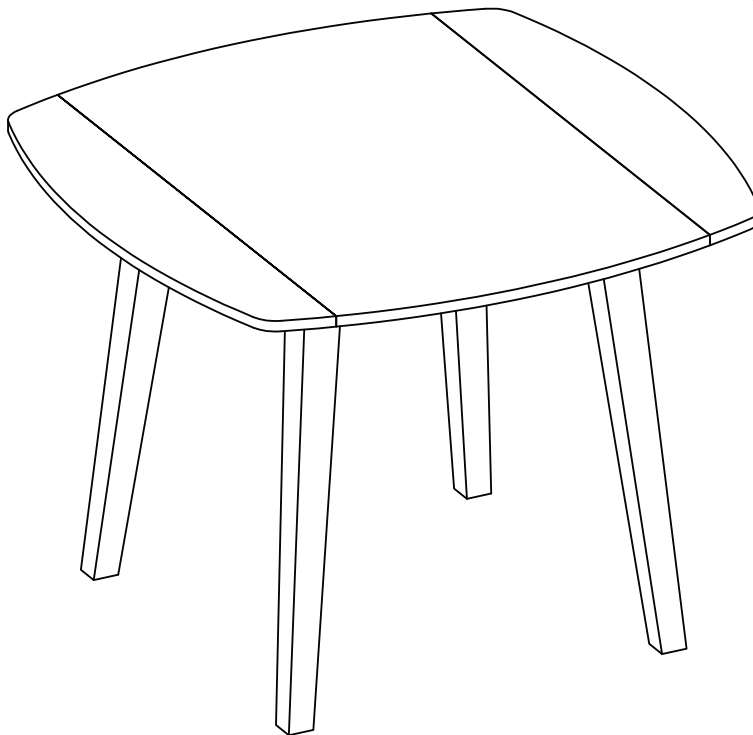

Weight Capacity



Locate the **HARDWARE PACK** which is attached to the shipping carton with red tape.

01/2024



Have questions about assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com







www.boraamindustries.com

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.




Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

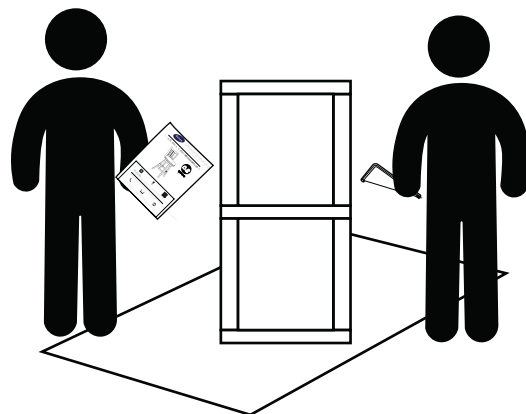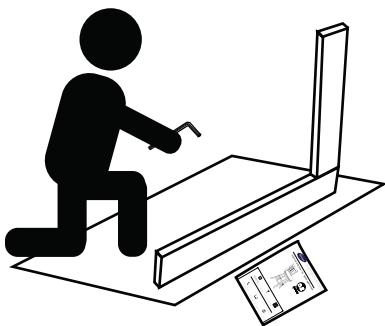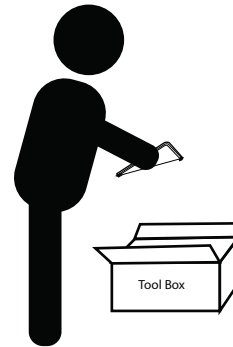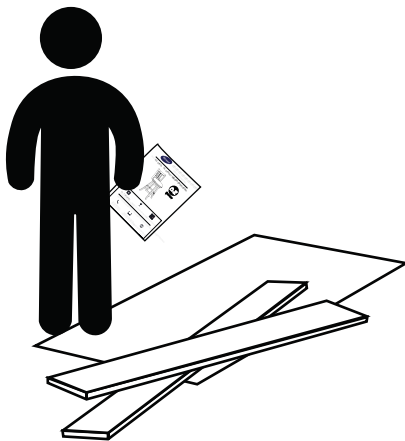





Assembly Overview

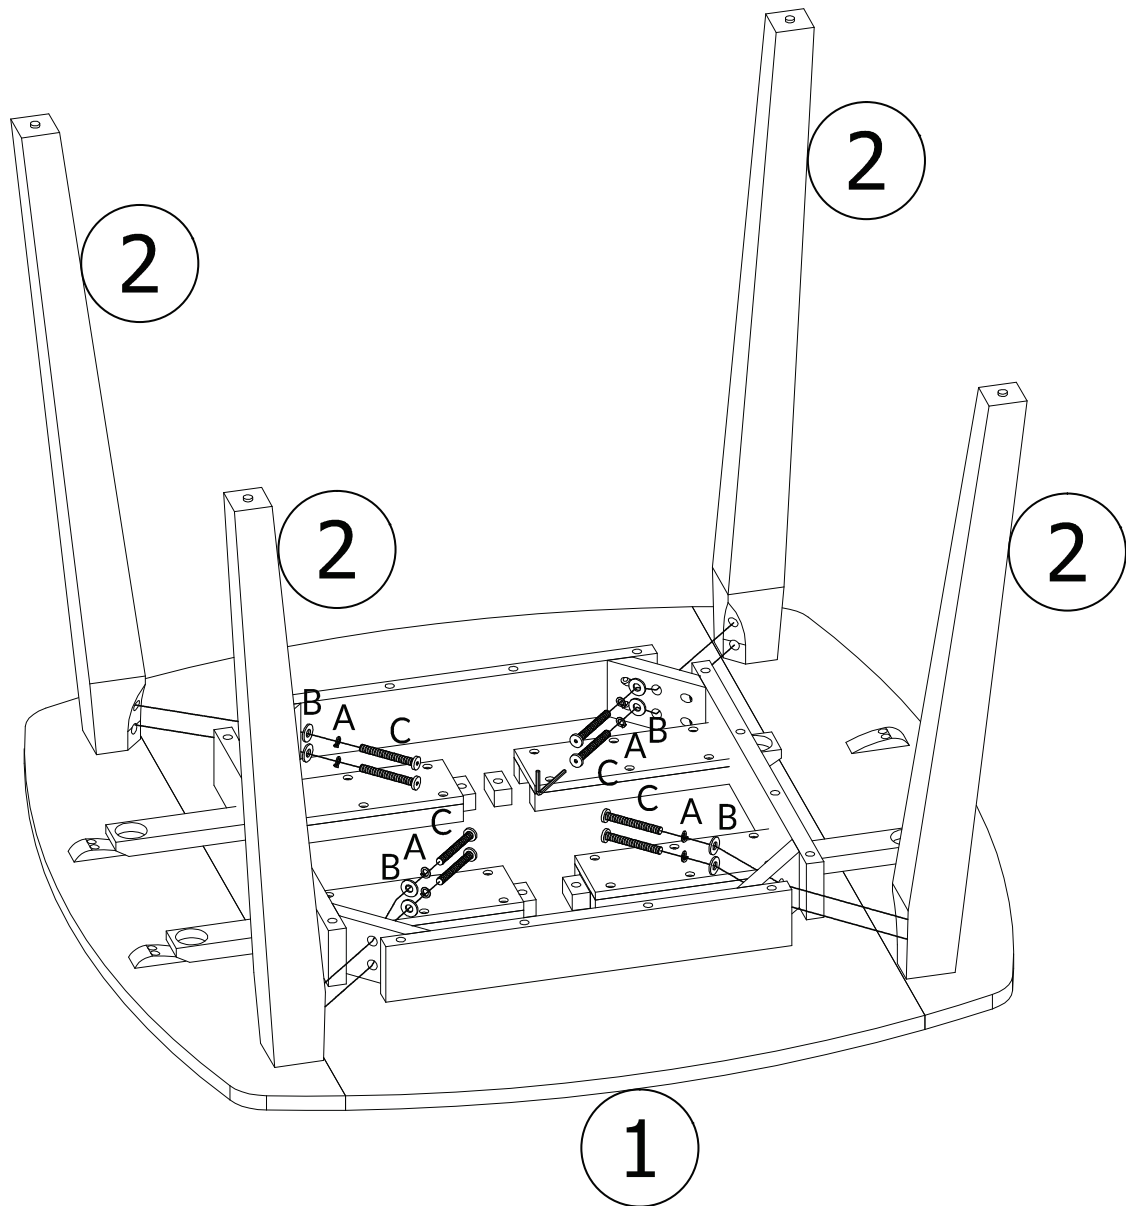


PARTS

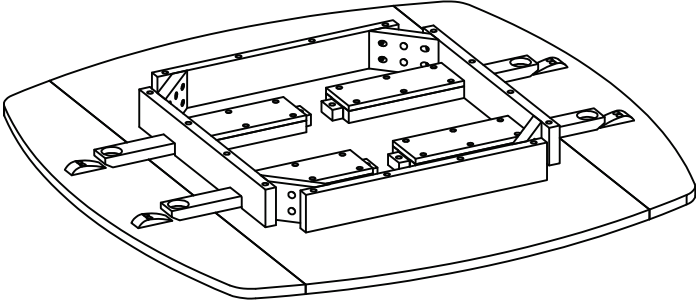① (x1)	
Top Panel:	
② (x4)	
Leg:	

HARDWARE

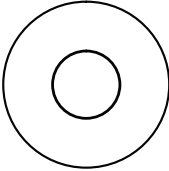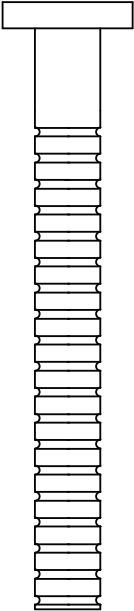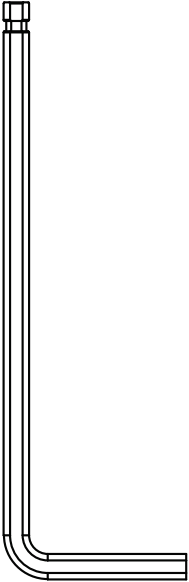Ⓐ (x8)	Ⓑ (x8)	Ⓒ (x8)	Ⓓ (x1)
			
Spring Washer	Flat Washer	Bolt M8x70	Allen Wrench

01

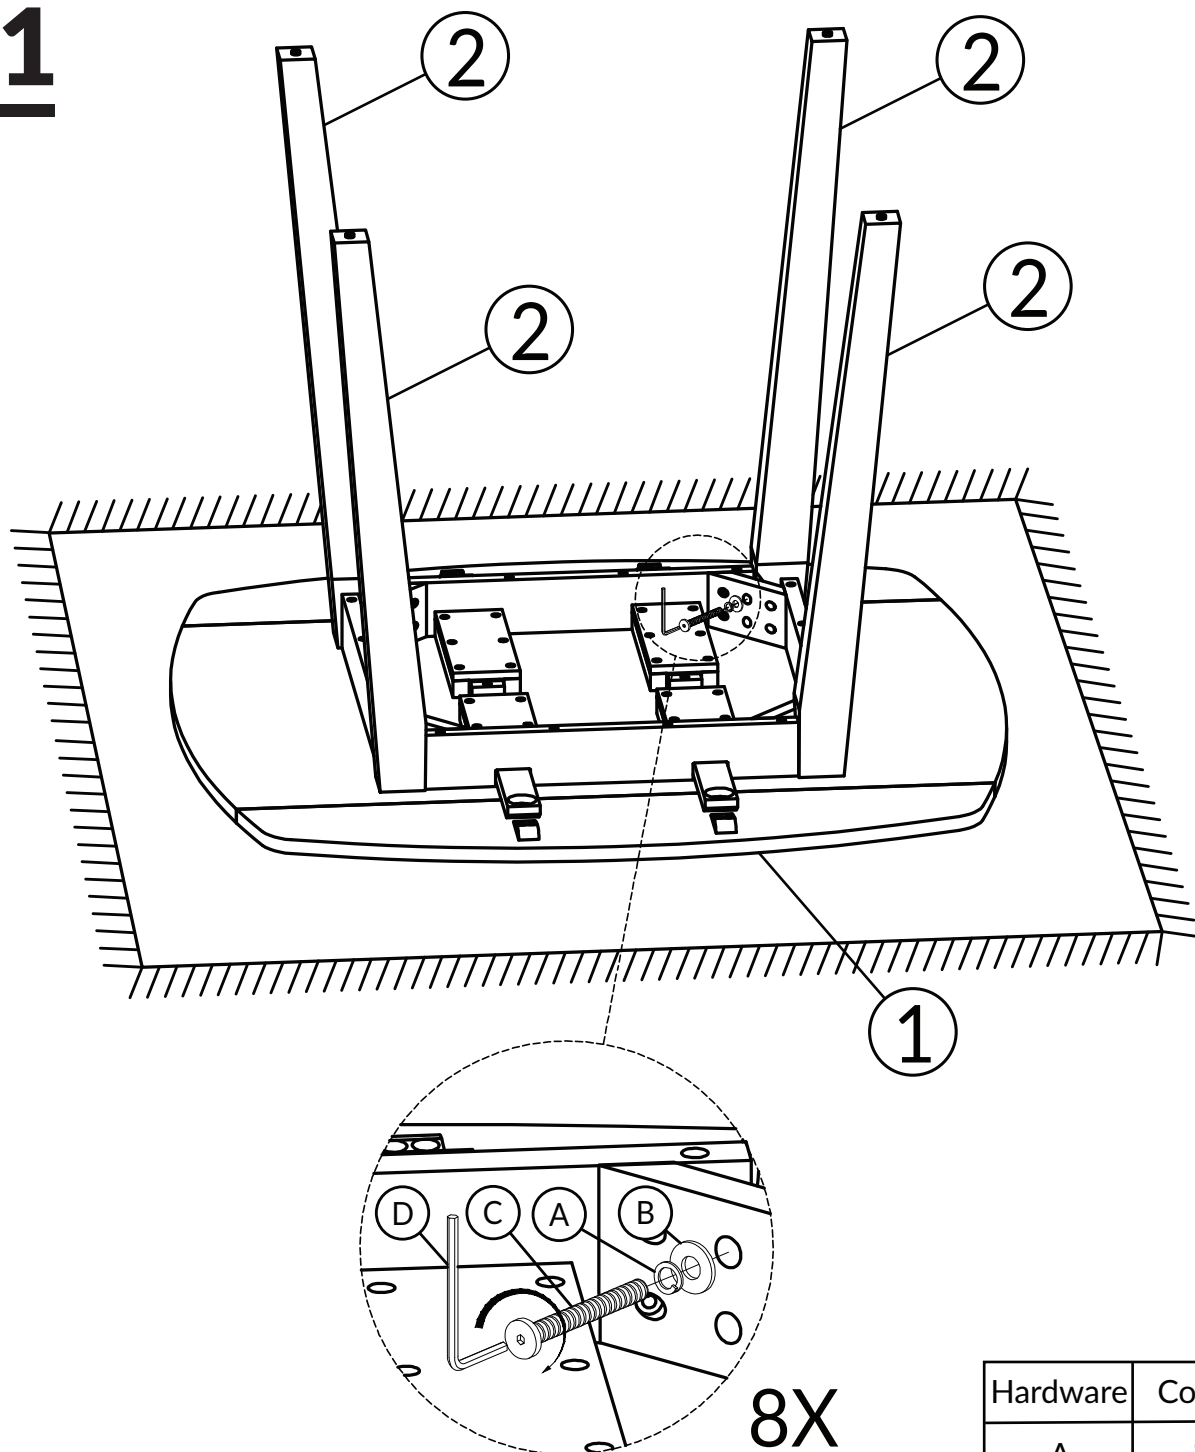

Hardware	Count
A	8
B	8
C	8
D	1

TIGHTEN BOLT COMPLETELY.



Weight Capacity




BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.



Boraam Industries

ASSEMBLY INSTRUCTIONS

SKU: 71026 | BOULDER DINING CHAIR

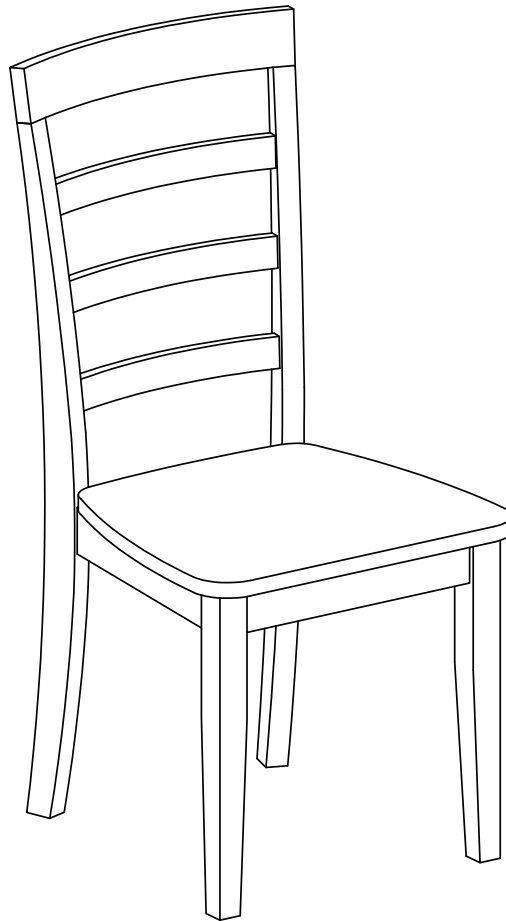

Weight Capacity



Locate the **HARDWARE PACK** which is attached to the shipping carton with red tape.

01/2024



Have questions about assembling your item?



Items or parts damaged?



Missing a part?

We're here to help! (Monday-Friday from 9am-5pm CST)



847-949-6300
877-267-2261



customerservice@
boraamindustries.com







www.boraamindustries.com

Assembly And Care


- All tools required for assembly are included unless noted.
- Prior to assembly, check for missing or damaged parts.
- Do not dispose of packing materials until assembly is completed.
- Assemble item on a soft, clean surface to prevent damage to the item.





Locate the
HARDWARE PACK
which is attached to the
shipping carton with red
tape.

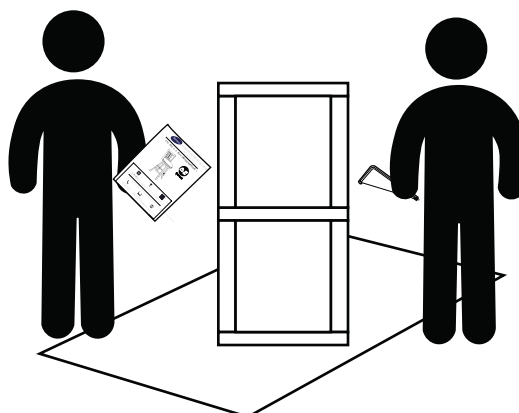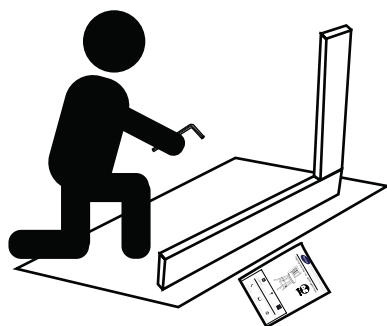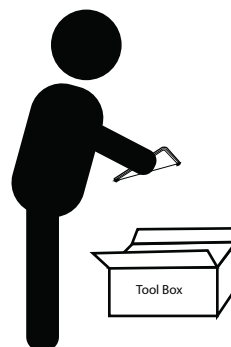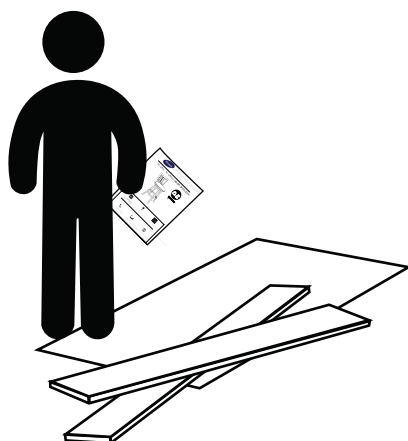





Assembly Overview

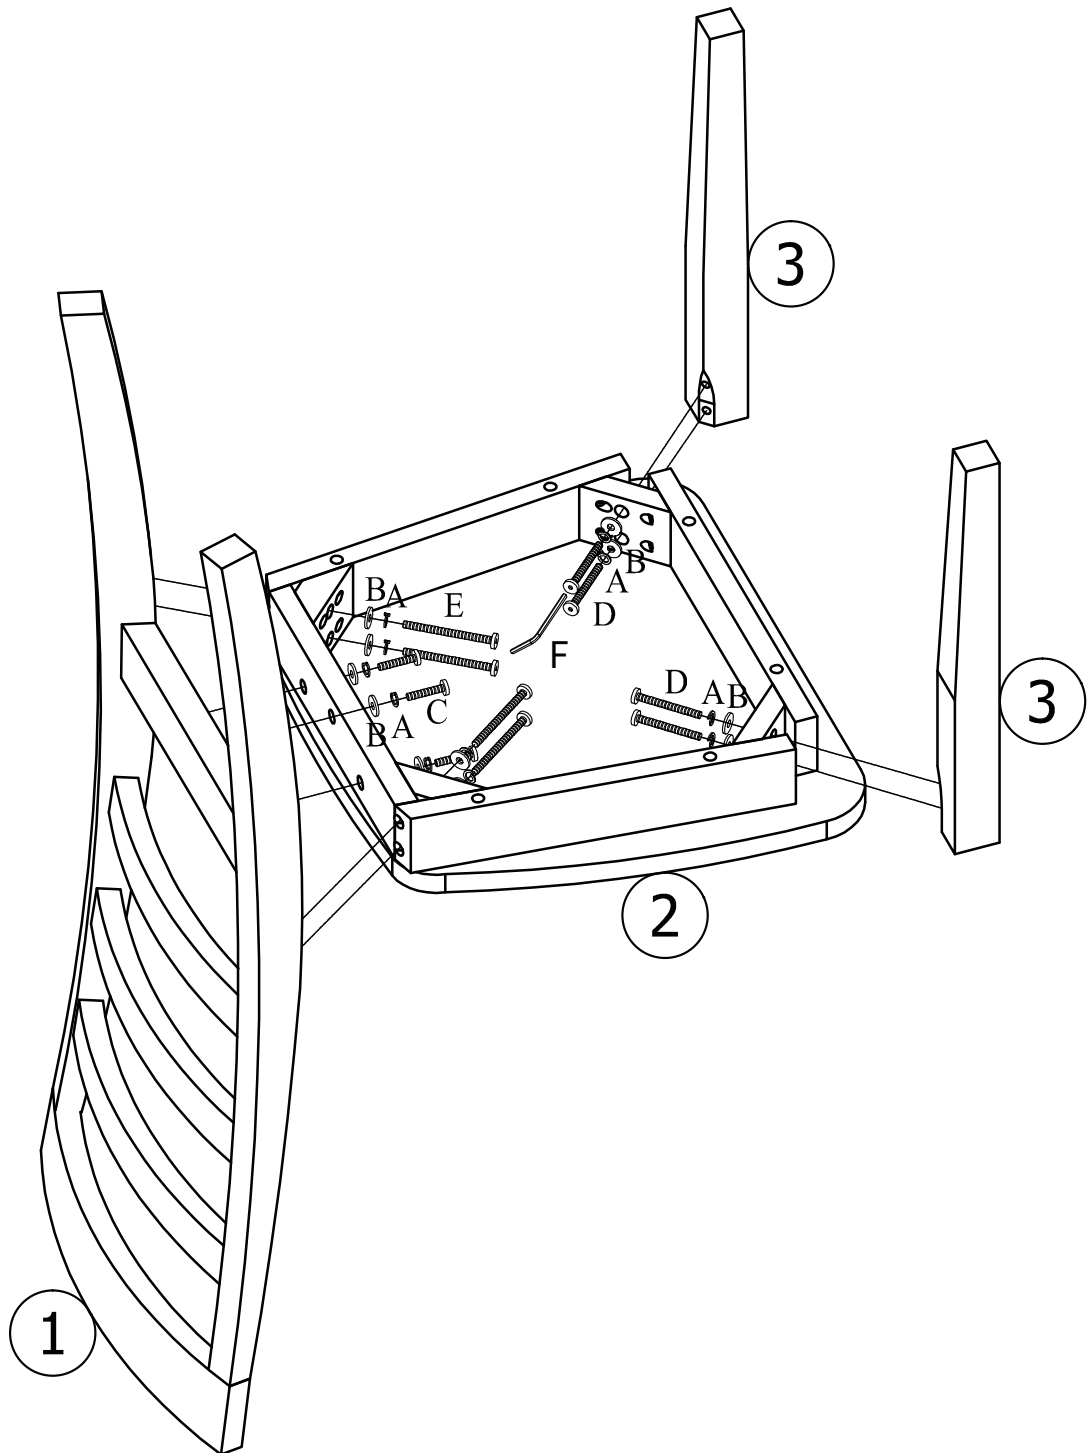


PARTS

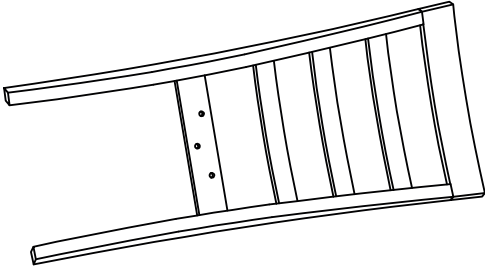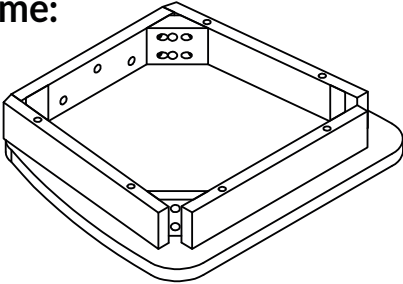① (x1) Chair Back: 	
② (x1) Seat Frame: 	③ (x2) Leg: 

HARDWARE

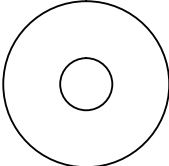① (x11)	② (x11)	③ (x3)	④ (x4)	⑤ (x4)	⑥ (x1)
					
Spring Washer	Flat Washer	Bolt M6x40	Bolt M6x60	Bolt M6x80	Allen Wrench


01

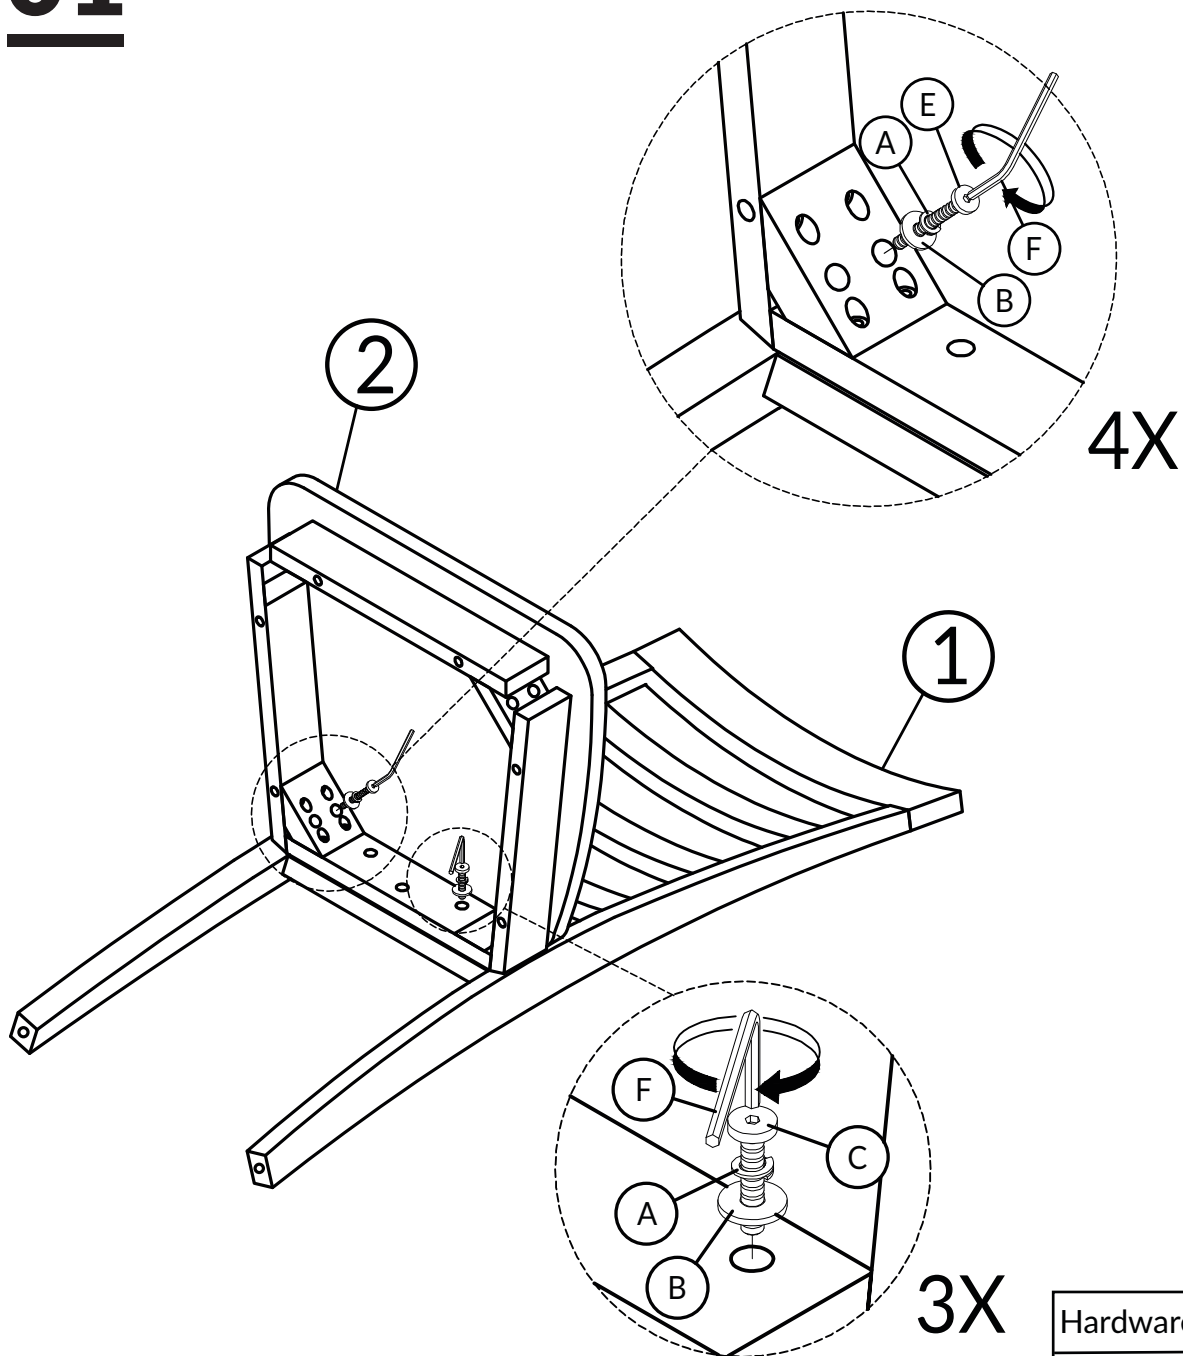

Hardware	Count
A	7
B	7
C	3
E	4
F	1


TIGHTEN BOLT COMPLETELY.

02

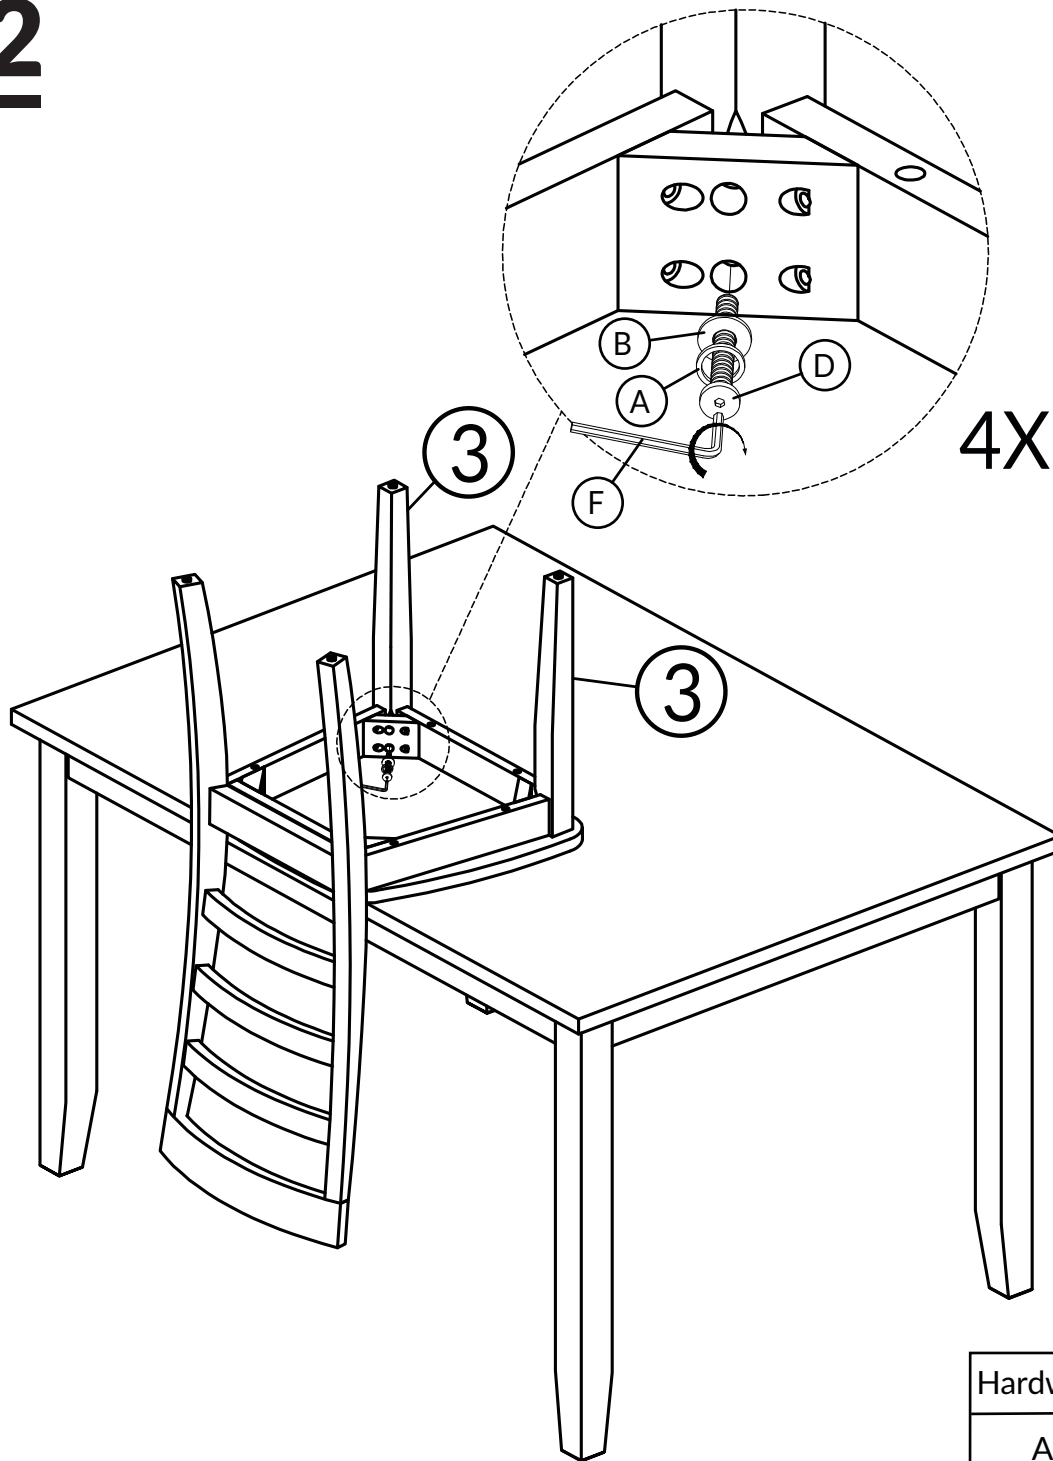

Hardware	Count
A	4
B	4
D	4
F	1

TIGHTEN BOLT COMPLETELY.

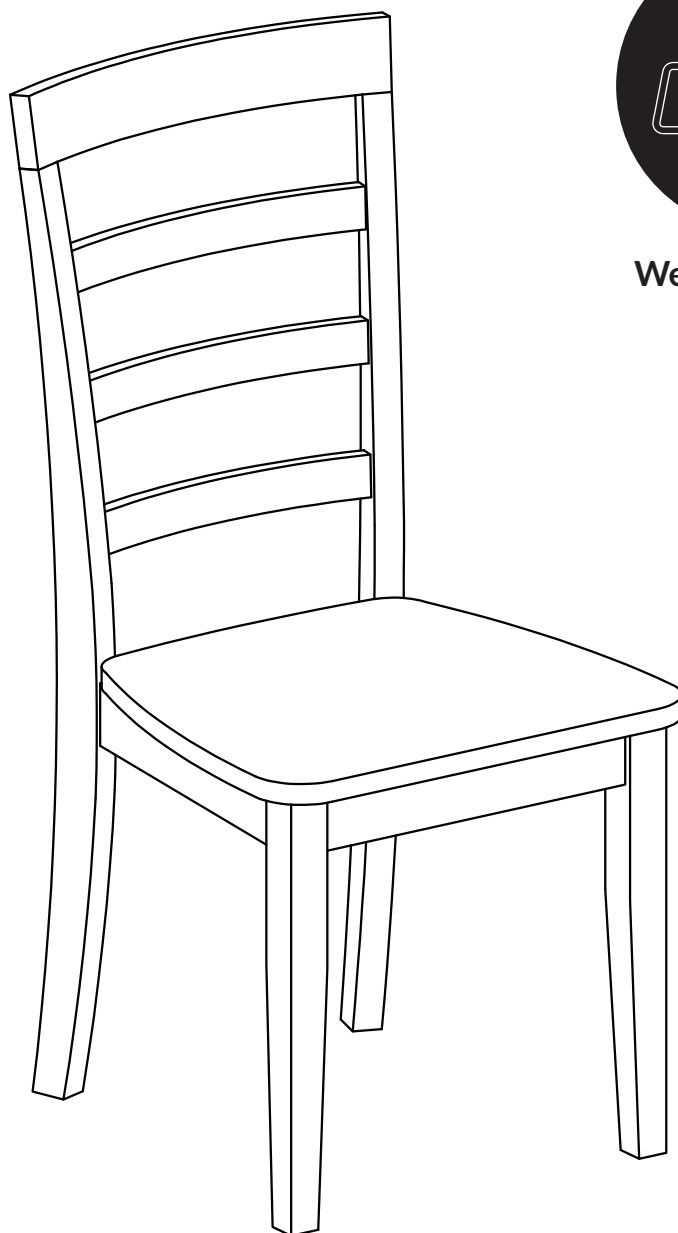

Weight Capacity

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR TO USE.